

METCALF CRANE SERVICES PTY LTD

PRIME MOVER - INSPECTION & SERVICE REPORT

JOB NUMBER:	H21-10	UNIT NUMBER:	UH21	DATE:	18.05.2026
TRUCK MODEL:	Kenworth T610 SAR	REGISTRATION NUMBER:	XV29TW	KM'S:	272,967km
HOURS:					

***NOTE: MAKE SURE THAT HOURS AND KILOMETRES ARE RECORDED – MAKE SURE A SERVICE STICKER IS FITTED**

SERVICE	DONE	OK	N/A	INITIAL	CHECK FAULT – COMMENTS – PLEASE NOTE ALL FINDINGS
TEST DRIVE					
Drain air pressure, check build up	☐	☒	☐		
Check park brake operation	☐	☒	☐		
Check braking operation	☐	☒	☐		
Check transmission operation	☐	☒	☐		
ELECTRICAL					
Operation of all lights	☐	☒	☐		
Check all warning systems:- horns	☐	☒	☐		
Check all warning systems:- flashing lights	☐	☒	☐		
Check all switch functions	☐	☒	☐		
Check wiper/washer operation & condition	☒	☒	☐		
Check air conditioning operation	☐	☒	☐		
CAB & PANEL					
Ensure items in cab are secure	☐	☒	☐		
Condition of cab glass & interior	☐	☒	☐		
Condition of cab, panels & doors	☐	☒	☐		
Check seat belt condition & mounting	☐	☒	☐		
STEERING					
Check all linkages & ball joints	☐	☒	☐		
Check ball joint rubber condition	☐	☒	☐		
Check & report leaks	☐	☒	☐		

SERVICE	DONE	OK	N/A	INITIAL	CHECK FAULT – COMMENTS – PLEASE NOTE ALL FINDINGS
BRAKES					
Drain water from air tanks	☐	☒	☐		
Check condition & thickness of linings	☐	☒	☐		
WHEELS					
Check tyre condition & pressures	☐	☒	☐		
Check wheel nuts	☐	☒	☐		
PLEASE USE ISOLATION PROCEDURES & TAGS					
Change engine oil & fill to level	☒	☐	☐		Type & Litres: 50ltrs E900
Change oil filters	☒	☐	☐		Filter No: LF14000NN
Change fuel filters	☒	☐	☐		Filter No: FF5776
Change fuel pre filter	☐	☒	☐		Filter No:
Check & clean air filter outer	☐	☒	☐		Filter No:
Check & clean air filter inner	☐	☐	☒		Filter No:
Check coolant level	☐	☒	☐		
Check & report coolant leaks	☐	☒	☐		
Check & report oil or fuel leaks	☐	☒	☐		
Check condition of hose & secure clips	☐	☒	☐		
Check condition of mounts	☐	☒	☐		
Check exhaust system	☐	☒	☐		
Check battery levels, clean & lube terminals	☐	☒	☐		
Check washer bottle level	☐	☒	☐		
Check air intake system	☐	☒	☐		
TRANSMISSION ☐					
Check & report any oil leaks	☐	☒	☐		
DIFFERENTIAL, FINAL DRIVES & DRIVELINES					
Check & report oil leaks	☐	☒	☐		
Fill oil to level	☐	☒	☐		
Check wear & lubricate drive shafts	☐	☒	☐		
BRAKES					
Adjust all brakes	☐	☒	☐		
Change air dryer filter	☐	☐	☒		

GENERAL COMMENTS

TYRE PRESSURE	AXLE 1	AXLE 2	AXLE 3	AXLE 4
INNER	110Psi	110Psi	110Psi	
OUTER	110psi	110Psi	110Psi	

INSPECTED BY:	Phil Mifsud	QUALIFICATION:	Mechanic
SIGNATURE:	<i>P. Mifsud</i>	DATE:	18.05.2026

Certification by Responsible Person:

I certify that the described plant is to the manufacturers specifications and is being serviced and maintained by competent personnel to the manufacturer's recommendations

PRINT NAME:	Bill Duncan	POSITION:	Workshop Supervisor
SIGNATURE:	<i>William Duncan</i>	DATE:	18.05.2026

METCALF CRANE SERVICES PTY LTD

PRIME MOVER - INSPECTION & SERVICE REPORT

JOB NUMBER:	H21-10	UNIT NUMBER:	UH21	DATE:	30.01.2026
TRUCK MODEL:	Kenworth T610 SAR	REGISTRATION NUMBER:	XV29TW	KM'S:	251,762km
HOURS:					

***NOTE: MAKE SURE THAT HOURS AND KILOMETRES ARE RECORDED – MAKE SURE A SERVICE STICKER IS FITTED**

SERVICE	DONE	OK	N/A	INITIAL	CHECK FAULT – COMMENTS – PLEASE NOTE ALL FINDINGS
TEST DRIVE					
Drain air pressure, check build up	☐	☒	☐		
Check park brake operation	☐	☒	☐		
Check braking operation	☐	☒	☐		
Check transmission operation	☐	☒	☐		
ELECTRICAL					
Operation of all lights	☐	☒	☐		
Check all warning systems:- horns	☐	☒	☐		
Check all warning systems:- flashing lights	☐	☒	☐		
Check all switch functions	☐	☒	☐		
Check wiper/washer operation & condition	☒	☒	☐		
Check air conditioning operation	☐	☒	☐		
CAB & PANEL					
Ensure items in cab are secure	☐	☒	☐		
Condition of cab glass & interior	☐	☒	☐		
Condition of cab, panels & doors	☐	☒	☐		
Check seat belt condition & mounting	☐	☒	☐		
STEERING					
Check all linkages & ball joints	☐	☒	☐		
Check ball joint rubber condition	☐	☒	☐		
Check & report leaks	☐	☒	☐		

SERVICE	DONE	OK	N/A	INITIAL	CHECK FAULT – COMMENTS – PLEASE NOTE ALL FINDINGS
BRAKES					
Drain water from air tanks	☐	☒	☐		
Check condition & thickness of linings	☐	☒	☐		
WHEELS					
Check tyre condition & pressures	☐	☒	☐		
Check wheel nuts	☐	☒	☐		
PLEASE USE ISOLATION PROCEDURES & TAGS					
Change engine oil & fill to level	☒	☐	☐		Type & Litres: 50ltrs E900
Change oil filters	☒	☐	☐		Filter No: LF14000NN
Change fuel filters	☒	☐	☐		Filter No: FF5776
Change fuel pre filter	☐	☒	☐		Filter No:
Check & clean air filter outer	☒	☐	☐		Filter No: 2 x P625287
Check & clean air filter inner	☐	☐	☒		Filter No:
Check coolant level	☐	☒	☐		
Check & report coolant leaks	☐	☒	☐		
Check & report oil or fuel leaks	☐	☒	☐		
Check condition of hose & secure clips	☐	☒	☐		
Check condition of mounts	☐	☒	☐		
Check exhaust system	☐	☒	☐		
Check battery levels, clean & lube terminals	☐	☒	☐		
Check washer bottle level	☐	☒	☐		
Check air intake system	☐	☒	☐		
TRANSMISSION ☐					
Check & report any oil leaks	☐	☒	☐		
DIFFERENTIAL, FINAL DRIVES & DRIVELINES					
Check & report oil leaks	☐	☒	☐		
Fill oil to level	☐	☒	☐		
Check wear & lubricate drive shafts	☐	☒	☐		
BRAKES					
Adjust all brakes	☐	☒	☐		
Change air dryer filter	☐	☐	☒		

GENERAL COMMENTS

TYRE PRESSURE	AXLE 1	AXLE 2	AXLE 3	AXLE 4
INNER	110Psi	110Psi	110Psi	
OUTER	110psi	110Psi	110Psi	

INSPECTED BY:	Phil Mifsud	QUALIFICATION:	Mechanic
SIGNATURE:	<i>P. Mifsud</i>	DATE:	30.01.2026

Certification by Responsible Person: I certify that the described plant is to the manufacturers specifications and is being serviced and maintained by competent personnel to the manufacturer's recommendations			
PRINT NAME:	Bill Duncan	POSITION:	Workshop Supervisor
SIGNATURE:	<i>William Duncan</i>	DATE:	30.01.2026