



**Dobbs Equipment, LLC.**  
4343 Northwest 77th Ave  
Miami, FL 33166  
Phone: 305-592-5740 | Fax: 305-513-4353

**Remit Payment to:**  
Dobbs Equipment  
PO Box 5198  
Memphis, TN 38101-5198

**Bill To -** 82777  
DOWNRITE ENGINEERING  
14241 SW 143 COURT  
MIAMI, FL 33186  
Email: smartin@downrite.com  
Phone: 3052322340  
Fax:

**Deliver To -** 82777  
DOWNRITE ENGINEERING  
14241 SW 143 COURT  
MIAMI, FL 33186  
Email: smartin@downrite.com  
Phone: 3052322340  
Fax:

## SERVICE INVOICE

Invoice #	912585
Invoice Date	8/22/2024
Work Order	407230
Submitted By	
Location	23 - Miami

Make/Model	Serial Number	Meter	Equipment ID	Fleet Number
JOHN DEERE 350 P	1FF350PACPF000486	3.07	138605	

Customer PO #	Tax Exempt #	Advisor
SS10		Roberto Olivastri

Summary	Labor	OL&M	Misc	Parts	Subtotal
/LPM1000-350P	\$770.00	\$0.00	\$261.60	\$1,755.18	\$2,786.78
<b>Subtotal</b>					\$2,786.78
<b>Tax</b>					\$0.00
<b>Total</b>					\$2,786.78

/LPM1000-350P - Sundry

	Labor	OL&M	Misc	Parts	Subtotal
	770.00	0.00	261.60	1,755.18	2,786.78

**COMPLAINT:**

FIELD.EX43.1000 HR PM 350P

As Required  
Remove and clean fuel tank inlet screen  
Clean rear camera lens  
Clean and tighten battery terminals



**Dobbs Equipment, LLC.**  
4343 Northwest 77th Ave  
Miami, FL 33166  
Phone: 305-592-5740 | Fax: 305-513-4353

**Remit Payment to:**  
Dobbs Equipment  
PO Box 5198  
Memphis, TN 38101-5198

Clean right and left camera lenses (if equipped)  
Check windshield washer fluid level  
Service exhaust filter  
Check and adjust track sag  
Check and clean air cleaner dust unloader valve  
Every 10 Hours or Daily  
Check hydraulic tank oil level  
Check engine coolant level  
Check engine oil level  
Lubricate hydraulic coupler (if equipped)  
Every 50 Hours or Weekly  
Drain water and sediment from fuel tank sump  
Drain auxiliary fuel filter and water separator (if equipped)  
Drain primary fuel filter and water separator  
Lubricate working tool pivots  
Every 100 Hours  
Inspect and re-torque track hardware  
Every 250 Hours  
Lubricate front end pin joints  
Check pump drive gear case oil level  
Check swing gear case oil level  
Check hybrid battery electrolyte level (if equipped)  
Drain water and sediment from hydraulic tank sump  
Check travel gear case oil level  
Drain water and sediment from final fuel filter  
Take engine oil sample  
Every 500 Hours  
Lubricate swing bearing gear  
Check air intake hoses  
Lubricate swing bearing  
Take diesel fuel sample  
Replace primary fuel filter and water separator  
Take swing gear case oil sample  
Replace final fuel filter  
Take hydraulic oil sample  
Replace auxiliary fuel filter and water separator (if equipped)  
Take engine coolant sample  
Drain and refill engine oil and replace filter  
Take travel gear case oil sample  
Clean cab fresh air and cab recirculating air filters (replace every 6



**Dobbs Equipment, LLC.**  
4343 Northwest 77th Ave  
Miami, FL 33166  
Phone: 305-592-5740 | Fax: 305-513-4353

**Remit Payment to:**  
Dobbs Equipment  
PO Box 5198  
Memphis, TN 38101-5198

cleanings)

Take pump drive gear case oil sample

Every 1000 Hours

Drain and refill swing gear case oil

Inspect serpentine belt

Replace hydraulic tank oil filter

Check coolant condition

Replace pilot oil filter

Replace air cleaner elements

Drain and refill pump drive gear case oil

Replace air cleaner dust unloader valve

Remove and clean open crankcase ventilation (OCV) hose

**CORRECTION:**

1000 HR PM 350P

As Required

Remove and clean fuel tank inlet screen

Clean rear camera lens

Clean and tighten battery terminals

Clean right and left camera lenses (if equipped)

Check windshield washer fluid level

Service exhaust filter

Check and adjust track sag

Check and clean air cleaner dust unloader valve

Every 10 Hours or Daily

Check hydraulic tank oil level

Check engine coolant level

Check engine oil level

Lubricate hydraulic coupler (if equipped)

Every 50 Hours or Weekly

Drain water and sediment from fuel tank sump

Drain auxiliary fuel filter and water separator (if equipped)

Drain primary fuel filter and water separator

Lubricate working tool pivots

Every 100 Hours

Inspect and re-torque track hardware

Every 250 Hours

Lubricate front end pin joints

Check pump drive gear case oil level



**Dobbs Equipment, LLC.**  
4343 Northwest 77th Ave  
Miami, FL 33166  
Phone: 305-592-5740 | Fax: 305-513-4353

**Remit Payment to:**  
Dobbs Equipment  
PO Box 5198  
Memphis, TN 38101-5198

Check swing gear case oil level  
 Check hybrid battery electrolyte level (if equipped)  
 Drain water and sediment from hydraulic tank sump  
 Check travel gear case oil level  
 Drain water and sediment from final fuel filter  
 Take engine oil sample  
 Every 500 Hours  
 Lubricate swing bearing gear  
 Check air intake hoses  
 Lubricate swing bearing  
 Take diesel fuel sample  
 Replace primary fuel filter and water separator  
 Take swing gear case oil sample  
 Replace final fuel filter  
 Take hydraulic oil sample  
 Replace auxiliary fuel filter and water separator (if equipped)  
 Take engine coolant sample  
 Drain and refill engine oil and replace filter  
 Take travel gear case oil sample  
 Clean cab fresh air and cab recirculating air filters (replace every 6 cleanings)  
 Take pump drive gear case oil sample  
 Every 1000 Hours  
 Drain and refill swing gear case oil  
 Inspect serpentine belt  
 Replace hydraulic tank oil filter  
 Check coolant condition  
 Replace pilot oil filter  
 Replace air cleaner elements  
 Drain and refill pump drive gear case oil  
 Replace air cleaner dust unloader valve  
 Remove and clean open crankcase ventilation (OCV) hose

Part Number	Description	Quantity	Unit Price	Extended Price	Tax Ind
Part - 4630525	Hydraulic Pilot Filter Element	1.00	30.09	30.09	T
Part - 4S00686R	Air Filter	1.00	73.39	73.39	T
Part - AT346594	FLUID KIT	6.00	27.28	163.68	T
Part - AT365869	FILTER ELE	1.00	64.50	64.50	T



**Dobbs Equipment, LLC.**  
4343 Northwest 77th Ave  
Miami, FL 33166  
Phone: 305-592-5740 | Fax: 305-513-4353

**Remit Payment to:**  
Dobbs Equipment  
PO Box 5198  
Memphis, TN 38101-5198

Part - AT514724	FILTER ELE	1.00	99.65	99.65	T
Part - AT514725	FILTER ELE	1.00	82.71	82.71	T
Part - DZ112919	Filter Element	1.00	96.89	96.89	T
Part - DZ118283	FILTER KIT ENG OIL	1.00	27.44	27.44	T
Part - DZ130550	FILTER ELE	1.00	132.60	132.60	T
Part - FYA00001490R	Air Filter	1.00	50.85	50.85	T
Part - FYA00033064	Hydraulic Oil Filter Element	1.00	99.65	99.65	T
Part - T309251	Hand Operated Valve	1.00	116.22	116.22	T
Part - TY26101	Brake and Parts Cleaner	1.00	9.38	9.38	T
Part - TY26353	Penetrating Oil	1.00	11.10	11.10	T
Part - TY26682	15W-40 PLUS-50 II 1 qt. Bulk	31.00	8.05	249.55	T
Part - TY26815	GL5 Gear Lube 80W-90 1 gal.	4.00	49.37	197.48	T

#### Additional Part Charges

Part - S1	TRAVEL MILEAGE	50.00	5.00	250.00	Taxable
Part - P0009	In Bound Freight	1.00	0.00	0.00	Taxable

Misc Charges	Description	Quantity	Unit Price	Extended Price	Tax Ind
Misc	Environmental Fee	1.00	200.00	200.00	T
Misc	Shop Supplies	1.00	61.60	61.60	T

Labor	OL&M	Misc	Parts	Subtotal	Tax	Total
\$770.00	\$0.00	\$261.60	\$1,755.18	\$2,786.78	\$0.00	\$2,786.78

#### EMV Invoice Details

Payment	Desc	Company	Loc	Dept	Acct	Sub Acct	Amount
SS10	PM Contract (27000)	1	00	00	270	0	\$2,786.78



**Dobbs Equipment, LLC.**  
4343 Northwest 77th Ave  
Miami, FL 33166  
Phone: 305-592-5740 | Fax: 305-513-4353

**Remit Payment to:**  
Dobbs Equipment  
PO Box 5198  
Memphis, TN 38101-5198

Received By: \_\_\_\_\_

Date: \_\_\_\_\_

### **Terms & Conditions**

Payment in full is due thirty (30) days from the date of invoice (due date) on approved open accounts. Any amount not paid within thirty (30) days of the due date (interest-free period) will be subject to a monthly service charge of one and one-half percent (1.5%) or the maximum rate allowed by law, whichever is less, from the end of the interest-free period. All other terms are cash on delivery or cash in advance of delivery. Only approved forms of payment are acceptable. Export transactions require payment in advance or an approved letter of credit (LoC). Title to equipment listed hereon shall not pass to buyer until the purchase price, including all taxes, has been paid; but such title shall remain vested in seller until all sums due, or to become due from buyer, whether evidenced by note, book account, judgment or otherwise, shall have been fully paid, at which time ownership shall pass to buyer. Risk of loss shall pass to buyer or carrier upon shipment. Seller may exercise its legal remedies, including repossession of the equipment without notice, at any time a payment is overdue; buyer agrees to pay sellers legal fees and costs. Acceptance of equipment after repairs are performed is considered acceptance of the terms and conditions.