INTERNAL KEEGROUP USE ONLY

Job Sheet

Site Addı	ress:			Job Number	2150013	3481
				Job Date	23/01/2	025
				Order No.	,	
				Technician:	NORM	AN
Acct Na				Warranty		Repair/Recharge
Site Con				Service		Backlog
Site Pho				Certificate No:		
Job Rea	Ger: Carry (out 1000hr service		Certificate No.	-	
Custon	ner Note:	S:		On Hire Dat	e:	
				OFF Hire Da		
L						
Start Tim	e:					
Finish Tin	ne:					
Work Rec	uired :					
/	•					
Job Item	Rego #	Item Description		Test Code	Last Meter	Current Meter
K0641	Not Road R	egiste Hitachi Bell B40E Articulated Du	mp truck		8,887.00	9011 hrs
Product Co	ode D	escription	Quantity	Sell Pri	ice	Total Sell Price
364117	10	000HR SERVICE FILTER KIT - BELL B45E	1.00		0.00	0.00

Service Notes				
Description	Hrs	Qty	Cost	
SERVICE AS PER LIST.				
NEEDS NEW BATTERIES				
AUTO GREASER CRACKED				
BRAKENIGHT SUSTER FALLETY				
NESS MANS OIL				
Fotal Labour Hours: Travel Hours:				

Total Labour Hours:			Travel Hours:	
Manager:	Date:	<i></i>	Technician:	



Maintenance Planner

HITACHI

	LL ADT B40E & B45E Pin 1.1-1.2		
)		equired	
1	Check & clean coolers		Torque wheel nuts (Refer notes 1)
_	Every 10 to		ally the Manager of the same o
	Check engine oil, transmission oil, coolant on CDU		Check auto greasing system grease level
	Check Hydraulic Oil Level and WDB oil levels on CDU		Grease all remaining tube points as required
	Check for transmission oil leaks		Check driveline and suspension fasteners
]	Check transfer case oil level Check machine for fuel, water & oil leaks		Check Operator controls, buzzers and instruments
1]			Check work lights, reverse alarm and horn operation
	Check tyre pressures Grease bonnet hinges	<u> </u>	Check park and service brakes
			Drain Water from Primary fuel filter (Check cold, drain before starting engir
_	After First 10	-	84115
	Change primary fuel filter/water separator (Racor)		Drain and refill oil in all differentials & final drives
_	Change Engine fuel filter		Change hydraulic oil return filters
	Change WDB return filter		Change HP Brake filter
	Check/Replace Air conditioning filter		Replace transmission oif filters
	Change transfer case oil & filter		Color Transaction
	Every 500 Hours	3641 16 ER	10003518K
		IN STRICT	ACCORDANCE WITH PSB731-2017 001*****************
ı	Take PROBE oil samples from engine, transmission, transfer case, hydraulic		Check brake function, WDB brake wear indicator, park brake pad/ disk we
_	tank and all differentials, final drives		(Refer notes 2)
_	Drain and refill engine oil and replace engine oil filter		Clean fuel tank breather
_	Check hydraulic tank oil level		Check electrical connections & wire routing for chaffing
1	Drain Water from the primary fuel filter		Check fan blades and viscous hub for damage and leaks
1	Check and clean transmission, transfer case, differential breathers		Check suspension strut height & condition (Refer notes 2)
]	Check brake accumulator function (Refer to Service Manual)		Check/Clean hydraulic, W/DB tank and fuel tank breather filter
	Check coolant level & condition		Check operator controls SDC, SSM, bonnet switch, HVAC functionality & buzzer
)	Record & clear fault codes found on the CDU fault display page		
i -	Check function of all lights and reverse buzzer	H	Check A/C receiver dryer site glass
<u>.</u>	Change air conditioning fresh air filter		Change Auto grease filter, check level in auto greasing system
1	Grease all remaining lube points as required		Check software version installed and update to latest revision if required Check transfer case oil level
)	Check transmission for oil leaks and level	H	Modern Control of the
ì	Check all hydraulic hoses for leaks, chaffing, routing		Check Fan Purge operation and nozzle alignment (Bell SB1039-2018) Check and adjust bin shock pad clearance (see serv manual for specs)
3	Check condition of all Slip joints, cross and rollers (Replace as required)	ö	Clean and inspect Hydraulic/ Transmission cooler fan
1	Lubricate PTO universal drive shaft with Hi Temp grease		Check Fan belts, including idlers and pulteys
	Every 1000 Hours	PERMIT	110003518K
) (1) (1) (ORDER OF SERVICING TO BE CARRIED OUT IN STRIC		DANCE WITH PSB/31/2017-001 & SIB 1003-2017 (1) (1) (1)
}	Change primary fuel filter/water separator (Racor)	8	
]		10-	Change hydraulic oil return filters
-			Check/Clean transmission, transfer case breathers
1	Change transmission oil filters		Check & adjust engine valve and Jacobs valve clearances (refer serv man
·	Change transfer case filter		Check coolant condition
		42-	
	Change outer air cleaners		Change Pneumatic air filter Change HP Brake filter
	-		Check/Clean fuel tank breather
*-		-	Grease prop shaft slip joint Between drop box and osc joint
-	Check condition of all drive shafts		
} 			
}-	Carry out Oscillation joint checks as per (Bell SB2010-1004)		Replace Hydraulic and WDB Tank Breathers
 -	Carry out Oscillation joint checks as per (Bell SB2010-1004) Change HP hydraulic filter (where applicable)	4	Replace Hydraulic and WDB Tank Breathers Change WDB return filter
 -	Carry out Oscillation joint checks as per (Beil SB2010-1004) Change HP hydraulic filter (where applicable) Every 2000 Fours	401013	Replace Hydraulic and WDB Tank Breathers Change WDB return filter
}	Carry out Oscillation joint checks as per (Bell SB2010-1004) Change HP hydraulic filter (where applicable) Every 2000 Hours	1641118 E	Replace Hydraulic and WDB Tank Breathers Change WDB return filter 110007171K DARICE WITH PSB751 2017-001 & SIB 1903-2017
	Carry out Oscillation joint checks as per (Bell SB2010-1004) Change HP hydraulic filter (where applicable) Every 2000 Hours Change transfer case oil	141111 E	Replace Hydraulic and WDB Tank Breathers Change WDB return filter 10007171K 90AHCS WITH FSB741 2017-001 & SIB 1903-2317 Replace transfer case, transmission and fuel tank breather
	Carry out Oscillation joint checks as per (Bell SB2010-1004) Change HP hydraulic filter (where applicable) Every 2000 Four Change transfer case oil Change inner air cleaner	10 11 1 E	Replace Hydraulic and WDB Tank Breathers Change WDB return filter Change WDB return filter Replace transfer case, transmission and fuel tank breather Change transmission oil and filters
)))	Carry out Oscillation joint checks as per (Bell SB2010-1004) Change HP hydraulic filter (where applicable) Change transfer case oil Change inner air cleaner Clean WDB & Brake charge Suction screens	1 Accor	Replace Hydraulic and WDB Tank Breathers Change WDB return filter CANCE WITH PSB AT ADDRESS OF A SIS 1003-20 Replace transfer case, transmission and fuel tank breather Change transmission oil and filters Grease transmission to transfer case prop shaft
	Carry out Oscillation joint checks as per (Bell SB2010-1004) Change HP hydraulic filter (where applicable) Change transfer case oil Change inner air cleaner Clean WDB & Brake charge Suction screens Change WDB oil ensure brake hubs are drained	TACCO	Replace Hydraulic and WDB Tank Breathers Change WDB return filter Change WDB return filter Replace transfer case, transmission and fuel tank breather Change transmission oil and filters Grease transmission to transfer case prop shaft Change oil in all differentials & final drives
	Carry out Oscillation joint checks as per (Bell SB2010-1004) Change HP hydraulic filter (where applicable) Change transfer case oil Change inner air cleaner Change inner air cleaner Change WDB & Brake charge Suction screens Change WDB oil ensure brake hubs are drained Replace fan belts (Refer notes 2)	14111 E	Replace Hydraulic and WDB Tank Breathers Change WDB return filter 1000 171K Replace transfer case, transmission and fuel tank breather Change transmission oil and filters Grease transmission to transfer case prop shaft Change oil in all differentials & final drives Check operation of seat belt
	Change HP hydraulic filter (where applicable) Change HP hydraulic filter (where applicable) Change transfer case oil Change transfer case oil Change inner air cleaner Change WDB & Brake charge Suction screens Change WDB oil ensure brake hubs are drained Replace fan belts (Refer notes 2)	14 111 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	Replace Hydraulic and WDB Tank Breathers Change WDB return filter Replace transfer case, transmission and fuel tank breather Change transmission oil and filters Grease transmission to transfer case prop shaft Change oil in all differentials & final drives Check operation of seat belt
	Carry out Oscillation joint checks as per (Bell SB2010-1004) Change HP hydraulic filter (where applicable) Change transfer case oil Change inner air cleaner Change inner air cleaner Change WDB & Brake charge Suction screens Change WDB oil ensure brake hubs are drained Replace fan belts (Refer notes 2)	14 111 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	Replace Hydraulic and WDB Tank Breathers Change WDB return filter Change WDB return filter Replace transfer case, transmission and fuel tank breather Change transmission oil and filters Grease transmission to transfer case prop shaft Change oil in all differentials & final drives Check operation of seat belt
	Change HP hydraulic filter (where applicable) Change HP hydraulic filter (where applicable) Change transfer case oil Change transfer case oil Change inner air cleaner Change WDB & Brake charge Suction screens Change WDB oil ensure brake hubs are drained Replace fan belts (Refer notes 2)	20 ACCOR	Replace Hydraulic and WDB Tank Breathers Change WDB return filter 1000 171K PBD 2017 00 K 255 100 201 Replace transfer case, transmission and fuel tank breather Change transmission oil and filters Grease transmission to transfer case prop shaft Change oil in all differentials & final drives Check operation of seat belt
	Carry out Oscillation joint checks as per (Bell SB2010-1004) Change HP hydraulic filter (where applicable) Evan 2000 Hours Change transfer case oil Change inner air cleaner Change inner air cleaner Change WDB & Brake charge Suction screens Change WDB oil ensure brake hubs are drained Replace fan belts (Refer notes 2) Every 1000 Hours ORDER OF SERVICING TO BE CARRIED OUT IN STRICE	20 ACCOR	Replace Hydraulic and WDB Tank Breathers Change WDB return filter Change WDB return filter Replace transfer case, transmission and fuel tank breather Change transmission oil and filters Grease transmission to transfer case prop shaft Change oil in all differentials & final drives Check operation of seat belt LCD 7771K DANCE WITH PSS731-2011-003 SSIE 1003-2017 Check jockey pulley bearing(s)
	Carry out Oscillation joint checks as per (Bell SB2010-1004) Change HP hydraulic filter (where applicable) Every 2000 Four Change transfer case oil Change inner air cleaner Change inner air cleaner Change WDB & Brake charge Suction screens Change WDB oil ensure brake hubs are drained Replace fan belts (Refer notes 2) Every 1001 Hours Check air conditioner pulley bearing and inspect pulley grooves	264118 83 OT ACCOR	Replace Hydraulic and WDB Tank Breathers Change WDB return filter HOWARD STATE Replace transfer case, transmission and fuel tank breather Change transmission oil and filters Grease transmission to transfer case prop shaft Change oil in all differentials & final drives Check operation of seat belt
	Carry out Oscillation joint checks as per (Bell SB2010-1004) Change HP hydraulic filter (where applicable) Every 2000 Hours Change transfer case oil Change inner air cleaner Change inner air cleaner Change WDB & Brake charge Suction screens Change WDB oil ensure brake hubs are drained Replace fan belts (Refer notes 2) Every 1000 Hours Change WDB oil ensure brake hubs are drained Replace fan belts (Refer notes 2) Change WDB oil ensure brake hubs are drained Replace fan belts (Refer notes 2) Every 1000 Hours Change WDB oil ensure brake hubs are drained Replace fan belts (Refer notes 2)	264118 ES	Replace Hydraulic and WDB Tank Breathers Change WDB return filter 1000 171K BANCE WITH PSB7 2017 201 & SIE 1003-2017 Replace transmission oil and filters Change transmission to transfer case prop shaft Change oil in all differentials & final drives Check operation of seat belt 1000 171K DANCE WITH PSB751-2017 2013 SSIE 1003-2017 Check jockey pulley bearing(s) Check suspension accumulator pressures
	Carry out Oscillation joint checks as per (Bell SB2010-1004) Change HP hydraulic filter (where applicable) Change transfer case oil Change inner air cleaner One WDB & Brake charge Suction screens Change WDB oil ensure brake hubs are drained Replace fan belts (Refer notes 2) Every 1001 Hours Check air conditioner pulley bearing and inspect pulley grooves Clean Secondary Steering Strainer Clean Hydraulic, emergency steering and WDB tank suction screen	34411 E	Replace Hydraulic and WDB Tank Breathers Change WDB return filter Replace transfer case, transmission and fuel tank breather Change transmission oil and filters Grease transmission to transfer case prop shaft Change oil in all differentials & final drives Check operation of seat belt Check jockey pulley bearing(s) Check suspension accumulator pressures Inspect and lubricate orbital valve/ steering spline
	Carry out Oscillation joint checks as per (Bell SB2010-1004) Change HP hydraulic filter (where applicable) Every 2000 Hours Change transfer case oil Change inner air cleaner Change WDB & Brake charge Suction screens Change WDB oil ensure brake hubs are drained Replace fan belts (Refer notes 2) Every 1000 Hours Check air conditioner pulley bearing and inspect pulley grooves Clean Secondary Steering Streiner Clean Hydraulic, emergency steering and WDB tank suction screen Change hydraulic oil	344111 E	Replace Hydraulic and WDB Tank Breathers Change WDB return filter Replace transfer case, transmission and fuel tank breather Change transmission oil and filters Grease transmission to transfer case prop shaft Change oil in all differentials & final drives Check operation of seat belt Check jockey pulley bearing(s) Check jockey pulley bearing(s) Check suspension accumulator pressures Inspect and lubricate orbital valve/ steering spline
	Carry out Oscillation joint checks as per (Bell SB2010-1004) Change HP hydraulic filter (where applicable) Every 2000 Hours Change transfer case oil Change inner air cleaner Change inner air cleaner Change WDB & Brake charge Suction screens Change WDB oil ensure brake hubs are drained Replace fan belts (Refer notes 2) Every 1000 Hours Check air conditioner pulley bearing and inspect pulley grooves Clean Secondary Steering Strainer Clean Hydraulic, emergency steering and WDB tank suction screen Change hydraulic oil	344111 E	Replace Hydraulic and WDB Tank Breathers Change WDB return filter Replace transfer case, transmission and fuel tank breather Change transmission oil and filters Grease transmission to transfer case prop shaft Change oil in all differentials & final drives Check operation of seat belt Check jockey pulley bearing(s) Check suspension accumulator pressures Inspect and lubricate orbital valve/ steering spline

All of the above

Maintenance Planner



Hitachi Construction Machinery (Australia) Pty Ltd

ltem	Part No	Initial 100 Hour (10)	500 Hour (6)	1000 Hour (8)	2000 Hour (12)	4000 Hour (16)	6000 Hour (16)	12000 Hour (16)
Engine Oil Filter	DC222521	1.4	1.00	1	i	1	1	1
Air Conditioning Fresh Air Filter	227985		1	1	1	1	- 1	- 1
Auto Grease Filter (If Equipped)	262947		1	1	1	1	1	1
Fuel Filter (Racor)	207694	1		1	1	1	1	1
Fuel Filter (on engine)	DC222520	4		1	1		1	
ruel Fifter (on engine)	DC222897					1		1
WDB Return filter	228253	1000		1	1	1	1	- 1
Gt Seal WDB Filter	141054			1	1	1	1	- 1
HP Brake filter	228255	1		4	1	1	1	1
Fransfer Case Filter	222219	1		-1	1	1	1	1
Transfer Case Breather	223816				1	1	1	1
Remote Transmission Filters	29558118	1		1	1	1	1	1
Fransmission Fitter O-Ring	AL140122	2		2	2	2	2	2
Fransmission Breather	223816				1	1	1	1
Hydraulic Filter	228254	- 4		4.	1	1	1	1
Kit Seal Hydraulic Filter	141055			1	1	1	-	1
Hydraulic High Pressure Filter (if Fitted)	227758			1	1	1	1	1
Fuel Tank Breather	220010	1			- 1	1		1
Hydraulic Tank & WDB Breather	210881			2	2	2	2	2
Belt V-Ribbed 2642mm	DC223073			4	1	1	1	1
Belt V-Ribbed 1493mm	DC222839					1	1	1
Rocker Cover Gasket	DC140545			1	1	1	1	1
Air Cleaner element (Outer)	226779			2	2	2	2	2
Air Cleaner element (Inner)	226780	_	-	4	2	2	THE PERSON NAMED IN	2
Air Drier Filter	226000			1			2	100
Hydraulic Tank Suction Screens	BN053513			1	1	1	1	1
Emergency Steer Suction Strainer					-	2		2
Brake charge strainer	BN053515				-	1		1
WDB suction Strainers	BN053515		-		-	1		1
Probe Oil Analysis Kit	BN053514			4.		2		2
<u> </u>	OIL SAMPLE		14	14	14	14	14	14
Cross and roller ass	227285			Piece-As Re				
Cross and roller ass	221877			Piece - As R				
Cross and Roller Ass	227283	2 Pieces - As Required 6000 hr recommended						
Idler pulley	DC222873	_			As Requir	ed		
CASTROL VECTON LONG DRAIN 10W40 LS (20				1 1/1/2017		1000/10	1000	200
Engine - OM471LA- MB228.5 Approved	3380370		39	39	39	39	39	39
TRANSYND (20 Litre Pack)								1000
Transmission- Allison TE295 Approved	115538				48	48	48	48
Drop Box	115538	7.4			7.4	7.4	7.4	7.4
CALTEX TEXTRAN TOH PREMIUM (205 Litre I	Pack) 2069205	100	0.143901	723				
Hydraulic System	2069205					175		175
CASTROL Heavy Duty ATF (20 Litre Pack)				Service Service				711
Wet Disk Brake Cooling	3377654				210	210	210	210
CALTEX TEXTRAN TOH PREMIUM (20 Litre Page	k) 2069220							Tito:
Axles Front/ Middle/ Rear 56L x3	2069220	168			168	168	168	168
Final Drives 4.5L x 6	2069220	27			27	27	27	27
GLYSANTIN G40 (20 Litre Drum)			TOP AS I	N. P. LEWIS			nne	
Cooling System Do not mix with Coolguard	AC5040-50 20L						66	66
Based on Oil analysis results, Oil change	intervals may need to be ac	djusted for you	ur operating	conditions. C	Consult your	local Hitach	i / Deere Dee	ler.
Torque all wheel nuts to 560Nm. (413 ft lb.) afte changed. Apply anti seize to the wheel studs (and 2. Refer to service manual for specs and procedure.	washers if equipped)	on and again a	after 50 hou	rs of operatio	n. Repeat ti	nis procedur	e if the wheel	s are

er to service manual for specs and pro	cedure			
NORMAN	Signature	Elip	Date	8/2/25