


Battery Charger

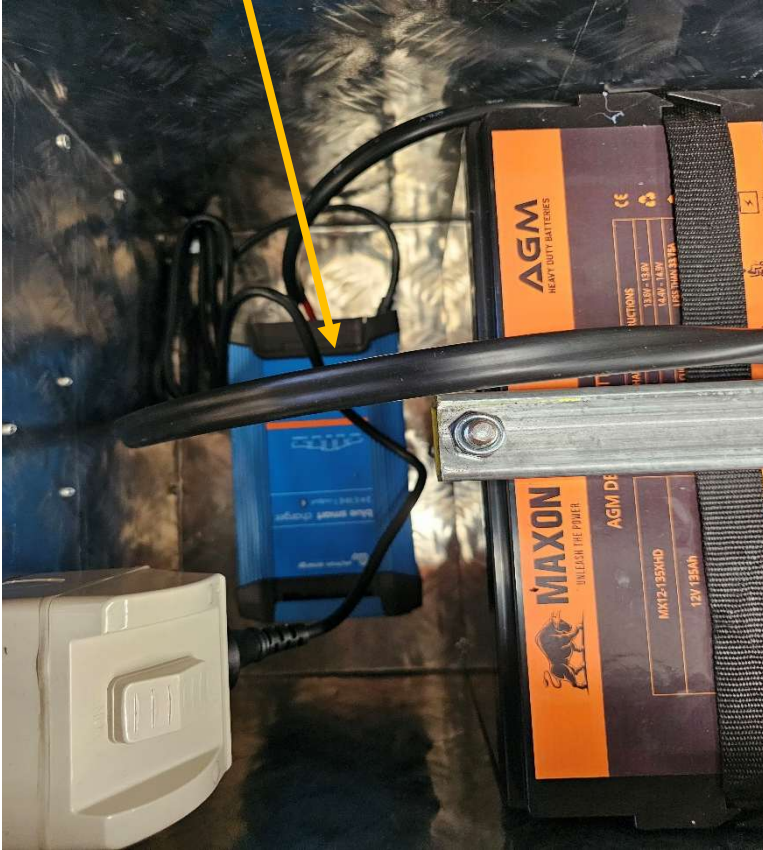

240v Power Plug In



4 Batteries & Lock Box Both Sides, Battery Charger 1 Side



Rear Supports Down First

Wind up the jockey wheel until legs lock in and wheel is level, once all 4 supports are down, bring jockey wheel and lock in position with a chain and lock. Put another lock on the tow hitch, make sure hand brake is in position and on firm.

Mast operation, undo 3 top bolts with handles and then wind the winch to lift the screen up. Undo bottom bolt with handle to turn the screen around. When you have the screen in position, lock all 4 bolts into position then tighten



all 4 bolts. Put a chain around the mast and handle with lock for safety.

