

Nov 14/22 370389 km

- Perform Recalls # N212328800
- ↳ AIR BAG RECALL

Cameron Racing

Nov 17/22 370389

- R&R Front Diff (W)
- USED FROM KENDRICK
- RE 2013 3500 SILVERADO
- 179,000 km.
- 90 DAYS WARRANTY

Cameron Racing

★ Truck Picked Dec 01/22 ★

FEB 27/23 370772 km.

- Full AHA OIP
- R&R REAR CALIPERS & BRAKES
- NEW PADS, SLIDE KIT & ROD ENDS
- FRONT BRAKES 90%

GRANDMECH MECHANICS

MAY 02/23 372875 km

- OIL CHANGE & GILGASE
- CHECK LEVELS
- NEW AIR FILTER.

PREVENTATIVE MAINTENANCE CHECKLIST I

Light, Medium and Heavy Vehicle P.M. ABC EQUIPMENT CLASS 11, 15, 16, 17, 18, 19, 32

LIGHT, MEDIUM VEHICLE INSPECTION INTERVALS: A = 6000 km / 150 hrs B = 1200 km / 300 hrs C = 30000 km / 750 hrs
 MEDIUM, H.D. VEHICLE INSPECTION INTERVALS: A = 8000 km / 150 hrs B = 12000 km / 300 hrs C = 36000 km / 750 hrs

INDICATE ONE OF THE FOLLOWING: "✓" OK "X" NEEDS ATTENTION "O" ADJUSTMENT NEEDED "-" NOT EQUIPPED

DATE	UNIT #	ODOMETER	HOUR METER
May 02/23	107	372875 km	

A B C TASK

ENGINE LUBRICATION CHECKLIST

- Wash and clean engine
- Drain engine oil and replace filter

CHASSIS LUBRICATION CHECK

- Check all fluid levels per O.E.M. recommendations
- Check fluid levels in attachments (winch/hyd. system)
- Grease all service points

ENGINE CHECK

- Check drive belts and tensioners
- Inspect air cleaner piping for signs of leakage
 - Replace fuel filter(s); check for leakage
 - Replace air cleaner
- Service crankcase ventilation system
 - Record engine oil pressure (warm engine) at high idle
 - Inspect radiator, fan, fan bearings, fan shroud and shutters for wear, damage or obstruction
- Test coolant per O.E.M. recommendation
- Check coolant level & inspect water pump
 - Replace water filter
 - Inspect motor mounts

DIESEL ENGINE CHECKS

- Inspect fuel system, pump & injectors for leakage
- Inspect Turbocharger for wear of leaks

ELECTRICAL CHECK

- Clean & inspect battery terminals, cables & hold down
- Inspect wiring for routing, clamping

A B C TASK

- or deterioration
- Check lights, signals, reflectors, back-up alarm
- Perform cranking motor test
- Check block heater, pan heater (wiring) and plug-in

BRAKE SYSTEM

- Inspect brake lines & fittings for leakage & kinking
- Inspect disc brake linings, rotors, piston boots and caliper retainers
- Inspect emergency brake components and adjust
 - Service air dryer
 - Remove all wheels, inspect brake linings, drums and wheel cylinders; clean, inspect & re-pack bearings
- Service & adjust air brakes per AB Air Brake Manual

STEERING SYSTEM

- Inspect king-pins & ball joints for wear
- Inspect drag-link, pitman arm, idler arm, tie rod ends, steering box for looseness
- Inspect steering column U-joints & splines for wear or looseness
 - Check "toe-in", check front end alignment
 - Service and adjust front wheel bearing

NOTE:

P.M. Cycle = A-1, B-1, A-2, B-2, C

O.E.M. = Original Equipment Manufacturer

PREVENTATIVE MAINTENANCE CHECKLIST I

Light, Medium and Heavy Vehicle P.M. ABC EQUIPMENT CLASS 11, 15, 16, 17, 18, 19, 32

LIGHT, MEDIUM VEHICLE INSPECTION INTERVALS: A = 6000 km / 150 hrs B = 1200 km / 300 hrs C = 30000 km / 750 hrs
 MEDIUM, H.D. VEHICLE INSPECTION INTERVALS: A = 8000 km / 150 hrs B = 12000 km / 300 hrs C = 36000 km / 750 hrs

INDICATE ONE OF THE FOLLOWING: "✓" OK "X" NEEDS ATTENTION "O" ADJUSTMENT NEEDED "-" NOT EQUIPPED

A B C TASK

HYDRAULIC SYSTEM

- Change Hydraulic oil filter (& oil if required)
- Inspect pump, valve, lines and driveshaft

TRANSMISSION DIFFERENTIAL

- Clean breathers
- Inspect magnetic plugs for cuttings (transmission differential & transfer case "as equipped")
- Check and adjust clutch as required
 - Inspect transmission mounting for looseness & deterioration
 - Inspect differential(s) and pinion flange(s) for looseness
- Inspect driveshaft, U-joints, spline section & center bearing for looseness, wear
- Change automatic transmission oil & filter
- Check front wheel drive axle boots
- Drain differential and inspect for cuttings

CHASSIS SECTION CHECK

- Inspect exhaust system
- Inspect fuel tanks, mounting and straps
- Inspect cab mounts for deterioration & looseness
- Check front & rear springs, shackles, "U" bolts and hangers for looseness, cracks and wear
- Inspect cross members, stabilizer brackets, torque arms and equalizers
- Check front & rear shocks/struts as applicable

WHEEL, AXLE, HUB AND TIRES

- Check tires for cuts, wear & matching (inflate to correct pressure)
- Check front wheel bearing oil levels (if appt.)

A B C TASK

- Check front steering seals & locking hubs (4x4)

BODY AND CAB

- Inspect interior of cab for damage & cleanliness
- Check operation of instruments, gauges, in-board computers, shift quadrant indicators
- Inspect wiper arms and blades
- Check windshield washer operation
- Inspect glass & mirror mountings, check window regulators, door striker plates
- Lubricate hood & door latches, hinges & door locks
- Inspect sun visors and seat belt operation
- Check operation of A/C, heater & defroster

EMERGENCY EQUIPMENT

- Check flags, first aid kits, reflectors, wheel chocks and fire extinguishers
- Complete PM sticker, record METER READING for next PM inspection and install

ROAD TEST INSPECTION

- Check steering for effort, shimmy or pulling
- Check braking action and operation
- Check clutch, clutch brake and trans. Controls
- Check for unusual noise or vibration
- Check speedometer and hour meter operation
- Check operation temperature

NOTE:

P.M. Cycle = A-1, B-1, A-2, B-2, C
 O.E.M. = Original Equipment Manufacturer

April 11/22 363248 km.

- OIL CHANGE & OIL CASE
- CHECK LEVELS

Aug 15/22 369120 km

- OIL CHANGE & CHECK LEVELS

PREVENTATIVE MAINTENANCE CHECKLIST I

Light, Medium and Heavy Vehicle P.M. ABC EQUIPMENT CLASS 11, 15, 16, 17, 18, 19, 32

LIGHT, MEDIUM VEHICLE INSPECTION INTERVALS: A = 6000 km / 150 hrs B = 1200 km / 300 hrs C = 30000 km / 750 hrs
 MEDIUM, H.D. VEHICLE INSPECTION INTERVALS: A = 8000 km / 150 hrs B = 12000 km / 300 hrs C = 36000 km / 750 hrs

INDICATE ONE OF THE FOLLOWING: "✓" OK "X" NEEDS ATTENTION "O" ADJUSTMENT NEEDED "-" NOT EQUIPPED

DATE	UNIT #	ODOMETER	HOUR METER
April 11/22	107.	363248 km	

A B C TASK

ENGINE LUBRICATION CHECKLIST

- Wash and clean engine
- Drain engine oil and replace filter

CHASSIS LUBRICATION CHECK

- Check all fluid levels per O.E.M. recommendations
- Check fluid levels in attachments (winch/hyd. system)
- Grease all service points

ENGINE CHECK

- Check drive belts and tensioners
- Inspect air cleaner piping for signs of leakage
 - Replace fuel filter(s); check for leakage
 - Replace air cleaner
- Service crankcase ventilation system
 - Record engine oil pressure (warm engine) at high idle
 - Inspect radiator, fan, fan bearings, fan shroud and shutters for wear, damage or obstruction
- Test coolant per O.E.M recommendation
- Check coolant level & inspect water pump
 - Replace water filter
 - Inspect motor mounts

DIESEL ENGINE CHECKS

- Inspect fuel system, pump & injectors for leakage
- Inspect Turbocharger for wear of leaks

ELECTRICAL CHECK

- Clean & inspect battery terminals, cables & hold down
- Inspect wiring for routing, clamping

A B C TASK

- or deterioration
- Check lights, signals, reflectors, back-up alarm
- Perform cranking motor test
- Check block heater, pan heater (wiring) and plug-in

BRAKE SYSTEM

- Inspect brake lines & fittings for leakage & kinking
- Inspect disc brake linings, rotors, piston boots and caliper retainers
- Inspect emergency brake components and adjust
 - Service air dryer
 - Remove all wheels, inspect brake linings, drums and wheel cylinders; clean, inspect & re-pack bearings
- Service & adjust air brakes per AB Air Brake Manual

STEERING SYSTEM

- Inspect king-pins & ball joints for wear
- Inspect drag-link, pitman arm, idler arm, tie rod ends, steering box for looseness
- Inspect steering column U-joints & splines for wear or looseness
 - Check "toe-in", check front end alignment
 - Service and adjust front wheel bearing

NOTE:

P.M. Cycle = A-1, B-1, A-2, B-2, C

O.E.M. = Original Equipment Manufacturer

PREVENTATIVE MAINTENANCE CHECKLIST I

Light, Medium and Heavy Vehicle P.M. ABC EQUIPMENT CLASS 11, 15, 16, 17, 18, 19, 32

LIGHT, MEDIUM VEHICLE INSPECTION INTERVALS: A = 6000 km / 150 hrs B = 1200 km / 300 hrs C = 30000 km / 750 hrs
MEDIUM, H.D. VEHICLE INSPECTION INTERVALS: A = 8000 km / 150 hrs B = 12000 km / 300 hrs C = 36000 km / 750 hrs
INDICATE ONE OF THE FOLLOWING: "✓" OK "X" NEEDS ATTENTION "O" ADJUSTMENT NEEDED "-" NOT EQUIPPED

A B C TASK

HYDRAULIC SYSTEM

- Change Hydraulic oil filter (& oil if required)
- Inspect pump, valve, lines and driveshaft

TRANSMISSION DIFFERENTIAL

- Clean breathers
- Inspect magnetic plugs for cuttings (transmission differential & transfer case "as equipped")
- Check and adjust clutch as required
 - Inspect transmission mounting for looseness & deterioration
 - Inspect differential(s) and pinion flange(s) for looseness
- Inspect driveshaft, U-joints, spline section & center bearing for looseness, wear
 - Change automatic transmission oil & filter
- Check front wheel drive axle boots
 - Drain differential and inspect for cuttings

CHASSIS SECTION CHECK

- Inspect exhaust system
 - Inspect fuel tanks, mounting and straps
 - Inspect cab mounts for deterioration & looseness
- Check front & rear springs, shackles, "U" bolts and hangers for looseness, cracks and wear
- Inspect cross members, stabilizer brackets, torque arms and equalizers
- Check front & rear shocks/struts as applicable

WHEEL, AXLE, HUB AND TIRES

- Check tires for cuts, wear & matching (inflate to correct pressure)
- Check front wheel bearing oil levels (if appt.)

A B C TASK

- Check front steering seals & locking hubs (4x4)

BODY AND CAB

- Inspect interior of cab for damage & cleanliness
- Check operation of instruments, gauges, in-board computers, shift quadrant indicators
- Inspect wiper arms and blades
- Check windshield washer operation
- Inspect glass & mirror mountings, check window regulators, door striker plates
- Lubricate hood & door latches, hinges & door locks
- Inspect sun visors and seat belt operation
- Check operation of A/C, heater & defroster

EMERGENCY EQUIPMENT

- Check flags, first aid kits, reflectors, wheel chocks and fire extinguishers
- Complete PM sticker, record METER READING for next PM inspection and install

ROAD TEST INSPECTION

- Check steering for effort, shimmy or pulling
- Check braking action and operation
- Check clutch, clutch brake and trans. Controls
- Check for unusual noise or vibration
- Check speedometer and hour meter operation
- Check operation temperature

NOTE:

P.M. Cycle = A-1, B-1, A-2, B-2, C
O.E.M. = Original Equipment Manufacturer

Oct 21/21 353982km 8198hrs

- Oil CHANGE & GROSS (530)
- CHECK CVTCS

- NEW TIRES & BALANCE
(TOOK IN LOOSE)

} FRONT
TIRE

FEB 05/22 360380km

- R&R Black header & COIL → LEAK
- R&R fuel filter & WATER SENSOR
- R&R 7 Glow PLUGS
- R&R NEW front BRAKES, ROTORS
CALIPERS.
- FULL TRANS FLUSH & SERVICE
- FULL DRIVE LINE SERVICE
- FULL POWER STEERING, BRAKE & COOLANT
FLUSH.

} CAMBRIAN
RACING

FEB 28/22 360560km

- FULL AHA CVIP

} Greenhead
MECHANICAL

PREVENTATIVE MAINTENANCE CHECKLIST I

Light, Medium and Heavy Vehicle P.M.ABC EQUIPMENT CLASS 11, 15, 16, 17, 18, 19, 32

LIGHT, MEDIUM VEHICLE INSPECTION INTERVALS: A = 6000 km / 150 hrs B = 1200 km / 300 hrs C = 30000 km / 750 hrs
MEDIUM, H.D. VEHICLE INSPECTION INTERVALS: A = 8000 km / 150 hrs B = 12000 km / 300 hrs C = 36000 km / 750 hrs

INDICATE ONE OF THE FOLLOWING: "✓" OK "X" NEEDS ATTENTION "O" ADJUSTMENT NEEDED "-" NOT EQUIPPED

DATE	UNIT #	ODOMETER	HOUR METER
OCT 21/21	107	353982km	8188hrs

A B C TASK

ENGINE LUBRICATION CHECKLIST

- Wash and clean engine
- Drain engine oil and replace filter

CHASSIS LUBRICATION CHECK

- Check all fluid levels per O.E.M. recommendations
- Check fluid levels in attachments (winch/hyd. system)
- Grease all service points

ENGINE CHECK

- Check drive belts and tensioners
- Inspect air cleaner piping for signs of leakage
 - Replace fuel filter(s); check for leakage
 - Replace air cleaner
- Service crankcase ventilation system
 - Record engine oil pressure (warm engine) at high idle
 - Inspect radiator, fan, fan bearings, fan shroud and shutters for wear, damage or obstruction
- Test coolant per O.E.M recommendation
- Check coolant level & inspect water pump
 - Replace water filter
 - Inspect motor mounts

DIESEL ENGINE CHECKS

- Inspect fuel system, pump & injectors for leakage
- Inspect Turbocharger for wear of leaks

ELECTRICAL CHECK

- Clean & inspect battery terminals, cables & hold down
- Inspect wiring for routing, clamping

A B C TASK

- or deterioration
- Check lights, signals, reflectors, back-up alarm
- Perform cranking motor test
- Check block heater, pan heater (wiring) and plug-in

BRAKE SYSTEM

- Inspect brake lines & fittings for leakage & kinking
- Inspect disc brake linings, rotors, piston boots and caliper retainers
- Inspect emergency brake components and adjust
 - Service air dryer
 - Remove all wheels, inspect brake linings, drums and wheel cylinders; clean, inspect & re-pack bearings
- Service & adjust air brakes per AB Air Brake Manual

STEERING SYSTEM

- Inspect king-pins & ball joints for wear
- Inspect drag-link, pitman arm, idler arm, tie rod ends, steering box for looseness
- Inspect steering column U-joints & splines for wear or looseness
- Check "toe-in", check front end alignment
- Service and adjust front wheel bearing

NOTE:

P.M. Cycle = A-1, B-1, A-2, B-2, C

O.E.M. = Original Equipment Manufacturer

PREVENTATIVE MAINTENANCE CHECKLIST I

Light, Medium and Heavy Vehicle P.M. ABC EQUIPMENT CLASS 11, 15, 16, 17, 18, 19, 32

LIGHT, MEDIUM VEHICLE INSPECTION INTERVALS: A = 6000 km / 150 hrs B = 1200 km / 300 hrs C = 30000 km / 750 hrs
MEDIUM, H.D. VEHICLE INSPECTION INTERVALS: A = 8000 km / 150 hrs B = 12000 km / 300 hrs C = 36000 km / 750 hrs

INDICATE ONE OF THE FOLLOWING: "✓" OK "X" NEEDS ATTENTION "O" ADJUSTMENT NEEDED "-" NOT EQUIPPED

A B C TASK

HYDRAULIC SYSTEM

- Change Hydraulic oil filter (& oil if required)
- Inspect pump, valve, lines and driveshaft

TRANSMISSION DIFFERENTIAL

- Clean breathers
- Inspect magnetic plugs for cuttings (transmission differential & transfer case "as equipped")
- Check and adjust clutch as required
 - Inspect transmission mounting for looseness & deterioration
 - Inspect differential(s) and pinion flange(s) for looseness
- Inspect driveshaft, U-joints, spline section & center bearing for looseness, wear
 - Change automatic transmission oil & filter
- Check front wheel drive axle boots
 - Drain differential and inspect for cuttings

CHASSIS SECTION CHECK

- Inspect exhaust system
 - Inspect fuel tanks, mounting and straps
 - Inspect cab mounts for deterioration & looseness
 - Check front & rear springs, shackles, "U" bolts and hangers for looseness, cracks and wear
 - Inspect cross members, stabilizer brackets, torque arms and equalizers
 - Check front & rear shocks/struts as applicable

WHEEL, AXLE, HUB AND TIRES

- Check tires for cuts, wear & matching (inflate to correct pressure)
- Check front wheel bearing oil levels (if apt.)

A B C TASK

- Check front steering seals & locking hubs (4x4)

BODY AND CAB

- Inspect interior of cab for damage & cleanliness
- Check operation of instruments, gauges, in-board computers, shift quadrant indicators
- Inspect wiper arms and blades
- Check windshield washer operation
- Inspect glass & mirror mountings, check window regulators, door striker plates
- Lubricate hood & door latches, hinges & door locks
- Inspect sun visors and seat belt operation
- Check operation of A/C, heater & defroster

EMERGENCY EQUIPMENT

- Check flags, first aid kits, reflectors, wheel chocks and fire extinguishers
- Complete PM sticker, record METER READING for next PM inspection and install

ROAD TEST INSPECTION

- Check steering for effort, shimmy or pulling
- Check braking action and operation
- Check clutch, clutch brake and trans. Controls
- Check for unusual noise or vibration
- Check speedometer and hour meter operation
- Check operation temperature

NOTE:

P.M. Cycle = A-1, B-1, A-2, B-2, C

O.E.M. = Original Equipment Manufacturer

Aug 19/21 347309 km.

- OIL CHANGE & GREASE
- CHECK BOLTS
- NEW AIR FILTER
- NEW FUEL FILTER

Sept 02/21 348189 km

- R&R ROTO RIM WHEEL
- ↳ STUDS CAME LOOSE
- NEW SEAL, STUDS, CUSTOMER
- Supplied Rims

} VAN DIJCK
SERVICE

PREVENTATIVE MAINTENANCE CHECKLIST I

Light, Medium and Heavy Vehicle: P.M. ABC EQUIPMENT CLASS 11, 15, 16, 17, 18, 19, 32

LIGHT, MEDIUM VEHICLE INSPECTION INTERVALS: A = 6000 km / 150 hrs B = 1200 km / 300 hrs C = 30000 km / 750 hrs
 MEDIUM, H.D. VEHICLE INSPECTION INTERVALS: A = 8000 km / 150 hrs B = 12000 km / 300 hrs C = 36000 km / 750 hrs

INDICATE ONE OF THE FOLLOWING: "✓" OK "X" NEEDS ATTENTION "O" ADJUSTMENT NEEDED "-" NOT EQUIPPED

DATE	UNIT #	ODOMETER	HOUR METER
Aug 19/21	107	347309 km	

A B C TASK

ENGINE LUBRICATION CHECKLIST

- Wash and clean engine
- Drain engine oil and replace filter

CHASSIS LUBRICATION CHECK

- Check all fluid levels per O.E.M. recommendations
- Check fluid levels in attachments (winch/hyd. system)
- Grease all service points

ENGINE CHECK

- Check drive belts and tensioners
- Inspect air cleaner piping for signs of leakage
 - Replace fuel filter(s); check for leakage
 - Replace air cleaner
- Service crankcase ventilation system
 - Record engine oil pressure (warm engine) at high idle
 - Inspect radiator, fan, fan bearings, fan shroud and shutters for wear, damage or obstruction
- Test coolant per O.E.M recommendation
- Check coolant level & inspect water pump
 - Replace water filter
 - Inspect motor mounts

DIESEL ENGINE CHECKS

- Inspect fuel system, pump & injectors for leakage
- Inspect Turbocharger for wear of leaks

ELECTRICAL CHECK

- Clean & inspect battery terminals, cables & hold down
- Inspect wiring for routing, clamping

A B C TASK

- or deterioration
- Check lights, signals, reflectors, back-up alarm
 - Perform cranking motor test
- Check block heater, pan heater (wiring) and plug-in

BRAKE SYSTEM

- Inspect brake lines & fittings for leakage & kinking
- Inspect disc brake linings, rotors, piston boots and caliper retainers
- Inspect emergency brake components and adjust
 - Service air dryer
 - Remove all wheels, inspect brake linings, drums and wheel cylinders; clean, inspect & re-pack bearings
- Service & adjust air brakes per AB Air Brake Manual

STEERING SYSTEM

- Inspect king-pins & ball joints for wear
- Inspect drag-link, pitman arm, idler arm, tie rod ends, steering box for looseness
- Inspect steering column U-joints & splines for wear or looseness
 - Check "toe-in", check front end alignment
 - Service and adjust front wheel bearing

NOTE:
 P.M. Cycle = A-1, B-1, A-2, B-2, C
 O.E.M. = Original Equipment Manufacturer

PREVENTATIVE MAINTENANCE CHECKLIST I

Light, Medium and Heavy Vehicle P.M. ABC EQUIPMENT CLASS 11, 15, 16, 17, 18, 19, 32

LIGHT, MEDIUM VEHICLE INSPECTION INTERVALS: A = 6000 km / 150 hrs B = 12000 km / 300 hrs C = 30000 km / 750 hrs
 MEDIUM, H.D. VEHICLE INSPECTION INTERVALS: A = 8000 km / 150 hrs B = 12000 km / 300 hrs C = 36000 km / 750 hrs
 INDICATE ONE OF THE FOLLOWING: "✓" OK "X" NEEDS ATTENTION "O" ADJUSTMENT NEEDED "-" NOT EQUIPPED

A B C TASK

HYDRAULIC SYSTEM

- Change Hydraulic oil filter (& oil if required)
- Inspect pump, valve, lines and driveshaft

TRANSMISSION DIFFERENTIAL

- Clean breathers
- Inspect magnetic plugs for cuttings (transmission differential & transfer case "as equipped")
- Check and adjust clutch as required
 - Inspect transmission mounting for looseness & deterioration
 - Inspect differential(s) and pinion flange(s) for looseness
 - Inspect driveshaft, U-joints, spline section & center bearing for looseness, wear
 - Change automatic transmission oil & filter
- Check front wheel drive axle boots
 - Drain differential and inspect for cuttings

CHASSIS SECTION CHECK

- Inspect exhaust system
- Inspect fuel tanks, mounting and straps
- Inspect cab mounts for deterioration & looseness
 - Check front & rear springs, shackles, "U" bolts and hangers for looseness, cracks and wear
 - Inspect cross members, stabilizer brackets, torque arms and equalizers
 - Check front & rear shocks/struts as applicable

WHEEL, AXLE, HUB AND TIRES

- Check tires for cuts, wear & matching (inflate to correct pressure)
- Check front wheel bearing oil levels (if appt.)

A B C TASK

- Check front steering seals & locking hubs (4x4)

BODY AND CAB

- Inspect interior of cab for damage & cleanliness
- Check operation of instruments, gauges, in-board computers, shift quadrant indicators
- Inspect wiper arms and blades
- Check windshield washer operation
- Inspect glass & mirror mountings, check window regulators, door striker plates
- Lubricate hood & door latches, hinges & door locks
- Inspect sun visors and seat belt operation
- Check operation of A/C, heater & defroster

EMERGENCY EQUIPMENT

- Check flags, first aid kits, reflectors, wheel chocks and fire extinguishers
- Complete PM sticker, record METER READING for next PM inspection and install

ROAD TEST INSPECTION

- Check steering for effort, shimmy or pulling
- Check braking action and operation
- Check clutch, clutch brake and trans. Controls
- Check for unusual noise or vibration
- Check speedometer and hour meter operation
- Check operation temperature

NOTE:
 P.M. Cycle = A-1, B-1, A-2, B-2, C
 O.E.M. = Original Equipment Manufacturer

★ Truck Parked ★

April 20/20 337199 km

- Oil change & Grease
- check bolts

Truck Back in service FEB 17/21.

FEB 17/21. 337289 km

- Grease & check bolts
- WASH.

- Full Alfa CVIP

} Gianni
MECHANIC

MAY 26/21

- Full DPF Dose
- install Automark
High Pressure fuel Pump
& filter.
- Repair TRACON. Brake ABS
switch & replace pressure
switch.
- New fuel filter.

} Gianni
RACING