

EA30-1

<u>Work Order</u>	<u>Request</u>	<u>Request Type</u>	<u>Description</u>
55159	72857	Running Repair	ACH - WASHING
55159	72819	Mobilization / Demobilizati...	ACH - AUCTION PREP
53586	70884	Running Repair	ACH - SEAT COMPRESSOR SWITCH
53906	71271	Running Repair	ACH - REMOVE TAILGATE
18163	18242	Preventative Maintenance...	TIRE INSPECTIONS
53559	70841	Running Repair	ACH - AFTERTREATMENT FAULTS
52835	70011	BIS - Pending Closure	KL - INSTALL TAILGATE
53407	70667	BIS - Pending Closure	KL - STRAIGHTEN OUT MUD FLAP BRACK...
53681	70989	Running Repair	KL - DEF HEADER, DROP BELLY PAN & D...
51784	68940	Running Repair	KL - STARTING ISSUES
51784	68941	Running Repair	KL - T/S HOOD ISSUES
54903	72464	Running Repair	VENDOR REPAIR (NORS)
51784	68942	BIS - Pending Closure	KL - REPLACE DOOR STRUT
51866	68948	BIS - Pending Closure	KL - RESAMPLE DROPBOX
51784	68856	BIS - Pending Closure	KL - PM ASSESSMENT
51257	68249	Preventative Maintenance...	2000 HR PM Service
46428	62519	BIS - Pending Closure	KL - REPAIR COOLANT LEAK
51197	68188	Running Repair	KL - REMOVE TAILGATE
50741	67655	Running Repair	KL - BROKEN GREASE WHIPS TO LIFT CYL
50234	67127	Running Repair	KL - INSTALL 2 WAY RADIO

45832	61841	Running Repair	KL - INSTALL CRC RADIO
45832	61767	Running Repair	KL - REMOVE IOL RADIO
45336	61139	BIS - Pending Closure	KL - T/S - RPR ATC FAULT
44683	60332	Running Repair	KL - T/S AIR LEAK
44623	60258	Running Repair	KL - COOLANT LEAK
43422	58783	Breakdown / Emergency	KL - REPLACE DRIVESHAFT
42826	58036	Preventative Maintenance...	KL - ***SOS ALERT*** DROP BOX SAMPLE
41107	55914	Preventative Maintenance...	KL - SOS (ENGINE)
43113	58428	Preventative Maintenance...	250 HR PM Service
43271	58611	Running Repair	KL - T/S GREASE LINES
43270	58610	BIS - Pending Closure	KL - BURNT LIGHTS
42801	58003	BIS - Pending Closure	KL - TEST CAB HEAT
42754	57947	Preventative Maintenance...	KL - CHANGE DROP BOX OIL
41681	56597	Preventative Maintenance...	500 HR PM Service
41107	56184	Running Repair	KL - FAILED EGR COOLER
41033	55831	Running Repair	KL - T/S FAULT CODES
43119	58434	Vendor Repairs	VENDOR REPAIRS (STRONGCO)
41468	56351	Preventative Maintenance...	KL - TOP UP COOLANT
41244	56072	Running Repair	KL - R&R STARTER
40221	54886	Running Repair	KL - REPLACE FRONT ACCESS SHOCK
37503	51619	Preventative Maintenance...	KL - ***SOS*** TRANSMISSION
40222	54887	Running Repair	KL - T/S COOLANT LEAK
40132	54790	Preventative Maintenance...	250 HR PM Service
38606	52976	Preventative Maintenance...	1000 HR PM Service
38506	52859	BIS - Pending Closure	KL - T/S ENGINE FAN NOT WORKING

37768	51966	Running Repair	KL - HOOD HARD TO CLOSE
34207	47169	BIS - Pending Closure	CEN - LOW VOLTAGE
37689	51828	BIS - Pending Closure	KL - CAB LIGHTS NOT WORKING
37786	51985	Preventative Maintenance...	250 HR PM Service
37805	52005	BIS - Pending Closure	KL - RADIO SWAP
37755	51899	BIS - Pending Closure	KL - REPLACE LIGHTS (SIGNAL/LIGHT BU...
36864	50822	BIS - Pending Closure	KL - UNIT WONT START
36468	50069	Preventative Maintenance...	KL - 500 HR PM Service
36361	50254	Running Repair	KL - T/S NO POWER ISSUES
35146	48666	Preventative Maintenance...	CEN - DROP BOX FLUSH
36143	49955	BIS - Pending Closure	KL - INSTALL TAILGATE
34948	48425	Running Repair	CEN - TAIL GATE PREP
34948	48376	Running Repair	CEN - OUTGOING INSPECTION
34207	47818	Breakdown / Emergency	CEN - CRACKED DEF TANK
30125	41538	Running Repair	ML - T/S FUEL KICK BACK
33923	46681	Running Repair	CEN - INCOMING INSPECTION
30484	41993	BIS - Pending Closure	ML - T/S ACTIVE CODES
29531	40857	BIS - Pending Closure	ML - OUTGOING INSPECTION
29531	43874	Running Repair	ML - COOLANT LEAK
29531	42954	Running Repair	ML - REPLACE RS ENGINE HYD HOSE
31242	42924	Breakdown / Emergency	ML - REPAIR DROP BOX MOUNT BOLTS
29531	42925	Running Repair	ML - REPLACE LOOSE DRIVESHAFT BOLTS
29825	41201	Running Repair	ML - BOOST UNIT
29939	41348	Running Repair	ML - T/S DEF SMELL IN CAB
29801	41171	Running Repair	ML - T/S CODES

29801	41171	Running Repair	ML - T/S CODES
29376	40630	Preventative Maintenance...	250 HR PM Service
29279	40526	Running Repair	FIR - LEAKING HOSE
28455	39615	Running Repair	FIR - T/S FUEL CODES
28833	40033	BIS - Pending Closure	FIR - PARK BRAKE CODE
27692	38720	Preventative Maintenance...	2000 HR PM Service
27417	38338	Running Repair	FIR - REGEN REQUEST
24251	34557	Breakdown / Emergency	FIR - COOLANT LEAK
24250	34556	Running Repair	FIR - FAILED STARTER
19530	28199	Running Repair	FIR - IGNITION LOOSE
19530	28202	Running Repair	FIR - BENT HANDRAIL
19530	28195	Running Repair	FIR - BRAKE COOLING HOSE CRACKING
19530	29098	Running Repair	FIR - INSTALL RIGHT SPILL GUARD HINGE
19530	28198	Running Repair	FIR - LH GREASE WHIP CRACKED
19530	28194	Running Repair	FIR - CHARGE AIR PRESSURE SENSOR B...
19530	28201	Running Repair	FIR - LEAKING HOIST HOSE
19530	28197	Running Repair	FIR - BROKEN LOUVERS
19530	28200	Running Repair	FIR - BOX EAR BENT
19530	28196	Running Repair	FIR - GRILLE CRACKED
19530	28343	Running Repair	FIR - TOP UP FLUIDS
19530	28135	Running Repair	FIR - OUTGOING INSPECTION
19260	26287	Preventative Maintenance...	250 HR PM Service
17097	24583	Preventative Maintenance...	FIR - 500 HR PM
18648	26853	Running Repair	FIR - WOBBLY SEAT

<u>18648</u>	<u>26853</u>	Running Repair	FIR - WOBBLY SEAT
<u>18647</u>	<u>26852</u>	Running Repair	FIR - STARTING ISSUES
<u>17209</u>	<u>24733</u>	Running Repair	CEN - REPLACE CRACKED FUEL BREATHER
<u>17547</u>	<u>25191</u>	Running Repair	FIR - COOLANT LEAK
<u>17673</u>	<u>25384</u>	Running Repair	FIR - NO START
<u>17810</u>	<u>25598</u>	Running Repair	FIR - FROZEN PARK BRAKE
<u>16952</u>	<u>24390</u>	Running Repair	FIR - STEERING CHECKS
<u>16952</u>	<u>24365</u>	Breakdown / Emergency	FIR - INCOMING INSPECTION
<u>17501</u>	<u>25143</u>	Running Repair	FIR - BRAKE CHECKS
<u>16952</u>	<u>24430</u>	Running Repair	FIR - COOLANT LEAK
<u>16952</u>	<u>24368</u>	Running Repair	FIR - INSTALL SENSOR FOR PARK BRAKE
<u>16952</u>	<u>24369</u>	Running Repair	FIR - INSTALL SPILL GUARD
<u>16952</u>	<u>24367</u>	Running Repair	FIR - RE-SEAL REAR WINDOW
<u>16952</u>	<u>24366</u>	Running Repair	FIR - EXPIRED OPERATOR/JUMP SEAT BE...
<u>16952</u>	<u>24370</u>	Running Repair	FIR - EXPIRED FIRE EXTINGUISHER
<u>16952</u>	<u>24429</u>	Running Repair	FIR - GREASE UNIT
<u>16611</u>	<u>23874</u>	Preventative Maintenance...	FOS - INSPECTION
<u>16372</u>	<u>23477</u>	Running Repair	FOS - HYD LEAK
<u>15103</u>	<u>21633</u>	Preventative Maintenance...	250 HR PM Service
<u>14107</u>	<u>22318</u>	Running Repair	FOS - WEAK BLOWER
<u>14107</u>	<u>20149</u>	Running Repair	FOS - HORN NOT WORKING
<u>14107</u>	<u>22896</u>	Running Repair	FOS - STEERING CODE
<u>14107</u>	<u>21377</u>	Running Repair	FOS - DUMP BREAK FAULT
<u>14107</u>	<u>22103</u>	Running Repair	FOS - REPAIR 2 WAY

14107	20706	Running Repair	FOS - SMELL IN CAB
12905	20066	Preventative Maintenance...	FOS - CHANGE AIR FILTERS
12905	19603	Running Repair	FOS - FIX WIRING FOR SEAT AND MIRRO...
12440	17746	Running Repair	FOS- E-BRAKE INDICATOR LIGHT ON
12440	17530	Running Repair	FOS- AUTO LOWER FOR BOX NOT WORK...
12440	17745	Running Repair	FOS- AIR LEAK ON SEAT
12440	17534	Running Repair	FOS- CABIN AIR FILTER REPLACEMENT
12440	17529	Running Repair	FOS - T/S INTERMITTENT 6 WHEEL DRIVE
12440	17614	Running Repair	FOS - REGEN FAULT
12440	17616	Running Repair	FOS - SCR CODE
11866	16581	Preventative Maintenance...	1000 HR PM Service
10615	15911	Running Repair	FOS - FINAL DRIVE
10615	15723	Running Repair	FOS - ENGINE
10615	14739	Running Repair	FOS - ELECTRICAL
10640	14703	Preventative Maintenance...	250 HR PM Service
10615	14661	Running Repair	FOS - CAB AND BODY
9844	13412	Preventative Maintenance...	500 HR PM Service
2773	6171	Running Repair	CAB AND BODY
2773	4068	Running Repair	WASH
2773	3922	BIS - Pending Closure	TIRES
2773	4551	Running Repair	ENGINE
2773	3262	BIS - Pending Closure	ACH-TROUBLESHOOT ELECTRICAL
2773	5812	Running Repair	ACH-HYD LEAKS
2773	6199	Running Repair	INSPECTION
1493	1783	Preventative Maintenance...	250 HR PM Service