

EA30-2

Work Order	Request	Request Type	Description
55753	73510	BIS - Pending Closure	BAS - REMOVE BUCKET (AUCTION)
49766	66589	Running Repair	BAS - REMOVE BUCKET
55245	72912	Running Repair	BAS - REPAIR HOOD PROP ROD
55153	72813	Running Repair	BAS - WIPER NOT WORKING
49703	66525	Running Repair	BAS - TARP IN UNIT
55152	72949	Running Repair	BAS - AC DIAGNOSTIC ISSUES
55152	72812	Running Repair	BAS - AC REPAIRS
48249	64810	Running Repair	POP - OUTGOING INSPECTION
53911	71279	BIS - Pending Closure	BAS - TIGHTEN LH TRACK
53612	70912	BIS - Pending Closure	BAS - CHECK BROKEN GREASE LINES
54347	71812	Preventative Maintenance...	BAS - 250HR SERVICE
54326	71786	Running Repair	BAS - REPLACE FUEL HOSE
53497	70767	Running Repair	BAS - WEDGE AND BUCKET WORN
54285	71796	BIS - Pending Closure	BAS - WIPERS NOT WORKING
54285	71739	Running Repair	BAS - INCOMING INSPECTION
54305	71760	Running Repair	BAS - BROKEN DOOR
53223	70448	Running Repair	BAS - REMOVE BUSH GUARD
53224	70449	Running Repair	BAS - LEAKING FINAL DRIVE
50980	67946	Running Repair	BAS - REPAIR THERMOSTAT
52631	69783	Running Repair	BAS - T/S LOW PRESSURE CODES
52841	70016	Preventative Maintenance...	BAS - 2000HR SERVICE
49340	66131	Running Repair	BAS - T/S ENGINE CODES
51143	68135	Running Repair	BAS - REPLACE BEACON LIGHTS
50576	67464	Running Repair	BAS - T/S FUEL GAUGE
50190	67082	Running Repair	BAS - COOLANT LEAK
51267	68259	Preventative Maintenance...	250 HR PM Service
45038	60825	Running Repair	FIR - RH TRACK FRAME STEPS BENT
45038	62432	Running Repair	POP - T/S ENGINE OIL LEAK

50575	67463	Running Repair	BAS - REPLACE RADIO
49599	66411	Running Repair	BAS - T/S WINDSHIELD WIPER NOT WO...
47483	63852	Running Repair	POP - INSTALL ICE LUGS
49690	66512	Running Repair	BAS - BLOWN FUEL HOSE
48249	65811	Running Repair	POP - FUEL FILTER LEAK
48249	65812	Running Repair	POP - REPLACE BATTERIES
45069	60828	Running Repair	FIR - INSTALL THUMB
46616	62768	Running Repair	POP - FRONT WINDOW GUARD
48249	64891	Running Repair	POP - REPAIR HANDRAILS & WINDOW G...
45038	60822	Running Repair	FIR - REPLACE VENT COVER
45038	60824	Running Repair	FIR - REPLACE LH BEACON
45038	60826	Running Repair	FIR - LH REAR CATWALK BENT
45038	62893	Running Repair	POP - BENT SKID PAN
45038	62658	Running Repair	POP - T/S HYD LEAK
45038	60823	Running Repair	FIR - REPLACE RH #6 BOTTOM ROLLER
46316	62387	Running Repair	FIR - BOOST UNIT
44615	60250	Running Repair	FIR - T/S BOOST LEAK
45038	60781	Running Repair	FIR - OUTGOING INSPECTION
45038	60821	Running Repair	FIR - ADJUST HYD CABINET DOOR LATCH
45326	61129	Preventative Maintenance...	500 HR PM Service
44475	60619	Breakdown / Emergency	FIR - FAILED ALTERNATOR
44873	60559	Running Repair	FIR - T/S BATTERIES

41821	56766	Running Repair	FIR - T/S FUEL ISSUES
43596	58988	Running Repair	FIR - T/S HYD LEAK
43320	58670	BIS - Pending Closure	FIR - T/S ENGINE OIL LEAK
43133	42735	Preventative Maintenance...	250 HR PM Service
40956	55748	Running Repair	FIR - T/S SWING NOISE
39405	53949	Running Repair	FIR - GREASE ZERK LEAKING
39404	53948	Running Repair	FIR - FIRE EXT REPLACEMENT
39586	54141	BIS - Pending Closure	FIR - T/S - RPR A/C
39518	54072	Running Repair	FIR - T/S - RPR FUEL ISSUE
39447	53991	Running Repair	FIR - INCOMING INSPECTION
39173	53695	Running Repair	BAS - NO TAG ON FIRE EXT
39173	53696	Running Repair	BAS - SEATBELT EXPIRED
39173	53689	Running Repair	BAS - OUTGOING INSPECTION
34665	47957	BIS - Pending Closure	BAS - UNDERCARRIAGE REPAIRS
36158	49971	BIS - Pending Closure	BAS - PM ASSESSMENT
37709	51849	Running Repair	BAS - T/S DOOR SEAL
38181	52456	Running Repair	BAS - ATTACHMENT SWAP
38147	52419	Preventative Maintenance...	1000 HR PM Service
38020	52261	BIS - Pending Closure	BM - BUCKET SWAP
37710	51850	Running Repair	BAS - INSTALL HOE PAC
37828	52030	Running Repair	BAS - T/S LIGHTS
36158	51318	Running Repair	BAS - MAIN BOOM PIN REPAIRS
36044	49829	Running Repair	BAS - BUCKET SWAP
35893	49661	Running Repair	BAS - SWAP CUB TO HOEPACK

<u>35109</u>	<u>48614</u>	Running Repair	BAS - REPLACE RELIEF VALVE O-RING
<u>35907</u>	<u>49675</u>	Running Repair	BAS - REMOVE HOE PACK
<u>33855</u>	<u>46581</u>	Running Repair	BAS - REPAIR LIGHT ARM ON HOOD
<u>35765</u>	<u>49514</u>	Running Repair	BAS - SWAP CUB TO HOE PACK
<u>35703</u>	<u>49437</u>	Running Repair	BAS - SWAP HOE PACK TO CUB
<u>35350</u>	<u>48965</u>	Preventative Maintenance...	250 HR PM Service
<u>35497</u>	<u>49170</u>	Running Repair	BAS - SWAP PACKER FOR CUB
<u>35112</u>	<u>48617</u>	Running Repair	BAS - REPLACE MISSING ENGINE BRACE
<u>34985</u>	<u>48445</u>	Running Repair	BAS - ATTACHMENT SWAP
<u>34967</u>	<u>48415</u>	Running Repair	BAS - FAN PUMP LEAK
<u>34545</u>	<u>47752</u>	Running Repair	BAS - ATTACH SWAP
<u>34843</u>	<u>48207</u>	Running Repair	BAS - ATTACHMENT SWAP
<u>34297</u>	<u>47320</u>	Running Repair	BAS - BUCKET SWAP
<u>33729</u>	<u>46415</u>	Running Repair	BAS - TRACK SWAP
<u>33614</u>	<u>46261</u>	Preventative Maintenance...	500 HR PM Service
<u>34030</u>	<u>46831</u>	Running Repair	BAS - HOEPAC HOSE REPLACEMENT
<u>28811</u>	<u>40007</u>	BIS - Pending Closure	BAS - BOOM/STICK REPAIRS
<u>33980</u>	<u>46755</u>	Running Repair	BAS - ATTACH SWAP
<u>33980</u>	<u>46851</u>	Running Repair	BAS - ATTACH SWAP *JOB COST*
<u>28315</u>	<u>39441</u>	BIS - Pending Closure	BAS - T/S ENGINE OIL LEAK
<u>33283</u>	<u>45778</u>	Running Repair	BAS - TRACK REPAIRS
<u>33180</u>	<u>45630</u>	Running Repair	BAS - BUCKET SWAP
<u>32620</u>	<u>44860</u>	Running Repair	BAS - HOOD RETENTION ARM REPAIRS
<u>32385</u>	<u>44550</u>	Running Repair	BAS - T/S TRACKING
<u>32200</u>	<u>44261</u>	Running Repair	BAS - BUCKET SWAP

32261	44359	Running Repair	BAS - MISSING RETENTION ARM COTTER...
29383	40637	Preventative Maintenance...	250 HR PM Service
30861	42558	Running Repair	BAS - CRACKS IN CARBODY
30861	42556	Running Repair	BAS - FRONT STEP BENT
30861	42554	Running Repair	BAS - SPROCKETS WORN
30861	42557	Running Repair	BAS - 6 CARRIER ROLLERS FLAT
28363	39500	Running Repair	BAS - STICK CYLINDER REPAIRS
30861	42555	Running Repair	BAS - BOX LIGHT OUT
30861	42450	Running Repair	BAS - INCOMING INSPECTION
28589	39757	BIS - Pending Closure	FIR - REPLACE RIPPER PIN
29465	40771	Running Repair	FIR - REPLACE HOOD HINGES
30217	41657	Running Repair	FIR - OUTGOING INSPECTION
30264	41729	Running Repair	FIR - BUCKET SWAP
30003	41418	Running Repair	FIR - BUCKET SWAP
29691	41049	Running Repair	FIR - HYD LEAK
29067	40297	Running Repair	FIR - REPLACE WEDGE BOLTS
29278	40525	Running Repair	FIR - REPLACE RIPPER TOOTH
29454	40760	Running Repair	FIR - BUCKET SWAP
29227	40467	Running Repair	FIR - REPLACE BUCKET TEETH
29066	40295	Running Repair	FIR - BUCKET SWAP
29175	40410	Running Repair	FIR - REPLACE RIPPER TOOTH
28234	39349	Running Repair	FIR - ENGINE HEATER REPAIRS

29012	40236	Running Repair	FIR - REPLACE RIPPER TOOTH
28355	39491	Running Repair	FIR - WELDING REPAIRS (BUCKET CRAC...
28916	40130	Running Repair	FIR - SWAP RIPPER TO BUCKET
28588	39756	Running Repair	FIR - BROKEN HOOD LATCH
28949	40166	Running Repair	FIR - REPLACE RIPPER TOOTH
28923	40137	Running Repair	FIR - BUCKET SWAP
28814	40010	BIS - Pending Closure	FIR - WELDING REPAIRS (TRACK PIN)
28858	40063	Running Repair	FIR - REPLACE TOOTH
28856	40061	Running Repair	FIR - RIPPER SWAP
28710	39888	Running Repair	FIR - REPLACE RIPPER TOOTH
28332	39468	Running Repair	FIR - BUCKET SWAP
28682	39860	Running Repair	FIR - ENGINE OIL LEAK
28296	39420	Running Repair	FIR - MISSING LOOSE WEDGE BOLTS
28430	39579	Running Repair	FIR - RE & RE RIPPER TEETH
28233	39348	Running Repair	FIR - ATTACHMENT SWAP
28042	39122	Running Repair	FIR - BUCKET SWAP
27827	38879	Running Repair	FIR - TIGHTEN QUICK ATTACH WEDGE B...
27569	38533	Running Repair	FIR - REPLACE FUEL PRESSURE SENSOR
27627	38596	BIS - Pending Closure	FIR - HYD OIL LEAK ON FAN PUMP
26247	36959	Preventative Maintenance...	2000 HR PM Service
27226	38112	Running Repair	FIR - REPLACE BUCKET TEETH
26953	37787	Running Repair	FIR - BUCKET SWAP
26366	37087	Running Repair	FIR - SWAP DIG TO CUB BUCKET

25931	36628	Running Repair	FIR - REPLACE CAB MIRROR
26197	36924	Running Repair	FIR - SWAP CUB TO DIG BUCKET
26084	36794	Running Repair	FIR - SWAP DIG TO TRENCH BUCKET
25930	36627	Running Repair	FIR - SWAP CUB TO DIG
25888	36581	Running Repair	FIR - LOOSE WEDGE BOLTS
25887	36580	Running Repair	FIR - T/S HOOD STAY
25009	35510	Breakdown / Emergency	FIR - LEAKING STICK CYLINDER
24707	35059	Running Repair	FIR - BROKEN LEFT HAND JOYSTICK
24865	35398	Running Repair	FIR - SWAP RIPPER TO CUB
24865	35351	Running Repair	FIR - SWAP BUCKET TO RIPPER
24865	35284	Running Repair	FIR - SWAP GET
24930	35365	Running Repair	FIR - TIGHTEN TRACKS
24812	35196	Running Repair	FIR - FLIP BUCKET EDGE
23578	33738	Breakdown / Emergency	FIR - NO START
23527	33685	Running Repair	FIR - BOOST UNIT
23373	33512	Running Repair	FIR - BOOST UNIT
23059	33126	BIS - Pending Closure	FIR - ADJUST TRACK TENSION
22792	32761	Running Repair	BAS - REPLACE DIPSTICK
22501	32406	Running Repair	BAS - WELDING REPAIRS
22506	32411	Running Repair	BAS - HYD LEAK
21431	32820	Running Repair	BAS - REPAIR WIRING FOR P.A.S.S
21431	31007	Running Repair	BAS - OUTGOING INSPECTION
22355	32212	BIS - Pending Closure	BAS - CRACKED VENT HOSE
22489	32392	Running Repair	BAS - REPLACE CAB LOUVERS

22488	32391	Running Repair	BAS - PIN MEASUREMENTS
21431	31719	BIS - Pending Closure	BAS - REPAIR FAN PUMP
21431	31100	Running Repair	BAS - HYD LEAKS
21838	31555	Running Repair	BAS - ALTERNATOR GROUND WIRE REPA...
21431	31089	Running Repair	BAS - REPLACE WIPER
21431	31080	Running Repair	BAS - REPAIR HOOD LATCH
21431	31102	Running Repair	BAS - REPLACE SEATBELT
21431	31078	Running Repair	BAS - ADJUST TRACKS
21431	31101	Running Repair	BAS - CHANGE AIR FILTERS
21431	31079	Running Repair	BAS - T/S BEACON LIGHT
20387	29667	Preventative Maintenance...	BAS - 500 HR PM
20360	29624	Running Repair	BAS - KICK WINDOW
20890	30289	Running Repair	BAS - T/S COOLANT LEAK
19979	29012	Running Repair	BAS - SWAP BUCKET DUE TO BROKEN ED...
19979	28957	Running Repair	BAS - REPLACE SERRATED EDGE
19611	28277	Running Repair	BAS - BUCKET SWAP
18958	27318	Running Repair	BAS - REPLACE MIC
19192	27663	Breakdown / Emergency	BAS - OIL LEAK NEAR PUMP DRIVE
18847	27154	Running Repair	BAS - T/S CAB AND BOOM LIGHTS
17747	25495	Running Repair	BAS - REPLACE CAB LIGHT
17781	25548	Breakdown / Emergency	BAS - REPLACE ENGINE HOOD HINGES
16634	23912	Breakdown / Emergency	BAS - ENGINE SWAP (BRANDT WARRANTY)
16479	23639	Running Repair	BAS - BENT CATWALK & CRACKS

<u>16479</u>	<u>23638</u>	Running Repair	BAS - REPLACE BACK UP ALARM
<u>16479</u>	<u>23637</u>	Running Repair	BAS - PUMP DRIVE HOSE LEAKING
<u>16479</u>	<u>23636</u>	Running Repair	BAS - OUTGOING INSPECTION
<u>16172</u>	<u>23144</u>	Preventative Maintenance...	250 HR PM Service
<u>15800</u>	<u>22609</u>	Running Repair	BAS - HORN NOT WORKING
<u>14537</u>	<u>20765</u>	Breakdown / Emergency	BAS - STICK TO QUICK CHANGE PIN BRO...
<u>14794</u>	<u>21160</u>	Running Repair	BAS - BEACON LIGHT NOT WORKING
<u>14711</u>	<u>21042</u>	Running Repair	BAS - FRAME/HANDRAIL INSPECTION
<u>14152</u>	<u>20238</u>	Running Repair	BAS - HYD LEAK ON MAIN VALVE BODY
<u>14151</u>	<u>20237</u>	Running Repair	BAS - DIAG CODES
<u>13403</u>	<u>18954</u>	Breakdown / Emergency	BAS - FINAL DRIVE REPAIRS
<u>13188</u>	<u>18630</u>	Running Repair	BAS - DIAGNOSE NO START
<u>10674</u>	<u>14770</u>	Running Repair	BAS - R/S FINAL DRIVE LEAKING
<u>13162</u>	<u>18596</u>	Running Repair	BAS - PULLS TO THE LEFT
<u>13015</u>	<u>18414</u>	Running Repair	BAS - CHECK ENGINE LIGHT IS ON
<u>12207</u>	<u>17198</u>	Running Repair	BAS - LEFT HAND JOYSTICK FAILED
<u>12805</u>	<u>18073</u>	Running Repair	BAS - INSPECT PIN RETAINER BOLTS
<u>11968</u>	<u>16717</u>	Preventative Maintenance...	1000 HR PM Service
<u>12206</u>	<u>17197</u>	Running Repair	BAS - FRONT/REAR CAB LIGHTS NOT WO...
<u>12205</u>	<u>17196</u>	Running Repair	BAS - TRAVEL ISSUES
<u>10675</u>	<u>14771</u>	Running Repair	BAS - NO HORN
<u>11886</u>	<u>16605</u>	Breakdown / Emergency	BAS - VGT ACTUATOR FAILURE
<u>10673</u>	<u>14769</u>	Running Repair	BAS - HOOD LATCH IS BROKEN
<u>11171</u>	<u>15505</u>	Running Repair	BAS - INSTALL RADIO MIC

8449	10952	BIS - Pending Closure	BAS - TOPPED UP HYD. OIL
9399	12638	BIS - Pending Closure	BAS - REPLACE BOOM LIGHT
8682	11365	BIS - Pending Closure	BAS - T/S HORN
8389	10873	BIS - Pending Closure	BAS - DIG BUCKET REMOVAL
8850	11707	BIS - Pending Closure	BAS - REPLACE WEDGE BOLT
9357	12586	BIS - Pending Closure	BAS- TIGHTENED TRACKS
9281	12445	BIS - Pending Closure	BAS - HYD LEAK ON HOSE TO SWING DR...
9018	12002	BIS - Pending Closure	BAS - 250HR SERVICE
7225	8974	BIS - Pending Closure	BAS- SEAT DOESNT GET AIR
7226	8975	BIS - Pending Closure	BAS- AC DOES NOT WORK
7010	8664	BIS - Pending Closure	BAS- ATTACHEMENT FOR THUMB CYL
5886	7003	BIS - Pending Closure	BAS - UNIT IS BEING DELETED
6106	7222	BIS - Pending Closure	BAS- ACCESS AUTH
3361	3976	Running Repair	BUCKET CYL. HAS A LEAK
3751	4467	BIS - Pending Closure	ENGINE IDLES ROUGH
5380	6450	BIS - Pending Closure	BAS - BUCKET REMOVAL
5016	6019	BIS - Pending Closure	BAS- TRACK ADJUSTERS
5751	6870	BIS - Pending Closure	BAS - OIL LEAK
4495	5341	Running Repair	LEAK FROM HYD
5454	6529	Running Repair	BAS- REPLACE L/S MIRROR, TIGHTEN RH...
5455	6530	Running Repair	BAS- REPLACE ENGINE OIL DIPSTICK TUBE
3578	4287	Running Repair	MASTER SWITCH BROKEN
5448	6523	Running Repair	BAS- ACCESS AUTH
5601	6733	Running Repair	BAS- EGR COOLER INSTALL, HOOK UP C...

4673	5617	BIS - Pending Closure	NEEDS NEW SEAT
5493	6573	BIS - Pending Closure	BAS- TRAVEL LINES LEAKING
4674	5618	Running Repair	2 WAY RADIO NOT WORKING
5494	6574	Running Repair	BAS- CAB WINDOW SCRATCHED
5540	6673	BIS - Pending Closure	BAS- REPLACE ROLLER/IDLER
5597	6729	BIS - Pending Closure	BAS- REMOVE AND REPLACE L/H REAR C...
4940	5938	BIS - Pending Closure	BAS-REMOVE HOOD
4675	5619	BIS - Pending Closure	NO BLOCK HEATER
5273	6287	BIS - Pending Closure	BAS - GENERAL INSPECTION
4941	5939	BIS - Pending Closure	BAS-PUT TRACK BACK ONTO TOP CARRI...
5176	6184	Breakdown / Emergency	BAS - FAILED TRAVEL MOTOR LINE
3362	3977	BIS - Pending Closure	REQUIRES WIPERS
4825	5764	Breakdown / Emergency	DERATING
4849	5788	BIS - Pending Closure	500 HR PM Service
4642	5583	Running Repair	DEF ERRORS
4498	5344	BIS - Pending Closure	COMEALONG TO PULL BENT CATWALK
4491	5337	BIS - Pending Closure	REPAIRED SHORT IN WIRING
4478	5324	BIS - Pending Closure	TIGHTEN BOTH TRACKS
4422	5268	BIS - Pending Closure	L/H TRACK
4427	5273	BIS - Pending Closure	INSTALL CRC DECALS
4299	5138	BIS - Pending Closure	TRACK IS LOOSE
4019	4754	Preventative Maintenance...	250 HR PM Service
3818	4537	BIS - Pending Closure	ADJUSTED TRACKS
3803	4518	BIS - Pending Closure	TIGHTEN TRACKS

<u>3549</u>	<u>4255</u>	Running Repair	ADJUST TRACKS
<u>3321</u>	<u>3940</u>	Running Repair	INSTALL RIPPER SHANK/REBUILD REQ'D
<u>3365</u>	<u>3980</u>	BIS - Pending Closure	HOOD ISSUES - SHIFTED/WON'T OPEN
<u>3451</u>	<u>4076</u>	BIS - Pending Closure	HORN NOT WORKING
<u>3415</u>	<u>4033</u>	BIS - Pending Closure	ADJUSTED TRACKS
<u>2933</u>	<u>3480</u>	BIS - Pending Closure	BLOCK HEATER REPLACED
<u>2363</u>	<u>2827</u>	BIS - Pending Closure	BAS - REPAIRED HANDRAIL
<u>3304</u>	<u>3914</u>	BIS - Pending Closure	INSTALL BUCKET
<u>3336</u>	<u>3955</u>	BIS - Pending Closure	INSTALL WEDGE BUCKET
<u>3335</u>	<u>3954</u>	BIS - Pending Closure	CHIP ICE FROM STEPS
<u>2362</u>	<u>2826</u>	BIS - Pending Closure	BAS - INSTALL WINTER FRONT
<u>2405</u>	<u>2869</u>	BIS - Pending Closure	BAS - ENGINE CODES
<u>3123</u>	<u>3747</u>	Running Repair	DIMMER SWITCH NOT WORKING
<u>2800</u>	<u>3290</u>	Running Repair	BAS - MASTER SWITCH IS BROKEN
<u>2954</u>	<u>3563</u>	BIS - Pending Closure	CUTTING EDGES
<u>3291</u>	<u>2886</u>	BIS - Pending Closure	2000 HR PM Service
<u>3285</u>	<u>3900</u>	BIS - Pending Closure	REPLACE RIPPER TOOTH
<u>3168</u>	<u>3795</u>	BIS - Pending Closure	RIPPER TOOTH PIN
<u>3163</u>	<u>3790</u>	BIS - Pending Closure	ADJUSTED TRACKS
<u>3148</u>	<u>3778</u>	Running Repair	TIGHTENED COOLANT CLAMPS
<u>3132</u>	<u>3762</u>	Running Repair	BUCKET SWAP
<u>3131</u>	<u>3761</u>	Running Repair	RADIO WIRING ISSUE
<u>3114</u>	<u>3738</u>	Running Repair	BROKEN WINDOW
<u>3115</u>	<u>3739</u>	Running Repair	BUCKET SWAP

3066	3683	BIS - Pending Closure	REPLACED RIPPER TOOTH/PIN/RETAINER
3095	3715	Running Repair	BUCKET SWAP
3020	3630	Running Repair	RIPPER PIN WALKING OUT/WEDGE BOLT...
3002	3611	Running Repair	CLEAN OUT BREATHER TUBE (FUEL TANK)
3032	3642	Running Repair	INSTALL NEW RIPPER TOOTH/PIN AND R...
2975	3584	Running Repair	REPLACE RIPPER TOOTH/PIN/RETAINER
2936	3483	BIS - Pending Closure	NEEDS RIPPER SHANK
2849	3339	Breakdown / Emergency	FAILED DEF MANIFOLD
2450	2915	Running Repair	BAS - HORN INTERMITTENT
2636	3119	Running Repair	BAS - REPLAC. HEATER HOSES
2524	2983	Running Repair	BAS - NO START - BOOSTED UNIT
2506	2963	BIS - Pending Closure	BAS - CHANGED COOLANT SURGE TANK
2108	2548	BIS - Pending Closure	BAS - TRACK LINK BROKEN
2356	2820	BIS - Pending Closure	BAS - ALTERNATOR PULLEY AND BELT
2380	2844	Running Repair	BAS - NO START
2224	2554	Preventative Maintenance...	250 HR PM Service
2224	2699	Preventative Maintenance...	500 HR PM Service
2181	2664	Running Repair	BAS - REPLACE DAMAGED MASTER SWIT...
2100	2538	Running Repair	BAS - COOLANT LEAK
1997	2438	Running Repair	BAS - MISSING MASTER KEY
1810	2189	BIS - Pending Closure	BAS - ADJUSTED TRACKS/CHANGED FILL...
1560	1881	Breakdown / Emergency	BAS - ENGINE DERATE
1041	1062	Preventative Maintenance...	250 HR PM Service
1537	1851	Preventative Maintenance...	250 HR PM Service