

Date	Work Description	Plant No	Work Type
06/03/19	Mobilisation of EX38	EX38	PM - Plant Maintenance
07/03/19	Mobilisation of EX38	EX38	PM - Plant Maintenance
07/03/19	Mobilise EX38	EX38	PM - Plant Maintenance
09/03/19	Install H-Link	EX38	PM - Plant Maintenance
09/03/19	Work on EX38	EX38	PM - Plant Maintenance
11/03/19	Inspect Bucket Pin & Find Parts & Possible Wrong P	EX38	PM - Plant Maintenance
11/03/19	Mobilise EX38	EX38	PM - Plant Maintenance
12/03/19	Mobilisation, Fit Pannels, Fit Bucket & Grease Lin	EX38	PM - Plant Maintenance
14/03/19	Inspect & Clean up	EX38	PM - Plant Maintenance
14/03/19	Check Over & Top up Hyd Oil	EX38	PM - Plant Maintenance
15/03/19	Remove Boom Cylinder	EX38	PM - Plant Maintenance
15/03/19	Inspections, Check Oils, Tighten Grease Lines	EX38	PM - Plant Maintenance
15/03/19	Remove Boom Cylinder, Load & take to town	EX38	PM - Plant Maintenance
18/03/19	Remoce Boon Cylinder hoses Reseal & Clean Pin Up	EX38	PM - Plant Maintenance
22/03/19	Set up tp fit boom cylinder	EX38	LMF - Labour Maintenance Fitter
22/03/19	Plant Maintenance	EX38	LMF - Labour Maintenance Fitter
23/03/19	Fit RHS boom cylinder and grease top up	EX38	LMF - Labour Maintenance Fitter
23/03/19	Put boom cylinder on boom	EX38	LMF - Labour Maintenance Fitter
23/03/19	Plant maintenance	EX38	LMF - Labour Maintenance Fitter
27/03/19	Fix grease line on digger	EX38	LMF - Labour Maintenance Fitter
16/04/19	Yaamba Plant Maintenance	EX38	LMF - Labour Maintenance Fitter
23/04/19	Yaamba Plant Maintenance	EX38	Manager
23/04/19	Yaamba Plant Maintenance	EX38	LMF - Labour Maintenance Fitter
02/05/19	Yaamba Plant Maintenance	EX38	LMF - Labour Maintenance Fitter
06/05/19	Yaamba Plant Maintenance	EX38	LMF - Labour Maintenance Fitter
07/05/19	Yaamba plant maintenance	EX38	LMF - Labour Maintenance Fitter
09/05/19	Yaamba Plant Maintenance	EX38	LMF - Labour Maintenance Fitter
09/05/19	Yaamba Plant Maintenance	EX38	LMF - Labour Maintenance Fitter
10/05/19	Yaamba Plant Maintenance	EX38	LMF - Labour Maintenance Fitter
10/05/19	Yaamba Plant Maintenance	EX38	LMF - Labour Maintenance Fitter
10/05/19	Yaamba plant maintenance	EX38	LMF - Labour Maintenance Fitter
13/05/19	Yaamba Plant Maintenance	EX38	LMF - Labour Maintenance Fitter
15/05/19	Yaamba Plant Maintenance	EX38	LMF - Labour Maintenance Fitter
15/05/19	Yaamba plant maintenance	EX38	LMF - Labour Maintenance Fitter
16/05/19	Yaamba Plant Maintenance	EX38	LMF - Labour Maintenance Fitter
24/05/19	Yaamba Plant Maintenance	EX38	LMF - Labour Maintenance Fitter
27/05/19	Yaamba plant maintenance	EX38	LMF - Labour Maintenance Fitter
27/05/19	Yaamba plant maintenance	EX38	LMF - Labour Maintenance Fitter
04/06/19	Yaamba Plant Maintenance	EX38	LMF - Labour Maintenance Fitter
04/06/19	Yaambna Plant Maintlenance	EX38	LMF - Labour Maintenance Fitter
27/06/19	Yaamba Plant Maintenance	EX38	LMF - Labour Maintenance Fitter
18/07/19	Ready EX38 to go to KG2	EX38	LMF - Labour Maintenance Fitter
18/07/19	Ready EX38 to go to KG2	EX38	LMF - Labour Maintenance Fitter
19/07/19	EX38 Ready for Transfer to KG2	EX38	LMF - Labour Maintenance Fitter
23/07/19	EX38 Set up	EX38	LMF - Labour Maintenance Fitter
14/08/19	Yaamba Plant Maintenance	EX38	LMF - Labour Maintenance Fitter
05/09/19	OMS Plant Maintenance	EX38	LMF - Labour Maintenance Fitter
06/09/19	KG2 Plant Maintenance	EX38	LMF - Labour Maintenance Fitter
20/09/19	KG2 Plant maintenance	EX38	LMF - Labour Maintenance Fitter
26/09/19	EX38 - Change out bucket teeth	EX38	PM - Plant Maintenance
01/10/19	EX38 Inspect oil leak at boom, remove cylinder	EX38	PM - Plant Maintenance
02/10/19	TA for Ex38 Repairs	EX38	PM - Plant Maintenance
02/10/19	EX38 Remove boom lift cylinders	EX38	PM - Plant Maintenance
14/10/19	EX38 inspect HYD leak,pick up parts	EX38	PM - Plant Maintenance
15/10/19	EX38 - Remove & Replace blown hose	EX38	PM - Plant Maintenance
07/11/19	EX38 - Inspect oil weap at stick cylinder	EX38	PM - Plant Maintenance
12/11/19	EX38 - Reseal leaking Hose @ Slew motor	EX38	PM - Plant Maintenance
14/11/19	TA Fitter	EX38	PM - Plant Maintenance
20/11/19	EX38 - Inspect oil leak @ LH Drive	EX38	PM - Plant Maintenance
21/11/19	EX38 - Top up LH Final Drive oil	EX38	PM - Plant Maintenance
22/11/19	EX38 - Complete Service, Check leak	EX38	PM - Plant Maintenance
25/11/19	EX38- Oxy Cut bent track grousser plate off	EX38	PM - Plant Maintenance
28/11/19	EX38 - Remove & Replace Bucket Teeth	EX38	PM - Plant Maintenance
02/12/19	EX38 - Replcae Blown HYD Hose & Top oil	EX38	PM - Plant Maintenance
04/12/19	EX38 - Repair damaged grease line on bucket pin	EX38	PM - Plant Maintenance
13/12/19	EX38 - Repair handrail & platform mount	EX38	PM - Plant Maintenance
23/12/19	EX38 - Remove leaking hose for replacement	EX38	PM - Plant Maintenance
23/12/19	EX38 - Replacee leaking hose	EX38	PM - Plant Maintenance

09/01/20	EX38 - Inspect AC fault	EX38	PM - Plant Maintenance
10/01/20	EX38 - Inspect & repair AC Fault	EX38	PM - Plant Maintenance
11/01/20	EX38 - Inspect & Repair AC Fault	EX38	PM - Plant Maintenance
13/01/20	EX38 - Put dogger grease drum on service truck	EX38	PM - Plant Maintenance
06/05/20	See MSR	EX38	LMF - Labour Maintenance Fitter
23/02/21	Repair UHF Handpiece	EX38	LMF - Labour Maintenance Fitter
27/08/21	500HR Service	EX38	LMF - Labour Maintenance Fitter
08/09/21	Replace teeth	EX38	LMF - Labour Maintenance Fitter
17/09/21	Inspect Grease System	EX38	LMF - Labour Maintenance Fitter
15/02/22	Fill Final	EX38	LMF - Labour Maintenance Fitter
14/03/22	EX38- Fill up final drive	EX38	LMF - Labour Maintenance Fitter
17/03/22	EX38 - Fill Up Finals	EX38	LMF - Labour Maintenance Fitter
22/03/22	EX38 - Wash	EX38	LMF - Labour Maintenance Fitter
28/03/22	EX38 - Wash	EX38	LMF - Labour Maintenance Fitter
20/04/22	EX38 Unload Bucket and Inspect	EX38	Hand
04/05/22	EX38 hydraulic temp fault	EX38	LMF - Labour Maintenance Fitter
04/05/22	EX38 hydraulic temp fault	EX38	LMF - Labour Maintenance Fitter
12/05/22	EX38 measure bucket	EX38	LMF - Labour Maintenance Fitter
23/05/22	EX38 Inspection and repairs	EX38	LMF - Labour Maintenance Fitter
23/05/22	EX38 machine inspection and repairs	EX38	LMF - Labour Maintenance Fitter
01/06/22	EX38 tooth	EX38	LMF - Labour Maintenance Fitter
01/06/22	EX38 fit bucket tooth	EX38	LMF - Labour Maintenance Fitter
22/06/22	EX38 top up final	EX38	Hand
06/07/22	EX38 weld retaining pin keepers	EX38	Hand
06/07/22	EX38 weld plates over teeth retainers	EX38	Hand
03/08/22	EX38 service and defects	EX38	LMF - Labour Maintenance Fitter
03/08/22	EX38 service and defects	EX38	LMF - Labour Maintenance Fitter
03/08/22	EX38 service and defects	EX38	LMF - Labour Maintenance Fitter
09/08/22	EX38 final drive	EX38	LMF - Labour Maintenance Fitter
16/08/22	EX38 fuel digger & fill up final	EX38	Hand
17/08/22	EX38 re-fuel	EX38	LMF - Labour Maintenance Fitter
07/09/22	EX38 fill finals	EX38	Hand
12/09/22	EX38 grease lines	EX38	LMF - Labour Maintenance Fitter
27/09/22	EX38 final oil	EX38	LMF - Labour Maintenance Fitter
05/10/22	EX38 repair bucket	EX38	LMF - Labour Maintenance Fitter
05/10/22	EX38 service	EX38	LMF - Labour Maintenance Fitter
05/10/22	EX38 servive	EX38	LMF - Labour Maintenance Fitter
11/10/22	EX38 fit mine radio	EX38	LMF - Labour Maintenance Fitter
11/10/22	EX38 fit mine radio	EX38	LMF - Labour Maintenance Fitter
14/10/22	EX38 repair radio and grease line	EX38	LMF - Labour Maintenance Fitter
18/10/22	EX38 top up final drive	EX38	LMF - Labour Maintenance Fitter
25/10/22	EX38 fill final drives	EX38	LMF - Labour Maintenance Fitter
02/11/22	EX38 finals	EX38	LMF - Labour Maintenance Fitter
17/11/22	EX38 fill final drive	EX38	LMF - Labour Maintenance Fitter
13/12/22	EX38 inspect horn fault	EX38	LMF - Labour Maintenance Fitter
19/12/22	EX38 top up final	EX38	Hand
07/02/23	EX38 clean pull horns apart	EX38	Hand
07/02/23	EX38 remove track	EX38	Hand
07/02/23	EX38 remove final drug LHS	EX38	Hand
08/02/23	EX38 wash finall	EX38	Hand
08/02/23	EX38 remove bucket / parts	EX38	Hand
08/02/23	EX38 remove final	EX38	Hand
08/02/23	EX38 remove final drive + bucket	EX38	Hand
13/02/23	EX38 undercarriage maintenance	EX38	Hand
15/02/23	EX38 undercarriage	EX38	LMF - Labour Maintenance Fitter
22/02/23	EX38 replace slew ring bolts	EX38	LMF - Labour Maintenance Fitter
01/03/23	EX38 fit final drive	EX38	LMF - Labour Maintenance Fitter
01/03/23	EX38 fit final drive	EX38	LMF - Labour Maintenance Fitter
07/03/23	EX38 re-assemble	EX38	LMF - Labour Maintenance Fitter
09/03/23	EX38 bucket fit out	EX38	LMF - Labour Maintenance Fitter
09/03/23	EX38 bucket fit out	EX38	LMF - Labour Maintenance Fitter
09/03/23	EX38 bucket fit out	EX38	LMF - Labour Maintenance Fitter
14/03/23	EX38 prep and fit bucket	EX38	LMF - Labour Maintenance Fitter
14/03/23	EX38 prep and fit bucket	EX38	LMF - Labour Maintenance Fitter
14/03/23	EX38 replace greaselines	EX38	LMF - Labour Maintenance Fitter
14/03/23	EX38 fit grease lines and bucket	EX38	LMF - Labour Maintenance Fitter
25/04/23	EX38 1000hr service	EX38	LMF - Labour Maintenance Fitter
25/04/23	EX38 1000 hr service	EX38	LMF - Labour Maintenance Fitter
12/05/23	EX38 diagnose engine fault	EX38	LMF - Labour Maintenance Fitter

18/05/23	EX38 replace horn	EX38	LMF - Labour Maintenance Fitter
23/05/23	EX38 replace tooth	EX38	LMF - Labour Maintenance Fitter
07/06/23	EX38 Order Parts	EX38	LMF - Labour Maintenance Fitter
14/06/23	EX38 Chain Teeth	EX38	LMF - Labour Maintenance Fitter
19/06/23	EX38 Weld Bucket teeth on	EX38	LMF - Labour Maintenance Fitter
27/06/23	EX38 Look at Bucket Damage	EX38	LMF - Labour Maintenance Fitter
12/07/23	EX38 Weld retainers on teeth	EX38	LMF - Labour Maintenance Fitter
14/07/23	EX38 Weld repairs to handrail	EX38	LMF - Labour Maintenance Fitter
17/07/23	EX38 Inspect Leak	EX38	LMF - Labour Maintenance Fitter
30/08/23	EX38 Diagnose swing brake fault	EX38	LMF - Labour Maintenance Fitter
05/09/23	EX38 swing brake sol, pump up track/repair w-way	EX38	LMF - Labour Maintenance Fitter
10/10/23	EX38 Change track adjuster nipples	EX38	LMF - Labour Maintenance Fitter
20/10/23	EX38 Wash	EX38	LMF - Labour Maintenance Fitter
24/10/23	EX38 Service and Defects	EX38	LMF - Labour Maintenance Fitter
24/10/23	EX38 L/H track adjuster	EX38	LMF - Labour Maintenance Fitter
24/10/23	EX38 C/O windscreen, service/remove travel guards	EX38	LMF - Labour Maintenance Fitter
24/10/23	EX38 Service and defects	EX38	LMF - Labour Maintenance Fitter
25/10/23	EX38 Defects	EX38	LMF - Labour Maintenance Fitter
25/10/23	EX38 Service and Defects	EX38	LMF - Labour Maintenance Fitter
25/10/23	EX38 Engine	EX38	LMF - Labour Maintenance Fitter
25/10/23	EX38 Service and Defects	EX38	LMF - Labour Maintenance Fitter
30/10/23	EX38 defects	EX38	LMF - Labour Maintenance Fitter
30/10/23	EX38 rebuild starter motor and defects	EX38	LMF - Labour Maintenance Fitter
01/11/23	EX38 inspection	EX38	LMF - Labour Maintenance Fitter
07/11/23	EX38 Track adjuster rebuild	EX38	LMF - Labour Maintenance Fitter
07/11/23	EX38 Fit track adjuster	EX38	LMF - Labour Maintenance Fitter
06/12/23	EX38 boom fault	EX38	LMF - Labour Maintenance Fitter
06/12/23	EX38 Inspect boom lowering fault	EX38	LMF - Labour Maintenance Fitter
08/12/23	EX38 boom fault	EX38	LMF - Labour Maintenance Fitter
08/12/23	EX38 Diagnose boom fault	EX38	LMF - Labour Maintenance Fitter
11/12/23	EX38 Boom fault	EX38	LMF - Labour Maintenance Fitter
11/12/23	EX38 fit new boom down solenoid	EX38	LMF - Labour Maintenance Fitter
11/12/23	EX38 Diagnose and repair power issue	EX38	LMF - Labour Maintenance Fitter
15/01/24	EX38 Diagnose DEF fault	EX38	LMF - Labour Maintenance Fitter
06/02/24	EX38 blown hose	EX38	LMF - Labour Maintenance Fitter
06/02/24	EX38 Repair oil leak	EX38	LMF - Labour Maintenance Fitter
04/03/24	EX38 250 hr service and defects	EX38	LMF - Labour Maintenance Fitter
04/03/24	EX38 250 hr service	EX38	LMF - Labour Maintenance Fitter
04/03/24	EX38 250 hr service and defects	EX38	LMF - Labour Maintenance Fitter
05/03/24	EX38 c/o bucket teeth	EX38	LMF - Labour Maintenance Fitter
05/03/24	EX38 Fit GET	EX38	LMF - Labour Maintenance Fitter
12/03/24	EX38 Fit GET	EX38	LMF - Labour Maintenance Fitter
03/04/24	EX38 front windscreen	EX38	LMF - Labour Maintenance Fitter
11/04/24	EX38 make windscreen	EX38	LMF - Labour Maintenance Fitter
11/04/24	EX38 make and fit new windscreen	EX38	LMF - Labour Maintenance Fitter
03/05/24	EX38 c/o o-ring on lh boom cyl	EX38	LMF - Labour Maintenance Fitter
08/05/24	EX38 repair oil leaks	EX38	LMF - Labour Maintenance Fitter
09/05/24	EX38 bucket grease lines	EX38	LMF - Labour Maintenance Fitter
21/05/24	EX38 1000 hr service and defects	EX38	LMF - Labour Maintenance Fitter
21/05/24	EX38 1000 hr service	EX38	LMF - Labour Maintenance Fitter
10/06/24	EX38 Fuel water separator fault	EX38	LMF - Labour Maintenance Fitter
15/07/24	EX38 inspect travel pedal fault	EX38	LMF - Labour Maintenance Fitter
16/07/24	EX38 ?	EX38	LMF - Labour Maintenance Fitter
17/07/24	EX38 performance issues testing	EX38	LMF - Labour Maintenance Fitter
17/07/24	EX38 inspect hydraulic issue	EX38	LMF - Labour Maintenance Fitter
24/07/24	EX38 hyd fault	EX38	LMF - Labour Maintenance Fitter
01/08/24	EX38 hyd fault	EX38	LMF - Labour Maintenance Fitter
06/08/24	EX38 c/o ?? In control valve	EX38	LMF - Labour Maintenance Fitter
05/09/24	EX38 rebuild windscreen	EX38	LMF - Labour Maintenance Fitter
12/09/24	EX38 window rebuild	EX38	LMF - Labour Maintenance Fitter
13/09/24	EX38 grease fault	EX38	LMF - Labour Maintenance Fitter
01/10/24	EX38 service and defects, replace windscreen	EX38	LMF - Labour Maintenance Fitter
01/10/24	EX38 service, c/o teeth, install windshield, glass	EX38	LMF - Labour Maintenance Fitter
01/10/24	EX38 250 hr service	EX38	LMF - Labour Maintenance Fitter
01/10/24	EX38 service and defects	EX38	LMF - Labour Maintenance Fitter
09/10/24	EX38 inspect track and order pin	EX38	LMF - Labour Maintenance Fitter
10/10/24	EX38 remove track pin	EX38	LMF - Labour Maintenance Fitter
11/10/24	EX38 track pin	EX38	LMF - Labour Maintenance Fitter
11/10/24	EX38 track pin	EX38	LMF - Labour Maintenance Fitter

14/10/24	EX38 oil pressure fault	EX38	LMF - Labour Maintenance Fitter
15/10/24	EX38 fuel dilution	EX38	LMF - Labour Maintenance Fitter
16/10/24	EX38 fuel dilution	EX38	LMF - Labour Maintenance Fitter
16/10/24	EX38 fuel dilution, order parts	EX38	LMF - Labour Maintenance Fitter
17/10/24	EX38 fuel dilution, c/o o-rings	EX38	LMF - Labour Maintenance Fitter
17/10/24	EX38 fuel dilution	EX38	LMF - Labour Maintenance Fitter
18/10/24	EX38 sensor and run up digger	EX38	LMF - Labour Maintenance Fitter
18/10/24	EX38 fuel dilution	EX38	LMF - Labour Maintenance Fitter
30/10/24	EX38 top up engine oil	EX38	LMF - Labour Maintenance Fitter
16/12/24	EX38 r/h travel pedal sticking	EX38	LMF - Labour Maintenance Fitter
18/12/24	EX38 top up hyd oil	EX38	LMF - Labour Maintenance Fitter
06/01/25	EX38 elec fault	EX38	LMF - Labour Maintenance Fitter
06/01/25	EX38 diagnose faulty batteries	EX38	LMF - Labour Maintenance Fitter
07/01/25	EX38 c/o batteries	EX38	LMF - Labour Maintenance Fitter
07/01/25	EX38 c/o batteries	EX38	LMF - Labour Maintenance Fitter
08/01/25	EX38 reinstall walking track pin	EX38	LMF - Labour Maintenance Fitter
08/01/25	EX38 repair masterlink on rh track	EX38	LMF - Labour Maintenance Fitter
08/01/25	EX38 track pin	EX38	LMF - Labour Maintenance Fitter
09/01/25	EX38 diagnose joystick fault	EX38	LMF - Labour Maintenance Fitter
10/01/25	EX38 joystick	EX38	LMF - Labour Maintenance Fitter
14/01/25	EX38 install make-shift battery set up	EX38	LMF - Labour Maintenance Fitter
14/01/25	EX38 fit batteries	EX38	LMF - Labour Maintenance Fitter
16/01/25	EX38 fit batteries	EX38	LMF - Labour Maintenance Fitter
16/01/25	EX38 c/o batteries	EX38	LMF - Labour Maintenance Fitter
17/01/25	EX38 joystick calibrator	EX38	LMF - Labour Maintenance Fitter
20/01/25	EX38 replace missing tooth	EX38	LMF - Labour Maintenance Fitter
20/01/25	EX38 weld retainer on bucket tooth	EX38	LMF - Labour Maintenance Fitter
22/01/25	EX38 after cooler fault	EX38	LMF - Labour Maintenance Fitter
23/01/25	EX38 after cooler hose replacement	EX38	LMF - Labour Maintenance Fitter
30/01/25	EX38 weld keepers on teeth	EX38	LMF - Labour Maintenance Fitter
10/02/25	EX38 inspect engine oil for water entrance	EX38	LMF - Labour Maintenance Fitter
12/02/25	EX38 Service and Defects	EX38	LMF - Labour Maintenance Fitter
12/02/25	EX38 500 Hr service	EX38	LMF - Labour Maintenance Fitter
25/02/25	EX38 Remove bent walkway	EX38	LMF - Labour Maintenance Fitter
25/02/25	EX38 repair accident damage	EX38	LMF - Labour Maintenance Fitter
26/02/25	EX38 - seal rear window	EX38	LMF - Labour Maintenance Fitter
19/05/25	EX38 Check Hydraulic Pressures	EX38	LMF - Labour Maintenance Fitter
19/05/25	EX38 Test Run, Pressure Check	EX38	LMF - Labour Maintenance Fitter
04/09/25	EX38 Remove boom cylinder and bucket cylinder	EX38	LMF - Labour Maintenance Fitter
04/09/25	EX38 Remove both bucket and boom cylinder	EX38	LMF - Labour Maintenance Fitter
12/09/25	EX38 Fit bucket & boom	EX38	LMF - Labour Maintenance Fitter
16/09/25	EX38 Slow boom up fault	EX38	LMF - Labour Maintenance Fitter
16/09/25	EX38 Low coolant top up	EX38	LMF - Labour Maintenance Fitter
17/09/25	EX38 Defects	EX38	LMF - Labour Maintenance Fitter
17/09/25	EX38 Top up coolant	EX38	LMF - Labour Maintenance Fitter
30/09/25	EX38 Secure bucket tooth pin	EX38	LMF - Labour Maintenance Fitter
01/10/25	EX38 Weld on pin retainer for bucket tooth	EX38	LMF - Labour Maintenance Fitter
27/10/25	EX38 diagnose start fault	EX38	LMF - Labour Maintenance Fitter
27/10/25	EX38 start fault	EX38	LMF - Labour Maintenance Fitter
27/10/25	EX38 start fault	EX38	LMF - Labour Maintenance Fitter
18/12/25	EX38 Hose/Jump Start	EX38	LMF - Labour Maintenance Fitter
13/02/26	EX38 Fit hyd hose	EX38	LMF - Labour Maintenance Fitter
12/03/26	EX38 fit batters	EX38	LMF - Labour Maintenance Fitter