



QUICK REFERENCE GUIDE


530-110, 530-70, 540-70

EN - 9828/GBP00 - ISSUE 1 - 02/2024

The information shown in this Quick Reference Guide is taken from the Operator's Manual (9851/0650).

This Quick Reference Guide DOES NOT replace the Operator's Manual. You MUST read ALL the disclaimers and safety and other instructions in the Operator's Manual before initially operating this product. Accordingly, no legal claims can be entertained based on the data, illustrations or descriptions in this Quick Reference Guide.


Component Locations

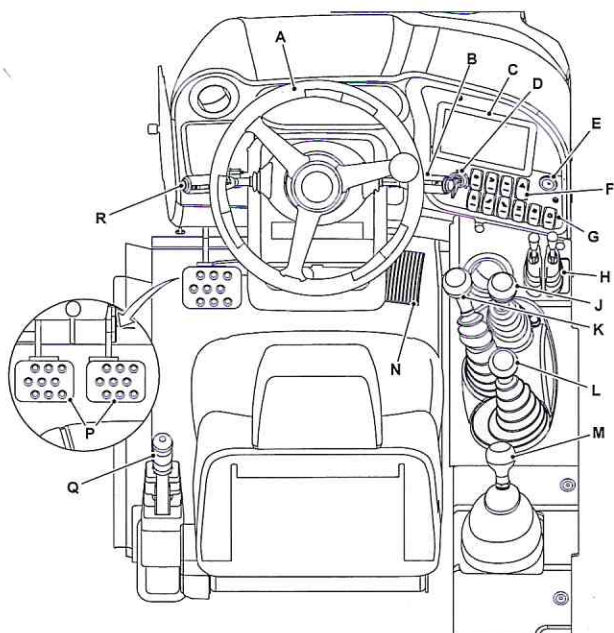

- | | |
|---------------------------------------|---|
| A Steering wheel | B Multi-purpose switch |
| C Instrument panel | D Ignition switch |
| E Auxiliary socket | F Hazard switch |
| G Air conditioning controls | H Stabiliser controls (for 530-110 only) |
| J Carriage controls | K Boom controls |
| L Auxiliary controls | M Gear lever |
| N Electronic accelerator pedal | P Service brake pedal |
| Q Park brake | R Transmission lever and gear selection |

Instrument Panel

Instrument Panel

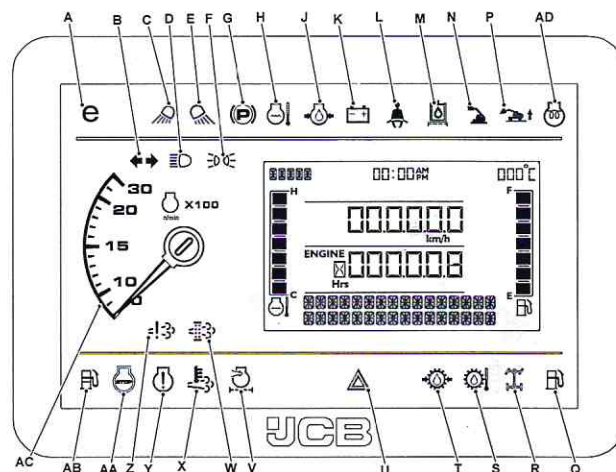

A	Eco Mode	Illuminates when the eco mode is on.
B	Direction indicators	Flashes with the direction indicators. Use the indicators to signal before turning the machine.
C	Front work light	Illuminates when the front work lights are switched on.
D	Main beam	Illuminates when the headlight main beams are switched on. Switch the main beams off for oncoming vehicles.
E	Rear work light	Illuminates when the rear work lights are switched on.
F	Side lights	Illuminates when the side lights are switched on.
G	Park Brake Engaged	Illuminates when the park brake is engaged with the machine in forward or reverse. Always switch on the parking brake before leaving the machine, in case the engine is running.
H	Coolant Temperature	Illuminates if the engine temperature is above normal.
J	Engine Oil Pressure Low	Illuminates if the engine oil pressure is below normal. The light should go out when the engine is started.
K	Battery not charging	Illuminates if the battery charging circuit fails while the engine is running. The light should go out a few seconds after the engine is started.
L	Seat belt warning	Illuminates if the seat belt is not fastened.
M	Clog indicator	Illuminates when the hydraulic filter is clogged.
N	Load control mode	Illuminates when load control mode is selected.