INTERNAL KEEGROUP USE ONLY

Job Sheet

Site Add	ress:				Job Numbe	er 205005	50035
					Job Date	12/05/2	2025
					Order No.	,	_
					Technician	LAR	127
Acct Na					☐ Warran	ty 🔲	Repair/Recharge
Site Cor					Service		Backlog
1		ry out 2	2000hr service		Certificate N	0: ,	
Custor	ner No	tes:			On Hire Da OFF Hire D		
Start Tim	e:				10.		
Finish Tin	ne:						
Work Req	quired :						
Job Item	Rego #		Item Description		Test Code	Last Meter	Current Meter
K0616	1ILV973		Ammann ARS200PD Pag	foot Roller		5,082.00	3965
Product Co	de	Descrip	otion	Quantity	Sell P	rice	Total Sell Price
CATAMAC 20	000	CATAMA	AC 2000HR SERVICE KIT	1.00		0.00	0.00

Service Notes			
Description	Hrs	Qty	Cost
TRAVEL SERVICE			
t,	8		
ENG OIL 1540		146-	5
DRUN PRIVE BOX 80W90		460	
FINALS 80W90		SCTO	
Hy0 68			
CHANGE ALL FIGERS + WILL			
BONNET WOULDN'T COME DOWN.			
CRACIC DIE LINES ON RIAS RAM.	100		
TO REALEASE ANY AIR IN SYSTEM			
Harris			
S3 SAMPLE		2	
9			

Total Labour Hours: _	2	Travel Hours:	
Manager:	Date://	Technician: LARDY	





Site:

HOPE VALLEY

PM Service & Inspection - Amman ARS200 Roller

Clean unit before carry out PM SERVICE Make sure the Unit Backlog file should be attached on this sheet.					
DOWN TIME INFORMATION				_	
Date equipment down	Time :	Date			
Date equipment up	Time :	Supervisor			
Service Meter Reading (SMR)	## 3965 Hrs.	Signature			

	PART NUMBER	PART NUMBER	94 14 1	S	ERVICE TYP	PE / QUANT	TTY
ITEN	THE TOTAL PROPERTY.	TAKT NOWDER	DESCRIPTION		4-760190	4-760190	4-760191
	OEM	Inter Change		250	500	1000	2000
1	1320509	LF4054	Engine Oil Filter		1	1	1
2	1399158	FS1095	Fuel Filter		1	1	1
3	1301937	FF5702	Preliminary Fuel Filter		2	2	2 ×
4	1400953	P785396 (Kit = X770690)	Primary - Air	S. Carlot	1	1	1
5	1263263	P785397 (Kit = X770690)	Secondary - Air		1	1	1
6	4-5358520121	P164056	Hydraulic Filter			Water Street	1
7	1280287		Hydraulic Tank Breather	TOTAL STREET	in the latest teams in the	1	1
8	1263263		Cab Filter Fresh Air	C Land	1	1	1
9	TBA		V Belt Air Con	STATE LA			
10	TBA		Poly V Belt				
11	S30		Cat SOS Bottles	0	1	4	6
			Total Items	0	8	12	15
1	15W/40	Engine Oil	Capacity		1	6L	
2	Hydraulic 68	Hydraulic System	Capacity		11	15L	
3	50/50	Coolant	Capacity		4:	8L	
4	15W/40 (Eng Oil)	Vibrator Oil	Capacity		7.	5L	
5	80W/90	Drum Drive Gearbox Oil	Capacity		5	iL	
6	80W/90	Rear Differential Oil	Capacity		2 x :	2.5L	
7	50/50	Drum Coolant	Capacity		15	OL	

Done: Initial Not Done: * Repairs or Adjustments Done: * Work Order or Further Work Required: * Procedures and Safety Instructions

PRE STOP CH	HECK			
TASK		TYPE OF	SERVIC	 E
INITIAL EACH COMPLETED CHECK	250	500	1000	2000
Check Operation of monitor panel lights, guages and buzzer				
Check for excessive play & wear in articulation / Steering pins and bushes				/
Inspect magnetic plug LH / RH final drives report results				/
Inspect hydraulic rods in the extended position for scratches or damage.				1
<u>II</u> <u>SAFETY</u>				
Isolate and park machine on a level surface				./
Stop the engine and allow cool down				1
Isolate machine and fit "Personal & Out of Service Tag"				1

"CAUTION"

" Fuel/Oil leaked or spilled onto hot surfaces or electrical components can cause a FIRE. Clean up fuel spills Immediately"

The Person who drains the Oil is Responsible for Refilling the Compartment

OILS AND LIQUIDS IN ALL COMPARTMENTS MAYBE HOT AND CAUSE SERIOUS INJURY

TAKE CARE WHEN DRAINING ANY COMPARTMENT

* CONSULT MAINTENANCE GUIDE FOR LUBE POINTS and PROCEDURES

Done: Initial

Not Done: <u>≭</u>

Repairs or Adjustments Done: R Work Order or Further Work Required: W

Procedures and Safety Instructions

<u> E</u>	RVICE and LUBRICATIONS (Manual Hand Grease Pump)	250	500	1000	2000
8	Record Hour Meter Reading SMR				/
	Engine				
9	Clean air cleaner box (Housing) and air filter dust indicator				/
0	Check element primary air cleaner change if required		Change	Change	change
1	Check element secondary air cleaner (replace if required)		Change	Change	Change
2	Take SOS Sample - engine coolant		Change	Change	Change a
3	Wash radiator and hydraulic coolers / intercooler / AC condensor (Every 1000Hrs)				6000
4	Check coolant sub tank level				/
5	Take SOS Sample - engine oil				/
	Change oil - engine and check level				3/
٠,	Change on - engine and check level	15 15 2			/
7	Change filter - engine oil				V
	Fuel System				-
8	Change filter - primary fuel (fuel-water separator)				1
9	Change filter - secondary fuel	14 7 6			
0	Clean Breather - fuel tank				1
	Hydraulic System				
1	Take SOS Sample - hydraulic oil				1
2	Check hydraulic oil level				./
3	Change hydraulic oil	0.000		131 177	1
3	Change filter - hydraulic				1
4	Clean hydraulic tank breather			1 201 10	-
	Vibrator System				V
	Take SOS Sample - Vibrator Oils		7 5 15	2 5 4 1	/
6	Check oil level - Vibrator oils				1
,	Change oil - Vibrators				W

Done: Initial Not Done: Repairs or Adjustments Done: Required: Work Order or Further Work Required: Work Order or Further

	Driving Gear / Differential		
28	Take SOS Sample - Drum Drive Gearbox		
29	Check oil level - Drum Drive Gearbox		
30	Change oil - Drum Drive Gearbox **Change after first 100Hrs**		
	Take SOS Sample - Differential Final DD-VE >2		V
	Check oil level - Differential		1
33	Change oil - Differential **Change after first 100Hrs** チャルル ウロレダ		1
	Lubrication		
34	Lubricate ALL door hinges	-3 10 10	
	Others		7
35	Check battery electrolyte level		
36	Fill windscreen washer tank		
	IV MECHANICAL CHECK AND IN	ISPECTIONS	
4 (<u> </u>	
	Cabin Cabin		
	Check operator access-step / hand holds		
38	Check door latches and window catches.		N
39	Check operator seat belt consider replacement at 6000 hrs		N
40	Check operator seat and adjustment control	100	/
41	Check operation of windscreen wipers and inspect rubber condition		1
42	Check for any oil / fluid leaks onto / into cabin		V
43	Check the ROPS / cabin / platform for cracks / damage / wear and loose bolts.	13.191	V
	Air Conditioning		
44	Check air conditioning operation		V
	Lamps, Horn, Back-up Alarm, Battery and Fuses/CB		
45	Check battery terminals and cables		
46	Tighten battery hold down clamps		
47	Check fuses and circuit breakers		
48	Check lights / horn and back-up alarm	10000	V
49	Check operation of ALL lights / warning Indicators.	garage .	

Done: Initial Not Done: * Repairs or Adjustments Done: * Work Order or Further Work Required: * Procedures and Safety Instructions

	<u>Others</u>		
50	Check pressure gauge fire extinguisher (AFFF) record tag	ALTERNATION OF THE PARTY OF THE	
5 1	Charle fire pytinguishes handlest for leave halts or available		
31	Check fire extinguisher bracket for loose bolts or cracks		
2 .	Engine Area		
	Engine		7
52	Check air intake lines are complete without damage or cracks		
53	Check and set engine valve clearance		
54	Check condition of cooling fan - ensure rivets are in good condition		
55	Check ALL V-belts (Conditions + Tension)		
56	Check belts of air conditioner compressor (Conditions + Tension)	100	
57	Check engine emergency stop and test function	111111111	
58	Check fan hub and jockey pulley bearings		
	Check fan guards are in place and secure		1
	Check for oil leaks into engine area	13 10 10	
61	Check exhaust system for leaks / cracks / broken all loose bolts		1/
	Check ALL turbocharger pipes and clamps for tightness		
	Check ALL engine wiring harnesses are free form rubbing "P" clamps ETC		/
64	Check alternator cables / starter motor cables / mounting bolts and brackets.	(BESS)	1
	Fuel System		
65	Check fuel lines for leaks / missing clamps		
66	Check throttle linkage and fuel pump coupling for loose bolts ETC		
67	Check integrity of whole system	A COLUMN	
	<u>Radiator</u>		
	Check ALL water hose condition and clamps		1
69	Check condition of water lines and radiator core clean if required		1
70	Check radiator mounting		V

Done: Initial Not Done: * Repairs or Adjustments Done: * Work Order or Further Work Required: * Procedures and Safety Instructions

3.	Hydraulic System		
71	Check suction line clamps of hydraulic pump for tightness		
72	Check hydraulic cylinder for damage or loose bolts.		1
73	Inspect ALL hydraulic hoses / tubes for damage		
74	Check hydraulic control valves for loose bolts and cracked bracket.		
75	Check hydraulic valves for leaks and condition		
76	Check hydraulic pump for loose mounting bolts / clamps or leaks.		V/
	Vibrator		
77	Check damping elements		
1. [Driving gear / differential		
	Driving gear		7
78	Check wheel nut tightness		1/
79	Check air pressure in tyres		1
80	Inspect Scraper and adjust if required		
81	Check for any leaks and hose condition		
	Differential		
82	Check housing condition		
83	Check for leaks		
84	Check lower frame guards / cracks or loose bolts	Tuesta a	
	Frame		
35	Check belly plate condition		
36	Check frame for damage		
37	Check ALL panel condition		
88	Check drum condition pad / smooth	50	

Done: Initial Not Done: Repairs or Adjustments Done: Required: Work Order or Further Work Required: Work Order or Further

<u>VI</u>	COMPLETION	
89 Check ALL compartment oil Levels "B	EFORE STARTING THE MACHINE"	
90 Test drive and check for unusual noise	s	
91 Remove "Personal & Out of Service Ta	ag"	
Task Special Instruction		
PLEASE Report any DE	FECTS or unusual findings to Leading Hand, Supervisor or S	Superintendent

List of Serviceman or DONE BY

Name of Personnel	<u>Signature</u>
LSTENARO	1/

ADDITIONAL ITEMS FOR BACKLOG

ITEM	Unit ID		DESCRIPTION OF DEFECT	COMPLETED	PARTS	
	Model	H201	DESCRIPTION OF DEFECT	Y/N	IN STOCK	LOCATION
1						
2						
3						
4			-			
5						
6						
7						
8						
9						50
10			/			

Signed Mechanic: _____ Signed Supervisor: