
## **INTERNAL KEEGROUP USE ONLY**

Job Sheet

			111		
Site Address:			Job Number	r 205004	8856
			Job Date	19/12/2	2024
			Order No.	1.	00.
			Technician:	11	KIZY
Acct Name:			Warranty		Repair/Recharge
Site Contact: Site Phone No:			Service		Backlog
Job Header: Ca	rry out 2000hr service		Certificate No:		
Customer No	otes:		On Hire Dat OFF Hire Da		
Start Time:					
Finish Time:					
Work Required:					
Job Item Rego #	tem Description		Test Code	Last Meter	<b>Current Meter</b>
1IKT64	Ammann ARS200PD Padfo	ot Roller		3,836.00	3901
Product Code	Description	Quantity	Sell Pri	се	Total Sell Price
CATAMAC 2000	CATAMAC 2000HR SERVICE KIT	1.00		0.00	0.00

Service Notes	được, re	14811				
Description	Hrs	Qty	Cost			
CARPY OUT SERVICE						
ENC 011 15 n 40		16275				
BEM OIL SON90		10/19				
H40 OIC 68		60278	S			
CHANCE ALL FITTED + OILS		750				
8-1-24	60					
7-1-25	4.5					
Total Labour Hours: Travel Hours:						
Manager:Date:/ Technician:Deby	Date: 8 /	1 125				

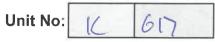





# PM Service & Inspection - Amman ARS200 Roller

Clean unit before carry out PM SERVICE  Make sure the Unit Backlog file should be attached on this sheet.							
DOWN TIME INFORMATION							
Date equipment down Time :	Date						
Date equipment up Time :	Supervisor						
Service Meter Reading ( SMR ) Hrs.	Signature	<del>;</del> (					

	PART NUMBER	PART NUMBER		S	<b>ERVICE TYP</b>	E / QUANT	TTY
TEN	TAIT NOMBER	TANTNOMBER	DESCRIPTION		4-760190	4-760190	4-760191
	OEM	Inter Change		250	500	1000	2000
1	1320509	LF4054	Engine Oil Filter		1	1	1
2	1399158	FS1095	Fuel Filter		1	1	1
3	1301937	FF5702	Preliminary Fuel Filter		2	2	2
4	1400953	P785396 (Kit = X770690)	Primary - Air		1	1	1
5	1263263	P785397 (Kit = X770690)	Secondary - Air		1	1	1
6	4-5358520121	P164056	Hydraulic Filter				1
7	1280287		Hydraulic Tank Breather		HERE WA	1	1
8	1263263		Cab Filter Fresh Air		1	1	1
9	TBA		V Belt Air Con	La la la la			
10	TBA		Poly V Belt				
11	S30		Cat SOS Bottles	0	1 1	4	6
			Total Items	0	8	12	15
1	15W/40	Engine Oil	Capacity		1	6L	
2	Hydraulic 68	Hydraulic System	Capacity	115L			
3	50/50			48L			
4	15W/40 (Eng Oil)	Vibrator Oil	Capacity	7.5L			
5	80W/90	Drum Drive Gearbox Oil	Capacity	5L			
6	80W/90	Rear Differential Oil	Capacity		2 x	2.5L	
7	50/50	Drum Coolant	Capacity			OL	

Done: Initial Not Done: \* Repairs or Adjustments Done: \* Work Order or Further Work Required: \*

#### PRE STOP CHECK

TASK		TYPE OF	SERVIC	E
INITIAL EACH COMPLETED CHECK	250	500	1000	2000
Check Operation of monitor panel lights, guages and buzzer				
Check for excessive play & wear in articulation / Steering pins and bushes				1
Inspect magnetic plug LH / RH final drives report results		137 2		1
Inspect hydraulic rods in the extended position for scratches or damage.				/
<u>II</u> <u>SAFETY</u>				
Isolate and park machine on a level surface				

#### "CAUTION"

6 Stop the engine and allow cool down

7 Isolate machine and fit "Personal & Out of Service Tag"

" Fuel/Oil leaked or spilled onto hot surfaces or electrical components can cause a FIRE. Clean up fuel spills Immediately"

The Person who drains the Oil is Responsible for Refilling the Compartment

OILS AND LIQUIDS IN ALL COMPARTMENTS MAYBE HOT AND CAUSE SERIOUS INJURY

TAKE CARE WHEN DRAINING ANY COMPARTMENT

\* CONSULT MAINTENANCE GUIDE FOR LUBE POINTS and PROCEDURES

Done: Initial Not Done: Repairs or Adjustments Done: Repairs or Further Work Required: W

<u>III</u>	<u>OLKVIOL &amp; L</u>	UBRICATION	(I M OLIM	<u> </u>		
RVICE and LUBRICATION	S (Manual Hand Grease F	Pump)	250	500	1000	2000
Record Hour Meter Reading	SMR					
Engine Clean air cleaner box ( Housing	and air filter dust indicator				1	
Check element primary air clean	er change if required			Change	Change	Change
Check element secondary air cle	aner ( replace if required )			Change	Change	Change
Take SOS Sample - engine cool	ant		535 30	150,5	THE S	Change a
Wash radiator and hydraulic coo	lers / intercooler / AC condensor	(Every 1000Hrs)				6000
Check coolant sub tank level						/
Take SOS Sample - engine oil						
Change oil - engine and check le	vel		10.25			
Change filter - engine oil						
Fuel System						
Change filter - primary fuel ( fuel-	water separator)		The same			V
Change filter - secondary fuel						1
Clean Breather - fuel tank						
Hydraulic System						
Take SOS Sample - hydraulic oil						
Check hydraulic oil level						/
Change hydraulic oil			No. Bull			
Change filter - hydraulic					8.0	1
Clean hydraulic tank breather						1
Vibrator System						<b>*</b> 2
Take SOS Sample - Vibrator Oils			120 5		is we	/
Check oil level - Vibrator oils						
Change oil - Vibrators						1

Done: Initial Not Done: Repairs or Adjustments Done: Required: Work Order or Further Work Required: Work Order or Further

	Driving Gear / Differential		
28	Take SOS Sample - Drum Drive Gearbox		/
29	Check oil level - Drum Drive Gearbox		
30	Change oil - Drum Drive Gearbox **Change after first 100Hrs**	Fire Law	
31	Take SOS Sample - Differential FINAL DRIVER XZ		
32	Check oil level - Differential FINAL DENUES Y		1
33	Change oil - Differential **Change after first 100Hrs**		
	Lubrication		
34	Lubricate ALL door hinges	well !	
	Others		
35	Check battery electrolyte level	Managhar .	
36	Fill windscreen washer tank		
	IV MECHANICAL CHECK AND IN	SPECTIONS	
4		OF ECTIONS	
	Cabin		
	Check operator access-step / hand holds		
	Check door latches and window catches.		/
	Check operator seat belt consider replacement at 6000 hrs		
	Check operator seat and adjustment control		
	Check operation of windscreen wipers and inspect rubber condition		1
	Check for any oil / fluid leaks onto / into cabin		
43	Check the ROPS / cabin / platform for cracks / damage / wear and loose bolts.		
44	Air Conditioning		
	Check air conditioning operation	5.53	
	Lamps, Horn, Back-up Alarm, Battery and Fuses/CB		
	Check battery terminals and cables		
	Tighten battery hold down clamps		
	Check fuses and circuit breakers	120,48	
	Check lights / horn and back-up alarm	Maritie -	V
49	Check operation of ALL lights / warning Indicators.		

Done: Initial Not Done: \* Repairs or Adjustments Done: \* Work Order or Further Work Required: \* Procedures and Safety Instructions

	<u>Others</u>		
50	Check pressure gauge fire extinguisher (AFFF) record tag date		/
51	Check fire extinguisher bracket for loose bolts or cracks		
<u>2. I</u>	Engine Area		
	Engine		<u></u>
52	Check air intake lines are complete without damage or cracks	2000	1
53	Check and set engine valve clearance	THE PROPERTY OF	
54	Check condition of cooling fan - ensure rivets are in good condition		1/
55	Check ALL V-belts ( Conditions + Tension )		
56	Check belts of air conditioner compressor ( Conditions + Tension )		1
57	Check engine emergency stop and test function		
58	Check fan hub and jockey pulley bearings		/
59	Check fan guards are in place and secure		/
60	Check for oil leaks into engine area		1
	Check exhaust system for leaks / cracks / broken all loose bolts		1
	Check ALL turbocharger pipes and clamps for tightness		
	Check ALL engine wiring harnesses are free form rubbing "P" clamps ETC		
64	Check alternator cables / starter motor cables / mounting bolts and brackets.	4/6/8	
	Fuel System		
	Check fuel lines for leaks / missing clamps		
	Check throttle linkage and fuel pump coupling for loose bolts ETC	13.7	
67	Check integrity of whole system		
	Radiator		
	Check ALL water hose condition and clamps	1	
	Check condition of water lines and radiator core clean if required	13,170	1
70	Check radiator mounting	5,145	V

Done: Initial Not Done: \* Repairs or Adjustments Done: \* Work Order or Further Work Required: \* Procedures and Safety Instructions

<u>3.                                    </u>	Hydraulic System		
71	Check suction line clamps of hydraulic pump for tightness		
72	Check hydraulic cylinder for damage or loose bolts.	(1-5-11)	1
73	Inspect ALL hydraulic hoses / tubes for damage		
74	Check hydraulic control valves for loose bolts and cracked bracket.		
75	Check hydraulic valves for leaks and condition		
76	Check hydraulic pump for loose mounting bolts / clamps or leaks.		
	Vibrator		
77	Check damping elements		
4. I	Driving gear / differential		
_	Driving gear		
78	Check wheel nut tightness		
79	Check air pressure in tyres	1253	1
80	Inspect Scraper and adjust if required	10000	/
81	Check for any leaks and hose condition		
	Differential		
82	Check housing condition	(3.6)	
83	Check for leaks		
84	Check lower frame guards / cracks or loose bolts		
	Frame	10.000	
85	Check belly plate condition		
86	Check frame for damage		/
87	Check ALL panel condition	100	./.
88	Check drum condition pad / smooth	1000000	

Done: Initial Not Done: Repairs or Adjustments Done: Work Order or Further Work Required: Work Order or Further Work Requi

	<u>VI</u> <u>COMPLETION</u>	
39 Ch	eck ALL compartment oil Levels " BEFORE STARTING THE MACHINE"	
0 Tes	st drive and check for unusual noises	/
1 Re	move "Personal & Out of Service Tag"	

PLEASE Report any DEFECTS or unusual findings to Leading Hand, Supervisor or Superintendent Supervisor must be fill in the DEFECT Report if any.

liet	of	Sa	rvic	om	an	or	DON	Œ	B	,
LIJL	v	76	IVIL		all	UI.	DUIN		01	

Name of Personnel	<u>Signature</u>
LSTEMARO	

#### ADDITIONAL ITEMS FOR BACKLOG

ITEM	Unit ID		DESCRIPTION OF DEFECT	COMPLETED	PARTS	
	Model	H201	DESCRIPTION OF DEFECT	Y/N	IN STOCK	LOCATION
1						
2						
3						
4						
5						
5						
7						
3						
•						
LO						

	-	
Signed Mechanic: _	l	Signed Supervisor: