



WORLD WELDING & TRANSPORT SERVICES

 
## Maintenance Report

VEHICLE: TL 110

DATE: 6/9/24

HRS \_\_\_\_\_

KLM

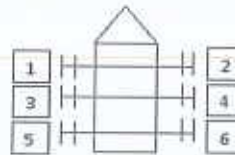

DESCRIPTION OF MAINTENANCE:

Back Gauge & Fewer cracks along  
RHS and centre of chassis

Back Gauge + Re-weld cracks in Comp Plates  
in HYDRAULIC MOUNTS LOW TUB

NAME: Flizy

SIGNATURE: 



WORLD WELDING & TRANSPORT SERVICES


## Maintenance Report

 VEHICLE: TL110

DATE: 4-9-24

HRS \_\_\_\_\_

KLM \_\_\_\_\_

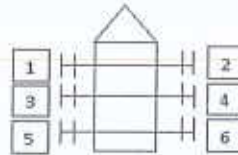

### DESCRIPTION OF MAINTENANCE:

- Replace both front hydraulic hoses
- Fit new couplings on new hoses
- Replace hydraulic couplings on rear of unit
- Check over unit
- Replace 6mm air lines on front of unit x6
- Replace 6mm air lines from front to rear x2
- Check bearings

NAME: MARK ALLEN

SIGNATURE: \_\_\_\_\_





# TRAILER & DOLLY SERVICE SHEET

018 11

DATE 8-9-24 START TIME \_\_\_\_\_ FINISH TIME \_\_\_\_\_  
FLEET NO TL 110 KM'S N/A HRS \_\_\_\_\_

JOB NO \_\_\_\_\_  
REGO 4B63 ED

Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable		A Service	B Service	C Service
Local Trailers	40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trailers	15000km 10 days 150000km/365days		15000KM	150000KM
1	Check faults noted on daily prestart and repair as necessary			MH
2	Check fleet numbers are serviceable			MH
3	Record Hub meter reading			N/A
4	Lubricate Container Pins			N/A
5	Check operation & condition of all lights/reflectors			MH
6	Apply Air Check for leaks from boosters, valves & air lines			MH
7	Adjust brakes , visually inspect components			MH
8	Check air cells for air leaks and deterioration			MH
9	Drain all air tanks, report if any oil is present in system			MH
10	Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points			MH
11	Check hoist mounting bolts, hoses, coupling			MH
12	Check number plate & rego label security. Check that rego label is current			MH
13	Check condition of front air connections, light plug base & electrical lead			MH
14	Check security of spare wheels & spare wheel carrier/gate rack			MH
15	Check condition & security of all mudflaps, mudguards, brackets & spray suppression			MH
16	Check landing legs for damage & security			MH
17	Check sub frame & cross members for cracks, damage & security			MH
18	Check condition, position & security of all air hoses			MH

19	Check brake linings & drums for wear. Check hub seals for leakage
20	Check security of height control valves and links & adjust if required
Check skid plate/king pin security & condition, check draw bar/bushes and towing eye NOTE: If draw bar eye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be checked for tolerances	
21	checked for tolerances
22	Check wheel nut tensions, check valve stem alignment
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear
24	Check condition & security of rear marker signs
25	Check ring feeder condition, operation & security
26	Lubricate twist locks & check operation & security of pedestals, straighten handles as required
27	Check condition & security of rope rails, gate pockets, winch rails & straps
28	Check condition & security of floor and associated components
29	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear
30	Check security & bolt tension od airbag suspension hangers & radius rod arms
31	Raise wheel assembly & check bearings for free play by "feel" only & adjust as required
32	Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted

	MH
	N/A
	MH
	MH
	MH
	MH
	MH
	N/A
	N/A
	MH
	MH
	MH
	MH



33	Check brake linings & drums for wear whilst hubs are removed
34	Check hubs for cracks and tapered shoulders for wear
35	Remove bearings and clean/inspect for reuse
36	Replace mudflaps & decals as required
37	Remove s/cam slack adjuster pins and rotate/lubricate
38	Pack bearings with fresh grease & reassemble

MH
MH
N/A
MH
N/A
N/A

Initial if adjusted - Tick if OK

PLEASE COMPLETE PAGE 2

# TRAILER & DOLLY SERVICE SHEET

[illegible]

\* REPAIR FRONT PAS CLEARANCE LIGHT WIRING.

★ WELD UP CRACKS

4 REPLACE TRAILER PLUG AT REAR

\* REPLACE REAR MUD FLAPS AND  
REAR MARKER SIGNS

List any defect found

[illegible]

Tradesperson Name	MAT H	Signature	
		Date	8-9-24

PLEASE COMPLETE PAGE 2



# TRAILER & DOLLY SERVICE SHEET

[illegible][illegible][illegible]

Tradesperson Name	MATH	Signature	
		Date	22-9-24

PLEASE COMPLETE PAGE 2



[illegible][illegible][illegible]

 
Tradesperson Name	MATI H	Signature	
		Date	10-10-24



## Maintenance Report

DATE: 14/11/2021

KLM: \_\_\_\_\_

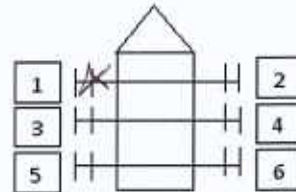

Reptac passenger gate Front Side  
1308

SIGNATURE: \_\_\_\_\_










[illegible][illegible][illegible]

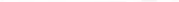Tradesperson Name	MATT H	Signature	
		Date	15-12-24



## TRAILER & DOLLY SERVICE SHEET

DATE 24-12-24

START TIME

FINISH TIME

JOB NO. 3

FLEET NO 2110

 
KM'S *NIA*

HRS

REGO

Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable		A Service	B Service	C Service
Local Trailers	40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trailers	15000km 10 days 150000km/365days		15000KM	150000KM
1	Check faults noted on daily prestart and repair as necessary	M/H		
2	Check fleet numbers are serviceable	M/H		
3	Record Hub meter reading	M/H		
4	Lubricate Container Pins	N/A		
5	Check operation & condition of all lights/reflectors	M/H		
6	Apply Air Check for leaks from boosters, valves & air lines	M/H		
7	Adjust brakes , visually inspect components	M/H		
8	Check air cells for air leaks and deterioration	M/H		
9	Drain all air tanks, report if any oil is present in system	M/H		
10	Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points	M/H		
11	Check hoist mounting bolts, hoses, coupling	M/H		
12	Check number plate & rego label security. Check that rego label is current	M/H		
13	Check condition of front air connections, light plug base & electrical lead	M/H		
14	Check security of spare wheels & spare wheel carrier/gate rack	M/H		
15	Check condition & security of all mudflaps, mudguards, brackets & spray suppression	M/H		
16	Check landing legs for damage & security	M/H		
17	Check sub frame & cross members for cracks, damage & security	M/H		
18	Check condition, position & security of all air hoses	M/H		

19	Check brake linings & drums for wear. Check hub seals for leakage
20	Check security of height control valves and links & adjust if required
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye eye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be checked for tolerances
22	Check wheel nut tensions, check valve stem alignment
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear
24	Check condition & security of rear marker signs
25	Check ring feeder condition, operation & security
26	Lubricate twist locks & check operation & security of pedestals, straighten handles as required
27	Check condition & security of rope rails, gate pockets, winch rails & straps
28	Check condition & security of floor and associated components
29	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear
30	Check security & bolt tension of airbag suspension hangers & radius rod arms
31	Raise wheel assembly & check bearings for free play by "feel" only & adjust as required
32	Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted

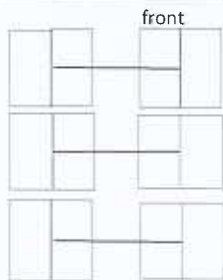[illegible]

rear

- 33 Check brake linings & drums for wear whilst hubs are removed
- 34 Check hubs for cracks and tapered shoulders for wear
- 35 Remove bearings and clean/inspect for reuse
- 36 Replace mudflaps & decals as required
- 37 Remove s/cam slack adjuster pins and rotate/lubricate
- 38 Pack bearings with fresh grease & reassemble


Initial if adjusted - Tick if OK

PLEASE COMPLETE PAGE 2

