 




Maintenance Report

DATE: 2/1/25

KLM: _____

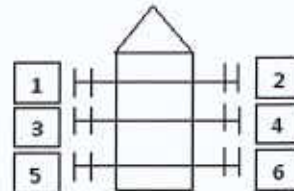

Repture River Bank of Texas with nest

SIGNATURE: _____

 
TRAILER & DOLLY SERVICE SHEET

DATE 29-1-25 START TIME _____ FINISH TIME _____
FLEET NO R110 KM'S N/A HRS _____

JOB NO _____
REGO _____

Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable		A Service	B Service	C Service
Local Trailers	40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trailers	15000km 10 days 150000km/365days		15000KM	150000KM
1	Check faults noted on daily prestart and repair as necessary	MH		
2	Check fleet numbers are serviceable	MH		
3	Record Hub meter reading	N/A		
4	Lubricate Container Pins	N/A		
5	Check operation & condition of all lights/reflectors	MH		
6	Apply Air Check for leaks from boosters, valves & air lines	MH		
7	Adjust brakes , visually inspect components	MH		
8	Check air cells for air leaks and deterioration	MH		
9	Drain all air tanks, report if any oil is present in system	MH		
10	Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points	NA		
11	Check hoist mounting bolts, hoses, coupling	MH		
12	Check number plate & rego label security. Check that rego label is current	MH		
13	Check condition of front air connections, light plug base & electrical lead	MH		
14	Check security of spare wheels & spare wheel carrier/gate rack	MH		
15	Check condition & security of all mudflaps, mudguards, brackets & spray suppression	MH		
16	Check landing legs for damage & security	MH		
17	Check sub frame & cross members for cracks, damage & security	MH		
18	Check condition, position & security of all air hoses	MH		

19	Check brake linings & drums for wear. Check hub seals for leakage	
20	Check security of height control valves and links & adjust if required	
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye eye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be checked for tolerances	NOTE: If draw bar
22	Check wheel nut tensions, check valve stem alignment	
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear	
24	Check condition & security of rear marker signs	
25	Check ring feeder condition, operation & security	
26	Lubricate twist locks & check operation & security of pedestals, straighten handles as required	
27	Check condition & security of rope rails, gate pockets, winch rails & straps	
28	Check condition & security of floor and associated components	
29	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear	
30	Check security & bolt tension of airbag suspension hangers & radius rod arms	
31	Raise wheel assembly & check bearings for free play by "feel" only & adjust as required	
32	Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted	

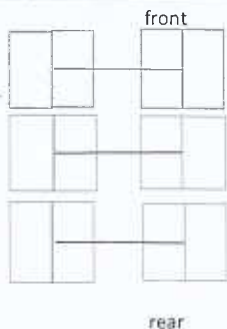[illegible]

- 33 Check brake linings & drums for wear whilst hubs are removed
- 34 Check hubs for cracks and tapered shoulders for wear
- 35 Remove bearings and clean/inspect for reuse
- 36 Replace mudflaps & decals as required
- 37 Remove s/cam slack adjuster pins and rotate/lubricate
- 38 Pack bearings with fresh grease & reassemble

Initial if adjusted - Tick if OK

PLEASE COMPLETE PAGE 2

[illegible][illegible][illegible]

Tradesperson Name	MATT H	Signature	
		Date	



TRAILER & DOLLY SERVICE SHEET

DATE 6-2-25

START TIME _____

FINISH TIME _____

JOB NO _____

FLEET NO R110KM'S N/A

 
HRS _____

REGO _____

Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable		A Service	B Service	C Service
Local Trailers	40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trailers	15000km 10 days 150000km/365days		15000KM	150000KM
1	Check faults noted on daily prestart and repair as necessary		MH	
2	Check fleet numbers are serviceable		MH	
3	Record Hub meter reading		N/A	
4	Lubricate Container Pins		MA	
5	Check operation & condition of all lights/reflectors		MH	
6	Apply Air Check for leaks from boosters, valves & air lines		MH	
7	Adjust brakes , visually inspect components		MH	
8	Check air cells for air leaks and deterioration		MH	
9	Drain all air tanks, report if any oil is present in system		MH	
10	Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points		MH	
11	Check hoist mounting bolts, hoses, coupling		MH	
12	Check number plate & rego label security. Check that rego label is current		MH	
13	Check condition of front air connections, light plug base & electrical lead		MH	
14	Check security of spare wheels & spare wheel carrier/gate rack		MH	
15	Check condition & security of all mudflaps, mudguards, brackets & spray suppression		MH	
16	Check landing legs for damage & security		MH	
17	Check sub frame & cross members for cracks, damage & security		MH	
18	Check condition, position & security of all air hoses		MH	

19	Check brake linings & drums for wear. Check hub seals for leakage
20	Check security of height control valves and links & adjust if required
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye eye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be checked for tolerances
22	Check wheel nut tensions, check valve stem alignment
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear
24	Check condition & security of rear marker signs
25	Check ring feeder condition, operation & security
26	Lubricate twist locks & check operation & security of pedestals, straighten handles as required
27	Check condition & security of rope rails, gate pockets, winch rails & straps
28	Check condition & security of floor and associated components
29	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear
30	Check security & bolt tension of airbag suspension hangers & radius rod arms
31	Raise wheel assembly & check bearings for free play by "feel" only & adjust as required
32	Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted

MH	
N/A	
MH	
MH	
MH	
MH	
N/A	
N/A	
MH	
MH	
MH	
MH	

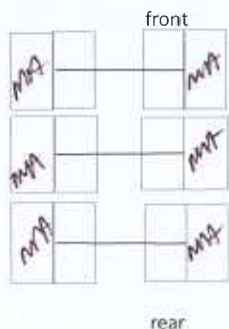

33	Check brake linings & drums for wear whilst hubs are removed
34	Check hubs for cracks and tapered shoulders for wear
35	Remove bearings and clean/inspect for reuse
36	Replace mudflaps & decals as required
37	Remove s/cam slack adjuster pins and rotate/lubricate
38	Pack bearings with fresh grease & reassemble

Initial if adjusted - Tick if OK

PLEASE COMPLETE PAGE 2



x REPLACE AIR CONNECTION AT REAR OF TRAILER WITH GLAD HANDS

[illegible]

Tradesperson Name	MAT H	Signature	<i>[Signature]</i>
		Date	8-2-25

Entered 14/3/25.



WORLD WELDING & TRANSPORT SERVICES

 
Maintenance Report

VEHICLE: TL110

DATE: 11/3/25

HRS: _____

KLM: _____

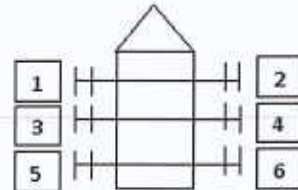

DESCRIPTION OF MAINTENANCE:

Weld down Flap of metal on door

NAME: L. Fal

 
SIGNATURE: _____



TRAILER & DOLLY SERVICE SHEET


JOB NO _____
REGO _____

19	Check brake linings & drums for wear. Check hub seals for leakage
20	Check security of height control valves and links & adjust if required
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye eye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be checked for tolerances
22	Check wheel nut tensions, check valve stem alignment
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear
24	Check condition & security of rear marker signs
25	Check ring feeder condition, operation & security
26	Lubricate twist locks & check operation & security of pedestals, straighten handles as required
27	Check condition & security of rope rails, gate pockets, winch rails & straps
28	Check condition & security of floor and associated components
29	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear
30	Check security & bolt tension of airbag suspension hangers & radius rod arms
31	Raise wheel assembly & check bearings for free play by "feel" only & adjust as required
32	Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted

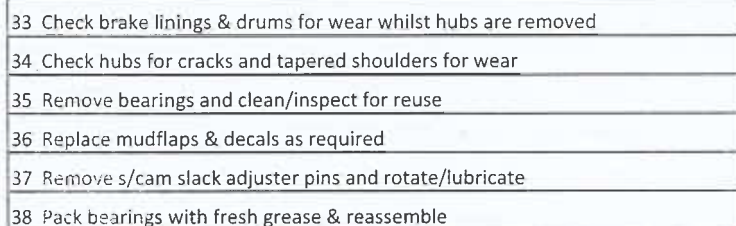

PLEASE COMPLETE PAGE 2

[illegible][illegible]

Tradesperson Name	MAT H	Signature	
		Date	15-3-25



TRAILER & DOLLY SERVICE SHEET

DATE 23-3-25

START TIME _____ FINISH TIME _____

JOB NO _____

 
FLEET NO 72110

KM'S N/A HRS

REGO _____

Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable		A Service	B Service	C Service
Local Trailers	40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trailers	15000km 10 days 150000km/365days		15000KM	150000KM
1	Check faults noted on daily prestart and repair as necessary	MH		
2	Check fleet numbers are serviceable	MH		
3	Record Hub meter reading	MH		
4	Lubricate Container Pins	MH		
5	Check operation & condition of all lights/reflectors	MH		
6	Apply Air Check for leaks from boosters, valves & air lines	MH		
7	Adjust brakes , visually inspect components	MH		
8	Check air cells for air leaks and deterioration	MH		
9	Drain all air tanks, report if any oil is present in system	MH		
10	Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points	MH		
11	Check hoist mounting bolts, hoses, coupling	MH		
12	Check number plate & rego label security. Check that rego label is current	MH		
13	Check condition of front air connections, light plug base & electrical lead	MH		
14	Check security of spare wheels & spare wheel carrier/gate rack	MH		
15	Check condition & security of all mudflaps, mudguards, brackets & spray suppression	MH		
16	Check landing legs for damage & security	MH		
17	Check sub frame & cross members for cracks, damage & security	MH		
18	Check condition, position & security of all air hoses	MH		

19	Check brake linings & drums for wear. Check hub seals for leakage
20	Check security of height control valves and links & adjust if required
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye eye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be checked for tolerances
22	Check wheel nut tensions, check valve stem alignment
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear
24	Check condition & security of rear marker signs
25	Check ring feeder condition, operation & security
26	Lubricate twist locks & check operation & security of pedestals, straighten handles as required
27	Check condition & security of rope rails, gate pockets, winch rails & straps
28	Check condition & security of floor and associated components
29	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear
30	Check security & bolt tension of airbag suspension hangers & radius rod arms
31	Raise wheel assembly & check bearings for free play by "feel" only & adjust as required
32	Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted

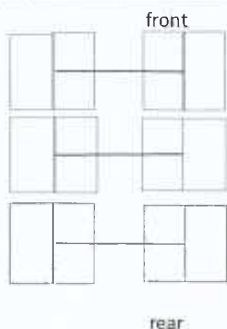[illegible]

rear

Initial if adjusted - Tick if OK

33	Check brake linings & drums for wear whilst hubs are removed
34	Check hubs for cracks and tapered shoulders for wear
35	Remove bearings and clean/inspect for reuse
36	Replace mudflaps & decals as required
37	Remove s/cam slack adjuster pins and rotate/lubricate
38	Pack bearings with fresh grease & reassemble

PLEASE COMPLETE PAGE 2



TRAILER & DOLLY SERVICE SHEET

Work/Repairs carried out

* REPLACE HOSE CLAMP ON RETAIL LHS
BRAKE BOOSTER

List any defect found

 
Part No/Consumables	Qty	Part No/Consumables	Qty

Tradesperson Name	MAT 14	Signature	
		Date	23-3-25



WORLD WELDING & TRANSPORT SERVICES

Maintenance Report

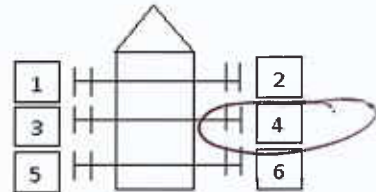VEHICLE: TL110DATE: 14-4-25HRS: -KLM: N/A

DESCRIPTION OF MAINTENANCE:

- * INSTALL REBUILT HUBS WITH NEW BRAKE DISC TO MIDDLE AXLE R/H
- * INSTALL REBUILT CALIPER AND NEW BRAKE PADS TO MIDDLE AXLE R/H
- * REPLACE TIRES ON MID AXLE R/H WITH Run-outs

NAME: Matt HSIGNATURE: [Signature]

Entered 16/5/25 DF.

 
TRAILER & DOLLY SERVICE SHEET

DATE 12-5-25 START TIME _____ FINISH TIME _____
FLEET NO 72110 KM'S N/A HRS _____

JOB NO _____
REGO _____

Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable		A Service	B Service	C Service
Local Trailers	40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trailers	15000km 10 days 150000km/365days		15000KM	150000KM
1	Check faults noted on daily prestart and repair as necessary	MH		
2	Check fleet numbers are serviceable	MH		
3	Record Hub meter reading	N/A		
4	Lubricate Container Pins	MH		
5	Check operation & condition of all lights/reflectors	MH		
6	Apply Air Check for leaks from boosters, valves & air lines	MH		
7	Adjust brakes , visually inspect components	MH		
8	Check air cells for air leaks and deterioration	MH		
9	Drain all air tanks, report if any oil is present in system	MH		
10	Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points	MH		
11	Check hoist mounting bolts, hoses, coupling	MH		
12	Check number plate & rego label security. Check that rego label is current	MH		
13	Check condition of front air connections, light plug base & electrical lead	MH		
14	Check security of spare wheels & spare wheel carrier/gate rack	MH		
15	Check condition & security of all mudflaps, mudguards, brackets & spray suppression	MH		
16	Check landing legs for damage & security	MH		
17	Check sub frame & cross members for cracks, damage & security	MH		
18	Check condition, position & security of all air hoses	MH		

19	Check brake linings & drums for wear. Check hub seals for leakage	
20	Check security of height control valves and links & adjust if required	
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye eye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be checked for tolerances	NOTE: If draw bar
22	Check wheel nut tensions, check valve stem alignment	
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear	
24	Check condition & security of rear marker signs	
25	Check ring feeder condition, operation & security	
26	Lubricate twist locks & check operation & security of pedestals, straighten handles as required	
27	Check condition & security of rope rails, gate pockets, winch rails & straps	
28	Check condition & security of floor and associated components	
29	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear	
30	Check security & bolt tension of airbag suspension hangers & radius rod arms	
31	Raise wheel assembly & check bearings for free play by "feel" only & adjust as required	
32	Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted	

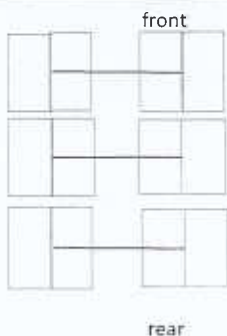[illegible]

33	Check brake linings & drums for wear whilst hubs are removed
34	Check hubs for cracks and tapered shoulders for wear
35	Remove bearings and clean/inspect for reuse
36	Replace mudflaps & decals as required
37	Remove s/cam slack adjuster pins and rotate/lubricate
38	Pack bearings with fresh grease & reassemble

Initial if adjusted - Tick if OK

PLEASE COMPLETE PAGE 2



TRAILER & DOLLY SERVICE SHEET

Work/Repairs carried out

★ REPLACE FRONT RHS CLEARANCE LIGHT

★ REPAIR WIRING TO REAR CLEARANCE LIGHTS
RHS & LHS

List any defect found

Part No/Consumables

Qty

Part No/Consumables

Qty

Tradesperson Name

NATH H

Signature

[Signature]

Date

12-5-25



WORLD WELDING & TRANSPORT SERVICES

 
Maintenance Report

VEHICLE: TL110

DATE: 18-6-25

HRS: _____

KLM: N/A

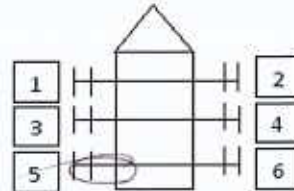

DESCRIPTION OF MAINTENANCE:

* WELD UP CRACKED SPRING SADDLE ON
REAR AXLE LHS

* RETORQUE U-BOLTS ON REAR AXLE LHS

* WELD UP CRACKS ON SIDES OF BINS

* GREASE TRAILER

* TIE UP LOOSE HOSES

NAME: Mat H

SIGNATURE: [Signature]



TRAILER & DOLLY SERVICE SHEET

DATE 15-7-25

START TIME _____ FINISH TIME _____

JOB NO _____

FLEET NO 2110

KM'S N/A HRS _____

REGO _____

Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable		A Service	B Service	C Service
Local Trailers	40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trailers	15000km 10 days 150000km/365days		15000KM	150000KM
1	Check faults noted on daily prestart and repair as necessary		MH	
2	Check fleet numbers are serviceable		MH	
3	Record Hub meter reading		N/A	
4	Lubricate Container Pins		MH	
5	Check operation & condition of all lights/reflectors		MH	
6	Apply Air Check for leaks from boosters, valves & air lines		MH	
7	Adjust brakes , visually inspect components		MH	
8	Check air cells for air leaks and deterioration		MH	
9	Drain all air tanks, report if any oil is present in system		MH	
10	Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points		MH	
11	Check hoist mounting bolts, hoses, coupling		MH	
12	Check number plate & rego label security. Check that rego label is current		MH	
13	Check condition of front air connections, light plug base & electrical lead		MH	
14	Check security of spare wheels & spare wheel carrier/gate rack		MH	
15	Check condition & security of all mudflaps, mudguards, brackets & spray suppression		MH	
16	Check landing legs for damage & security		MH	
17	Check sub frame & cross members for cracks, damage & security		MH	
18	Check condition, position & security of all air hoses		MH	

19	Check brake linings & drums for wear. Check hub seals for leakage
20	Check security of height control valves and links & adjust if required
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye NOTE: If draw bar eye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be checked for tolerances
22	Check wheel nut tensions, check valve stem alignment
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear
24	Check condition & security of rear marker signs
25	Check ring feeder condition, operation & security
26	Lubricate twist locks & check operation & security of pedestals, straighten handles as required
27	Check condition & security of rope rails, gate pockets, winch rails & straps
28	Check condition & security of floor and associated components
29	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear
30	Check security & bolt tension of airbag suspension hangers & radius rod arms
31	Raise wheel assembly & check bearings for free play by "feel" only & adjust as required
32	Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted

MH	
N/A	
MH	
MH	
MH	
MH	
MH	
MH	
MH	
MH	
MA	
MH	



33	Check brake linings & drums for wear whilst hubs are removed
34	Check hubs for cracks and tapered shoulders for wear
35	Remove bearings and clean/inspect for reuse
36	Replace mudflaps & decals as required
37	Remove s/cam slack adjuster pins and rotate/lubricate
38	Pack bearings with fresh grease & reassemble

Initial if adjusted - Tick if OK

PLEASE COMPLETE PAGE 2



TRAILER & DOLLY SERVICE SHEET

Work/Repairs carried out

* NEW HUB, CALIPER, AND BRAKE PADS
FITTED TO FRONT AXLE RHS.

* REPLACED WORN KING PIN

* REPLACED RING FEEDER WITH A SECOND
HAND ONE, FITTED NEW RUBBER BUSHES

List any defect found

Part No/Consumables	Qty	Part No/Consumables	Qty

Tradesperson Name	MATE H	Signature	
		Date	15-2-25