





Certificate of Inspection
Caravans and Trailers
(over 3.5 tonne ATM to and 10.0 tonne ATM)
Transport Operations (Road Use Management) Act 1995

Owner and vehicle details Vehicle Owner's name and address	First inspection HT-A 572734
WORLD WELDING	Result
Mount Ist Postcode 4825	Inspection date Inspection time odometer reading
Plate number (if applicable) State	Signature of Examiner Examiner's no.
VIN/Chassis number 6 F 8 0 0 0 0 0 0 0 0 4 / 0 / 7 8 2	Dig agreement .
6 1 00 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	Result
AZMEB	Inspection date Inspection time Mobile AIS unit odometer reading
Body shape DOCCH	/ / am pm
Current Gas Certificate number (if applicable)	Signature of Examiner Examiner's no.
NA	
Compliance type Give details	Name and location RTC 52-54 CROCONICE
Compliance Import Other Date	CRES! BOHIE Postcode 48/8
Oate on Plate Vehicle colour O.1.1.9 BLACK	Approved Inspection Station Number Mobile AIS unit Registration Number
Fare ATM (if applicable)	Certification
Results of inspection	Approved Examiner - I have inspected the vehicle indicated on this form in strict accordance with the guidelines set out in the Code of
Please Indicate: Pass V Fall X First Final	Practice Vehicle Inspection Guidelines and have found no defect that would affect its safe use on the road and it meets the requirements of the Transport Operations (Road Use Management) Act.
dentification inspection	Inspected by - Signature of Examiner Date 29.8 24
Modifications	Name of Examiner (please print) Examiner's po.
ody and chassis	WHIE BLACKBUILD 22554
uspension	Proprietor - I have ensured that the requirements of the Transport Operations (Road Use Management) Act relating to the issue of this certificate have been complied with.
	Issued by - Signature of Proprietor Date
ow couplings	Millell Man 2718 24
Petails of other items rejected	Name of Proprietor (please print) OALL PLACK-BURN
	Original This copy for (Pink) registration of vehicle (Yellow) Owner's copy
	• Triplicate To be given to owner (Green) - where a further inspection is required • Quadruplicate Book (White) - copy
labile AIS unit - location of vohicle inspection	Privacy Statement: The Department of Transport and Main Roads is collecting the

Information on this form for the purposes of managing the Department of Transport and Main Roads' vehicle register. This information is authorised or required by the Transport Operations (Road Use Management) Act. The Department of Transport and Main Roads or its agents usually gives some or all of this information to vehicle insurers, struttory entities, isovercy entities, persons involved in vehicle accidents/incidents or vehicle manufacturers or their employees or agents and to or through interstate registration authorities. Your personal details will not be disclosed to any other third party without your consent unless required or authorised by law.



VEHICLE: WW TL III	ATE: 4-9-24
HRS	
KLM	3 4 4
DESCRIPTION OF MAINTENANCE:	5 H 6
- Change hydralic coupling	s on Pont
- Change hydralic coupling - Checkover unit	
- Check over unit	_ \$6
*	
-	
NAME: MARK ALLEN	
IVAIVIE: 1	=1
SIGNATURE:	




DATE 8-9-24	START TIME,	FINISH TIME	JOB
FLEET NO TUIL	KM'SN/A	HRS	REG

JOB NO					-
REGO_	Y	B	6	4	ED

Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable	A Service	B Service	C Service
Local Trailers 40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trailers 15000km 10 days 150000km/365days		15000KM	150000KM
1 Check faults noted on daily prestart and repair as necessary			MA
2 Check fleet numbers are serviceable			MH
3 Record Hub meter reading			NA
4 Lubricate Container Pins			NA
5 Check operation & condition of all lights/reflectors			MH
6 Apply Air Check for leaks from boosters, valves & air lines			MH
7 Adjust brakes , visually inspect components			m4
8 Check air cells for air leaks and deterioration			MH
9 Drain all air tanks, report if any oil is present in system			MH
10 Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points			MH
11 Check hoist mounting bolts, hoses, coupling			MH
12 Check number plate & rego label security. Check that rego label is current			MH
13 Check condition of front air connections, light plug base & electrical lead			MH
14 Check security of spare wheels & spare wheel carrier/gate rack			NA
15 Check condition & security of all mudflaps, mudguards, brackets & spray suppression			MH
16 Check landing legs for damage & security			MH
17 Check sub frame & cross members for cracks, damage & security			MH
18 Check condition, position & security of all air hoses			mH

19	Check brake linings & drums for wear. Check hub seals for leakage
20	Check security of height control valves and links & adjust if required
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye NOTE: If draw bar eye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be checked for tolerances
22	Check wheel nut tensions, check valve stem alignment
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear
24	Check condition & security of rear marker signs
25	Check ring feeder condition, operation & security
26	Lubricate twist locks & check operation & security of pedestals, straighten handles as required
27	Check condition & security of rope rails, gate pockets, winch rails & straps
28	Check condition & security of floor and associated components
29	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear
30	Check security & bolt tension od airbag suspension hangers & radius rod arms
31	Raise wheel assembly & check bearings for free play by "feel" only & adjust as required
32	Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted

MH
NA
m4
MH
MH
MH
NA
NA
NA
MH

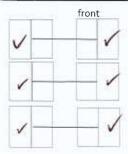

-	
33	Check brake linings & drums for wear whilst hubs are removed
34	Check hubs for cracks and tapered shoulders for wear
35	Remove bearings and clean/inspect for reuse
36	Replace mudflaps & decals as required
37	Remove s/cam slack adjuster pins and rotate/lubricate
38	Pack bearings with fresh grease & reassemble

MH NA NA NA



Work/Repairs carried of	out			
as For	VEW	" 00	NOT OVERT	AKE" SEN
)	
st any defect found				
			_	
art No/Consumables	lot.		0 *** /0 ** 11	
art No/Consumables	Qty		Part No/Consumables	Qty
	1			
radocnorcan Nama	MAIT	11	Cignoture	mm
radesperson Name	17 19 UI	H	Signature	8-9-24
			Date	8-9-24





DATE 2	2-9-24
FLEET NO	7111

TART TIME		FINISH TIME	
M'S	NA	HRS	

JOB NO	
DECO	

	ervice Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable	A Service	B Service	C Service
Local Trailers	40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trail	rs 15000km 10 days 150000km/365days		15000KM	150000KM
1 Check faults r	ted on daily prestart and repair as necessary	MH		
2 Check fleet n	nbers are serviceable	mit		
3 Record Hub n	eter reading	NA		
4 Lubricate Cor	ainer Pins	NA		
5 Check operat	n & condition of all lights/reflectors	mit		
6 Apply Air Che	k for leaks from boosters, valves & air lines	MH		
7 Adjust brakes	visually inspect components	met		
8 Check air cell	for air leaks and deterioration	m1+		
9 Drain all air ta	ks, report if any oil is present in system	MH		
10 Grease trailer	ncl. brake cams, slack adjusters, landing legs, ring feeder & other grease points	MH		
11 Check hoist n	ounting bolts, hoses, coupling	MA		
12 Check number	plate & rego label security. Check that rego label is current	mit		
13 Check conditi	n of front air connections, light plug base & electrical lead	MH		
14 Check securit	of spare wheels & spare wheel carrier/gate rack	NA		
15 Check condit	n & security of all mudflaps, mudguards, brackets & spray suppression	MH		
16 Check landing	legs for damage & security	mH		
17 Check sub fra	ne & cross members for cracks, damage & security	m14		
18 Check condit	n, position & security of all air hoses	mat		

19	9 Check brake linings & drums for wear. Check hub seals for leakage	
20	20 Check security of height control valves and links & adjust if required	
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye NOTE: If draw bar eye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be checked for tolerances	
22	Check wheel nut tensions, check valve stem alignment	
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear	
24	Check condition & security of rear marker signs	
25	Check ring feeder condition, operation & security	
26	Lubricate twist locks & check operation & security of pedestals, straighten handles as required	
27	7 Check condition & security of rope rails, gate pockets, winch rails & straps	
28	Check condition & security of floor and associated components	
29	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear	
30	Check security & bolt tension od airbag suspension hangers & radius rod arms	
31	Raise wheel assembly & check bearings for free play by "feel" only & adjust as required	
32	Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted	

	Ī	
-		
┢	-	
L		
Г		
\vdash		
-	-	

iront

33	Check brake linings & drums for wear whilst hubs are removed
34	Check hubs for cracks and tapered shoulders for wear
35	Remove bearings and clean/inspect for reuse
36	Replace mudflaps & decals as required
37	Remove s/cam slack adjuster pins and rotate/lubricate
38	Pack bearings with fresh grease & reassemble

rear

Initial if adjusted - Tick if OK

PLEASE COMPLETE PAGE 2



Work/Repairs carried	out		
st any defect found			
art No/Consumables	Qty	Part No/Consumables	Qtv
art No/Consumables	Qty	Part No/Consumables	Qty
art No/Consumables	Qty	Part No/Consumables	Qty
art No/Consumables	Qty	Part No/Consumables	Qty
art No/Consumables	Qty	Part No/Consumables	Qty
art No/Consumables	Qty	Part No/Consumables	Qty
art No/Consumables	Qty	Part No/Consumables	Qty
art No/Consumables	Qty	Part No/Consumables	Qty
art No/Consumables	Qty	Part No/Consumables	Qty
art No/Consumables	Qty	Part No/Consumables	Qty
art No/Consumables	Qty	Part No/Consumables	Qty
art No/Consumables	Qty	Part No/Consumables	Qty
art No/Consumables	Qty	Part No/Consumables	Qty
art No/Consumables	Qty	Part No/Consumables	Qty
art No/Consumables	Qty	Part No/Consumables	Qty
art No/Consumables	Qty	Part No/Consumables	Qty
art No/Consumables	Qty	Part No/Consumables	Qty
art No/Consumables	Qty PATT 14	Part No/Consumables Signature	Qty Qty 22-9-24



ENTERED POFINIZA BY OF

DATE	10-10-24	START
FLEET	NO_72-111	KM'S

START TIME		FINISH TIME	
KM'S	NIA	HRS	

JOB NO	
REGO	

Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable	A Service	B Service	C Service
Local Trailers 40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trailers 15000km 10 days 150000km/365days		15000KM	150000KM
1 Check faults noted on daily prestart and repair as necessary	MH		
2 Check fleet numbers are serviceable	mH		
3 Record Hub meter reading	MA		
4 Lubricate Container Pins	NIA		
5 Check operation & condition of all lights/reflectors	MH		
6 Apply Air Check for leaks from boosters, valves & air lines	MH		
7 Adjust brakes , visually inspect components	mit		
8 Check air cells for air leaks and deterioration	mi		
9 Drain all air tanks, report if any oil is present in system	MH		
O Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points	MH		
1 Check hoist mounting bolts, hoses, coupling	MIH		
2 Check number plate & rego label security. Check that rego label is current	mit		
.3 Check condition of front air connections, light plug base & electrical lead	M17		
4 Check security of spare wheels & spare wheel carrier/gate rack	NA		
.5 Check condition & security of all mudflaps, mudguards, brackets & spray suppression	MH		
6 Check landing legs for damage & security	MH		
.7 Check sub frame & cross members for cracks, damage & security	mH		
18 Check condition, position & security of all air hoses	MH		

19	Check brake linings & drums for wear. Check hub seals for leakage
20	Check security of height control valves and links & adjust if required
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye NOTE: If draw bar eye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be checked for tolerances
22	Check wheel nut tensions, check valve stem alignment
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear
24	Check condition & security of rear marker signs
25	Check ring feeder condition, operation & security
26	Lubricate twist locks & check operation & security of pedestals, straighten handles as required
27	Check condition & security of rope rails, gate pockets, winch rails & straps
28	Check condition & security of floor and associated components
29	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear
30	Check security & bolt tension od airbag suspension hangers & radius rod arms
31	Raise wheel assembly & check bearings for free play by "feel" only & adjust as required
32	Indicate on holow drawing wheel hearings that are replaced, shocked and/or adjusted

-	Tront			HONE	
	-				
	1				
	- 1				

33 Check brake linings & drums for wear whilst hubs are removed
34 Check hubs for cracks and tapered shoulders for wear
35 Remove bearings and clean/inspect for reuse
36 Replace mudflaps & decals as required
37 Remove s/cam slack adjuster pins and rotate/lubricate
38 Pack bearings with fresh grease & reassemble

rear

Initial if adjusted - Tick if OK

PLEASE COMPLETE PAGE 2



Work/Repairs carried	out		
List any defect found			
Part No/Consumables	Qty	Part No/Consumables	Qty
	1		
Tradesperson Name	MAN H	Signature	no
		0.44	10-10-01



DATE 22-11-24	START TIME _		FINISH TIME	JOB NO
FLEET NO 72111	KM'S	NA	HRS	REGO

Service Items	- Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable	A Service	B Service	C Service
Local Trailers	40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trailers	15000km 10 days 150000km/365days		15000KM	150000KM
1 Check faults noted on daily	prestart and repair as necessary	MM		
2 Check fleet numbers are ser	rviceable	MH		
3 Record Hub meter reading		MH		
4 Lubricate Container Pins		NA		
5 Check operation & conditio	n of all lights/reflectors	MH		
6 Apply Air Check for leaks fro	om boosters, valves & air lines	MA		
7 Adjust brakes , visually insp	ect components	MH		
8 Check air cells for air leaks a	and deterioration	MH		
9 Drain all air tanks, report if	any oil is present in system	mH		
10 Grease trailer incl. brake ca	ms, slack adjusters, landing legs, ring feeder & other grease points	MH		
11 Check hoist mounting bolts,	, hoses, coupling	MH		
12 Check number plate & rego	label security. Check that rego label is current	mH		
13 Check condition of front air	connections, light plug base & electrical lead	MH		
14 Check security of spare whe	eels & spare wheel carrier/gate rack	NA		
15 Check condition & security	of all mudflaps, mudguards, brackets & spray suppression	MH		
16 Check landing legs for dama		mu		
	embers for cracks, damage & security	MH		
18 Check condition, position &		MH		
19 Check brake linings & drum	s for wear. Check hub seals for leakage			
20 Check security of height cor	ntrol valves and links & adjust if required			
	ecurity & condition, check draw bar/bushes and towing eye NOTE: If draw bar not to be retorqued and must be removed and replaced and draw bar eye boss to be			
22 Check wheel nut tensions, o	check valve stem alignment			
23 Check all tyre pressures and	d refit valve caps (including spare) report abnormal wear]		
24 Check condition & security	of rear marker signs			
25 Check ring feeder condition	, operation & security			
26 Lubricate twist locks & chec	ck operation & security of pedestals, straighten handles as required			
27 Check condition & security	of rope rails, gate pockets, winch rails & straps			
28 Check condition & security	of floor and associated components			
29 Raise trailer by rear frame 8	& individually inspect rocker/radius bushes, wear pads, air cells for wear			
30 Check security & bolt tensic	on od airbag suspension hangers & radius rod arms			
31 Raise wheel assembly & che	eck bearings for free play by "fee!" only & adjust as required			
32 Indicate on below drawing	wheel bearings that are replaced, checked and/or adjusted			
front				
	33 Check brake linings & drums for wear whilst hubs are removed			
	34 Check hubs for cracks and tapered shoulders for wear			
	35 Remove bearings and clean/inspect for reuse			
	36 Replace mudflaps & decals as required			
	37 Remove s/cam slack adjuster pins and rotate/lubricate			

rear

Initial if adjusted - Tick if OK

PLEASE COMPLETE PAGE 2

38 Pack bearings with fresh grease & reassemble



Work/Repairs carried o	ut		
List any defect found			
	Ja .		
:			
Part No/Consumables	Qty	Part No/Consumables	Qty
	- and		
Tradesperson Name	MATT H	Signature	92-11-24
		Date	82-11-24





VEHICLE:	72 111		DATE:	29-11-24	
HRS: KLM: DESCRIPTION C	N/A DF MAINTENANCE:		1 3 5		
*	REPLACE	Russes	THROUGH	AIR 140)ie
ON	FRONT RH.	S PRA	Ker Boos	ER / PARK	BRAVE
Ho 80	REPLACE FRONT RH.		, , , , , , , , , , , , , , , , , , , ,		374 25
NAME: _	MATI	H	79		
SIGNATURE:	may				



VEHICLE: 72/1/	DATE: 5/12/24
	7 1 1
une	^
HRS:	\triangle $-$
KI M:	1 2
KLM:	3 4 4
DESCRIPTION OF MAINTENANCE:	5 11 6
k D - 1	-1-
* Replace pads middle fale both	31003
x heplane souls driver side Front	1210
<i>((((((((((</i>	
7,	
	
<u> </u>	
NAME: Laublen Fort	
- Lawrent	
SIGNATURE:	



VEHICLE: Tell	DATE: 9/12/24
HRSKLM	1 H 4 3 H 4 5 H 6
Front draws side and	Kuglan pools
NAME:	
SIGNATURE:	



DATE 15-12-24	START TIME _	6	FINISH TIME	JOB NO
FLEET NO 72 111	KM'S	NIA	HRS	REGO

	Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable	A Service	B Service	C Service
	Local Trailers 40000km/365 days	7 DAYS	14 DAYS	40000KM
	Linehaul Trailers 15000km 10 days 150000km/365days		15000KM	150000KM
1	Check faults noted on daily prestart and repair as necessary	MIH		
2	Check fleet numbers are serviceable	MH		
3	Record Hub meter reading	NA		
4	Lubricate Container Pins	NIA		
5	Check operation & condition of all lights/reflectors	MH		
6	Apply Air Check for leaks from boosters, valves & air lines	MH		
7	Adjust brakes , visually inspect components	MH		
8	Check air cells for air leaks and deterioration	MH		
9	Drain all air tanks, report if any oil is present in system	MH		
10	Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points	MH		
11	Check hoist mounting bolts, hoses, coupling	MH		
12	Check number plate & rego label security. Check that rego label is current	MH		
13	Check condition of front air connections, light plug base & electrical lead	MH		
14	Check security of spare wheels & spare wheel carrier/gate rack	NA		
15	Check condition & security of all mudflaps, mudguards, brackets & spray suppression	MH		
16	Check landing legs for damage & security	MH		
17	Check sub frame & cross members for cracks, damage & security	mH		
18	Check condition, position & security of all air hoses	MH		
19	Check brake linings & drums for wear. Check hub seals for leakage			
20	Check security of height control valves and links & adjust if required			
	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye NOTE: If draw bar eye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be checked for tolerances			
22	Check wheel nut tensions, check valve stem alignment			
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear			
24	Check condition & security of rear marker signs			
25	Check ring feeder condition, operation & security			
26	Lubricate twist locks & check operation & security of pedestals, straighten handles as required			
27	Check condition & security of rope rails, gate pockets, winch rails & straps			
28	Check condition & security of floor and associated components			
29	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear			
30	Check security & bolt tension od airbag suspension hangers & radius rod arms			
31	Raise wheel assembly & check bearings for free play by "feel" only & adjust as required			
32	Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted			
	front			
	22 Chaple basts Paisas 9 dayma for your title by bass and	1		
-	33 Check brake linings & drums for wear whilst hubs are removed	1		
	34 Check hubs for cracks and tapered shoulders for wear	1		
	35 Remove bearings and clean/inspect for reuse	-		
	36 Replace mudflaps & decals as required	-		
	37 Remove s/cam slack adjuster pins and rotate/lubricate	1		

rear

38 Pack bearings with fresh grease & reassemble



Work/Repairs carried o	out		
t any defect found			
cany defect found			
rt No/Consumables	Otro	D-+ N-/C- 11	DV 5
rt No/consumables	Qty	Part No/Consumables	Qty
desperson Name	MAT H	Signature	200 25
		Date	15-12 211



DATE 21-12-24	START TIME_		FINISH TIME	JOB NO
FLEET NO 72 111	KM'S	NA	HRS	REGO

	Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable	A Service	B Service	C Service		
l	ocal Trailers 40000km/365 days	7 DAYS	14 DAYS	40000KM		
ا	inehaul Trailers 15000km 10 days 150000km/365days		15000KM	150000KM		
1	heck faults noted on daily prestart and repair as necessary	MH				
2 0	check fleet numbers are serviceable	MH				
3 8	Record Hub meter reading	NA				
4 1	ubricate Container Pins	NIA				
5 (check operation & condition of all lights/reflectors	MH				
6	apply Air Check for leaks from boosters, valves & air lines	MH				
7 /	djust brakes , visually inspect components	MH				
8	heck air cells for air leaks and deterioration	MH				
9 [Prain all air tanks, report if any oil is present in system	MH				
10	rease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points	MH				
11 (heck hoist mounting bolts, hoses, coupling	MH				
12	heck number plate & rego label security. Check that rego label is current	MH				
13	heck condition of front air connections, light plug base & electrical lead	MIH				
14	heck security of spare wheels & spare wheel carrier/gate rack	NA				
15 0	heck condition & security of all mudflaps, mudguards, brackets & spray suppression	MH				
- 1.0	heck landing legs for damage & security	MH				
17 (heck sub frame & cross members for cracks, damage & security	MH				
18 0	heck condition, position & security of all air hoses	MH				
		4		W ====		
19 (heck brake linings & drums for wear. Check hub seals for leakage					
	heck security of height control valves and links & adjust if required					
	heck skid plate/king pin security & condition, check draw bar/bushes and towing eye NOTE: If draw bar	1				
	ye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be hecked for tolerances					
22 (Check wheel nut tensions, check valve stem alignment					
23 0	Check all tyre pressures and refit valve caps (including spare) report abnormal wear					
24 (heck condition & security of rear marker signs					
25 Check ring feeder condition, operation & security						
26 L	ubricate twist locks & check operation & security of pedestals, straighten handles as required					
27 (heck condition & security of rope rails, gate pockets, winch rails & straps					
28 0	heck condition & security of floor and associated components					
29 F	aise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear					
30 0	heck security & bolt tension od airbag suspension hangers & radius rod arms			1		
31 F	aise wheel assembly & check bearings for free play by "feel" only & adjust as required					
32	ndicate on below drawing wheel bearings that are replaced, checked and/or adjusted					
	front					
	33 Check brake linings & drums for wear whilst hubs are removed					
T	34 Check hubs for cracks and tapered shoulders for wear					
	35 Remove bearings and clean/inspect for reuse	1				
-	36 Replace mudflaps & decals as required	1				
	37 Remove s/cam slack adjuster pins and rotate/lubricate					
	38 Pack bearings with fresh grease & reassemble					
	Joe Food acquirings with the single case of reassemble					

rear



Work/Repairs carried out								
List any defect found								
List any defect found								
S			- Lauren					
Part No/Consumables	Qty	Part No/Consumables	Qty					
		70						
Tradesperson Name	MATT H	Signature	m					