 




Maintenance Report

DATE: 21/1/25

KLM:

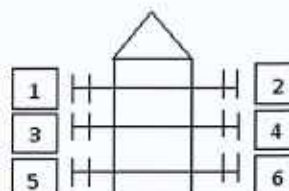

Replaces AFrame bushes

SIGNATURE: 


TRAILER & DOLLY SERVICE SHEET

DATE 30-1-25 START TIME _____ FINISH TIME _____
FLEET NO 72111 KM'S N/A HRS _____

JOB NO _____
REGO _____

Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable		A Service	B Service	C Service
Local Trailers	40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trailers	15000km 10 days 150000km/365days		15000KM	150000KM
1	Check faults noted on daily prestart and repair as necessary	MH		
2	Check fleet numbers are serviceable	MH		
3	Record Hub meter reading	MH		
4	Lubricate Container Pins	N/A		
5	Check operation & condition of all lights/reflectors	MH		
6	Apply Air Check for leaks from boosters, valves & air lines	MH		
7	Adjust brakes , visually inspect components	MH		
8	Check air cells for air leaks and deterioration	MH		
9	Drain all air tanks, report if any oil is present in system	MH		
10	Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points	MH		
11	Check hoist mounting bolts, hoses, coupling	MH		
12	Check number plate & rego label security. Check that rego label is current	MH		
13	Check condition of front air connections, light plug base & electrical lead	MH		
14	Check security of spare wheels & spare wheel carrier/gate rack	N/A		
15	Check condition & security of all mudflaps, mudguards, brackets & spray suppression	MH		
16	Check landing legs for damage & security	MH		
17	Check sub frame & cross members for cracks, damage & security	MH		
18	Check condition, position & security of all air hoses	MH		

19	Check brake linings & drums for wear. Check hub seals for leakage
20	Check security of height control valves and links & adjust if required
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye eye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be checked for tolerances
22	Check wheel nut tensions, check valve stem alignment
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear
24	Check condition & security of rear marker signs
25	Check ring feeder condition, operation & security
26	Lubricate twist locks & check operation & security of pedestals, straighten handles as required
27	Check condition & security of rope rails, gate pockets, winch rails & straps
28	Check condition & security of floor and associated components
29	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear
30	Check security & bolt tension of airbag suspension hangers & radius rod arms
31	Raise wheel assembly & check bearings for free play by "feel" only & adjust as required
32	Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted

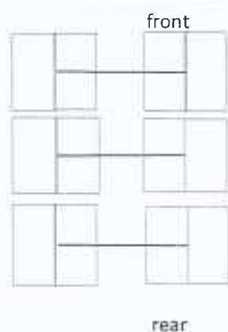 [illegible]

Initial if adjusted - Tick if OK

- 33 Check brake linings & drums for wear whilst hubs are removed
- 34 Check hubs for cracks and tapered shoulders for wear
- 35 Remove bearings and clean/inspect for reuse
- 36 Replace mudflaps & decals as required
- 37 Remove s/cam slack adjuster pins and rotate/lubricate
- 38 Pack bearings with fresh grease & reassemble

PLEASE COMPLETE PAGE 2




TRAILER & DOLLY SERVICE SHEET

Work/Repairs carried out

* TIE UP LOOSE HOSES

List any defect found

Part No/Consumables	Qty	Part No/Consumables	Qty

Tradesperson Name	MATT H	Signature	
		Date	30-1-25



TRAILER & DOLLY SERVICE SHEET


DATE 6-2-25 START TIME _____ FINISH TIME _____
FLEET NO 1211 KM'S N/A HRS _____

JOB NO _____
REGO _____

Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable		A Service	B Service	C Service
Local Trailers	40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trailers	15000km 10 days 150000km/365days		15000KM	150000KM
1	Check faults noted on daily prestart and repair as necessary		MH	
2	Check fleet numbers are serviceable		MH	
3	Record Hub meter reading		N/A	
4	Lubricate Container Pins		MA	
5	Check operation & condition of all lights/reflectors		MH	
6	Apply Air Check for leaks from boosters, valves & air lines		MH	
7	Adjust brakes , visually inspect components		MH	
8	Check air cells for air leaks and deterioration		MH	
9	Drain all air tanks, report if any oil is present in system		MH	
10	Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points		MH	
11	Check hoist mounting bolts, hoses, coupling		MH	
12	Check number plate & rego label security. Check that rego label is current		MH	
13	Check condition of front air connections, light plug base & electrical lead		MH	
14	Check security of spare wheels & spare wheel carrier/gate rack		N/A	
15	Check condition & security of all mudflaps, mudguards, brackets & spray suppression		MH	
16	Check landing legs for damage & security		MH	
17	Check sub frame & cross members for cracks, damage & security		MH	
18	Check condition, position & security of all air hoses		MH	

19	Check brake linings & drums for wear. Check hub seals for leakage
20	Check security of height control valves and links & adjust if required
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye NOTE: If draw bar eye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be checked for tolerances
22	Check wheel nut tensions, check valve stem alignment
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear
24	Check condition & security of rear marker signs
25	Check ring feeder condition, operation & security
26	Lubricate twist locks & check operation & security of pedestals, straighten handles as required
27	Check condition & security of rope rails, gate pockets, winch rails & straps
28	Check condition & security of floor and associated components
29	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear
30	Check security & bolt tension of airbag suspension hangers & radius rod arms
31	Raise wheel assembly & check bearings for free play by "feel" only & adjust as required
32	Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted

MH	
N/A	
MH	
MH	
MH	
MH	
N/A	
N/A	
N/A	
MH	
MH	
MH	

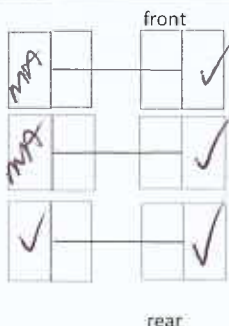 

33	Check brake linings & drums for wear whilst hubs are removed
34	Check hubs for cracks and tapered shoulders for wear
35	Remove bearings and clean/inspect for reuse
36	Replace mudflaps & decals as required
37	Remove s/cam slack adjuster pins and rotate/lubricate
38	Pack bearings with fresh grease & reassemble

Initial if adjusted - Tick if OK

PLEASE COMPLETE PAGE 2



* REPLACE AIR CONNECTIONS ON FRONT AND REAR HOSES WITH COLD HANDS.

[illegible]

Mat H

6-2-25




TRAILER & DOLLY SERVICE SHEET

FLEET NO 72111 KM'S N/A HRS _____

REGO _____

Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable		A Service	B Service	C Service
Local Trailers	40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trailers	15000km 10 days 150000km/365days		15000KM	150000KM
1	Check faults noted on daily prestart and repair as necessary	MH		
2	Check fleet numbers are serviceable	MH		
3	Record Hub meter reading	N/A		
4	Lubricate Container Pins	N/A		
5	Check operation & condition of all lights/reflectors	MH		
6	Apply Air Check for leaks from boosters, valves & air lines	MH		
7	Adjust brakes , visually inspect components	MH		
8	Check air cells for air leaks and deterioration	MH		
9	Drain all air tanks, report if any oil is present in system	MH		
10	Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points	MH		
11	Check hoist mounting bolts, hoses, coupling	MH		
12	Check number plate & rego label security. Check that rego label is current	MH		
13	Check condition of front air connections, light plug base & electrical lead	MH		
14	Check security of spare wheels & spare wheel carrier/gate rack	N/A		
15	Check condition & security of all mudflaps, mudguards, brackets & spray suppression	MH		
16	Check landing legs for damage & security	MH		
17	Check sub frame & cross members for cracks, damage & security	MH		
18	Check condition, position & security of all air hoses	MH		

19	Check brake linings & drums for wear. Check hub seals for leakage
20	Check security of height control valves and links & adjust if required
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye eye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be checked for tolerances
22	Check wheel nut tensions, check valve stem alignment
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear
24	Check condition & security of rear marker signs
25	Check ring feeder condition, operation & security
26	Lubricate twist locks & check operation & security of pedestals, straighten handles as required
27	Check condition & security of rope rails, gate pockets, winch rails & straps
28	Check condition & security of floor and associated components
29	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear
30	Check security & bolt tension of airbag suspension hangers & radius rod arms
31	Raise wheel assembly & check bearings for free play by "feel" only & adjust as required
32	Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted

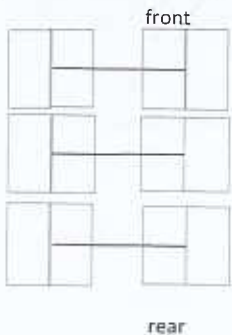 [illegible]

33	Check brake linings & drums for wear whilst hubs are removed
34	Check hubs for cracks and tapered shoulders for wear
35	Remove bearings and clean/inspect for reuse
36	Replace mudflaps & decals as required
37	Remove s/cam slack adjuster pins and rotate/lubricate
38	Pack bearings with fresh grease & reassemble

PLEASE COMPLETE PAGE 2

PLEASE COMPLETE PAGE 2



TRAILER & DOLLY SERVICE SHEET

Work/Repairs carried out

List any defect found

Part No/Consumables	Qty	Part No/Consumables	Qty

Tradesperson Name	Matt H	Signature	Matt H
		Date	15-3-25



TRAILER & DOLLY SERVICE SHEET

DATE 23-3-25

START TIME

FINISH TIME

JOB NO

FLEET NO 72111


KM'S N/A

HRS

REGO

Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable		A Service	B Service	C Service
Local Trailers	40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trailers	15000km 10 days 150000km/365days		15000KM	150000KM
1	Check faults noted on daily prestart and repair as necessary	MH		
2	Check fleet numbers are serviceable	MH		
3	Record Hub meter reading	MH		
4	Lubricate Container Pins	MH		
5	Check operation & condition of all lights/reflectors	M/I		
6	Apply Air Check for leaks from boosters, valves & air lines	MH		
7	Adjust brakes , visually inspect components	MH		
8	Check air cells for air leaks and deterioration	MH		
9	Drain all air tanks, report if any oil is present in system	MH		
10	Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points	MH		
11	Check hoist mounting bolts, hoses, coupling	MH		
12	Check number plate & rego label security. Check that rego label is current	M/I		
13	Check condition of front air connections, light plug base & electrical lead	MH		
14	Check security of spare wheels & spare wheel carrier/gate rack	N/A		
15	Check condition & security of all mudflaps, mudguards, brackets & spray suppression	MH		
16	Check landing legs for damage & security	M/I		
17	Check sub frame & cross members for cracks, damage & security	M/I		
18	Check condition, position & security of all air hoses	MH		

19	Check brake linings & drums for wear. Check hub seals for leakage
20	Check security of height control valves and links & adjust if required
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye eye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be checked for tolerances
22	Check wheel nut tensions, check valve stem alignment
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear
24	Check condition & security of rear marker signs
25	Check ring feeder condition, operation & security
26	Lubricate twist locks & check operation & security of pedestals, straighten handles as required
27	Check condition & security of rope rails, gate pockets, winch rails & straps
28	Check condition & security of floor and associated components
29	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear
30	Check security & bolt tension of airbag suspension hangers & radius rod arms
31	Raise wheel assembly & check bearings for free play by "feel" only & adjust as required
32	Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted

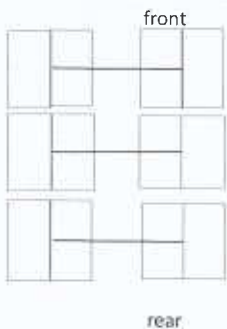 

Initial if adjusted - Tick if OK

PLEASE COMPLETE PAGE 2

33	Check brake linings & drums for wear whilst hubs are removed
34	Check hubs for cracks and tapered shoulders for wear
35	Remove bearings and clean/inspect for reuse
36	Replace mudflaps & decals as required
37	Remove s/cam slack adjuster pins and rotate/lubricate
38	Pack bearings with fresh grease & reassemble

[illegible][illegible]

Tradesperson Name	Matt H	Signature	
		Date	23-3-25

Entered 16/4/25 DF



WORLD WELDING & TRANSPORT SERVICES

 
Maintenance Report

VEHICLE: TL 111

DATE: 14-4-25

HRS:

KLM: N/A

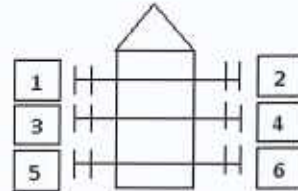

DESCRIPTION OF MAINTENANCE:

* FIT NEW TIRES TO REAR AXLE LHS (TRUCKS)

* REPLACE TIRES ON FRONT AXLE RHS WITH
Run-outs

NAME: Mark H

SIGNATURE: MA



 
WORLD WELDING & TRANSPORT SERVICES

Maintenance Report

VEHICLE: TL 111DATE: 2/45/25

HRS: _____

KLM: _____

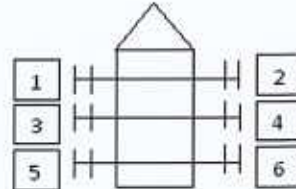DESCRIPTION OF MAINTENANCE:

Replaced Brake pad middle axle driver side


NAME: LEAKSIGNATURE: [Signature]



TRAILER & DOLLY SERVICE SHEET

JOB NO _____
REGO _____

19	Check brake linings & drums for wear. Check hub seals for leakage
20	Check security of height control valves and links & adjust if required
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye eye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be checked for tolerances
22	Check wheel nut tensions, check valve stem alignment
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear
24	Check condition & security of rear marker signs
25	Check ring feeder condition, operation & security
26	Lubricate twist locks & check operation & security of pedestals, straighten handles as required
27	Check condition & security of rope rails, gate pockets, winch rails & straps
28	Check condition & security of floor and associated components
29	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear
30	Check security & bolt tension of airbag suspension hangers & radius rod arms
31	Raise wheel assembly & check bearings for free play by "feel" only & adjust as required
32	Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted

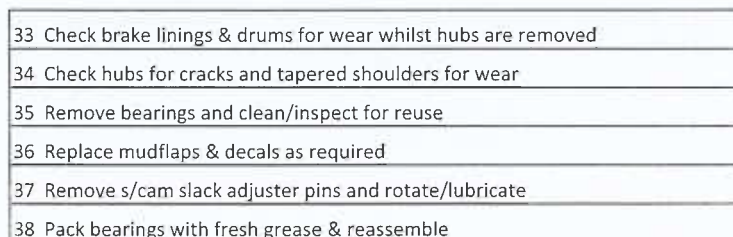 

PLEASE COMPLETE PAGE 2


TRAILER & DOLLY SERVICE SHEET

[illegible]

- REPAIR WIRING TO ALL PARK LIGHTS

List any defect found

[illegible]

Tradesperson Name	MATT H	Signature	
		Date	12-5-25

SIGNATURE: 



WORLD WELDING & TRANSPORT SERVICES

Maintenance Report

 
VEHICLE: TZ 111

DATE: 4-6-25

HRS: _____

KLM: N/A

DESCRIPTION OF MAINTENANCE:

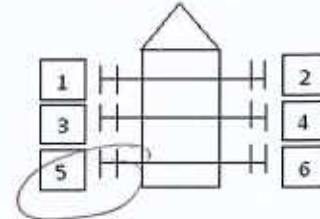

* REPLACE LEAKING BRAKE BOOSTER ON
REAR AXLE LHS

NAME: Mark H

SIGNATURE: [Signature]

SIGNATURE: 



TRAILER & DOLLY SERVICE SHEET

DATE 15-7-25

START TIME _____

FINISH TIME _____

JOB NO _____

FLEET NO TL111

KM'S _____

N/A

HRS _____

REGO _____

Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable		A Service	B Service	C Service
Local Trailers	40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trailers	15000km 10 days 150000km/365days		15000KM	150000KM
1	Check faults noted on daily prestart and repair as necessary		MH	
2	Check fleet numbers are serviceable		MH	
3	Record Hub meter reading		N/A	
4	Lubricate Container Pins		N/A	
5	Check operation & condition of all lights/reflectors		MH	
6	Apply Air Check for leaks from boosters, valves & air lines		MH	
7	Adjust brakes , visually inspect components		MH	
8	Check air cells for air leaks and deterioration		MH	
9	Drain all air tanks, report if any oil is present in system		MH	
10	Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points		MH	
11	Check hoist mounting bolts, hoses, coupling		MH	
12	Check number plate & rego label security. Check that rego label is current		MH	
13	Check condition of front air connections, light plug base & electrical lead		MH	
14	Check security of spare wheels & spare wheel carrier/gate rack		MH	
15	Check condition & security of all mudflaps, mudguards, brackets & spray suppression		MH	
16	Check landing legs for damage & security		MH	
17	Check sub frame & cross members for cracks, damage & security		MH	
18	Check condition, position & security of all air hoses		MH	

19	Check brake linings & drums for wear. Check hub seals for leakage
20	Check security of height control valves and links & adjust if required
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye NOTE: If draw bar eye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be checked for tolerances
22	Check wheel nut tensions, check valve stem alignment
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear
24	Check condition & security of rear marker signs
25	Check ring feeder condition, operation & security
26	Lubricate twist locks & check operation & security of pedestals, straighten handles as required
27	Check condition & security of rope rails, gate pockets, winch rails & straps
28	Check condition & security of floor and associated components
29	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear
30	Check security & bolt tension of airbag suspension hangers & radius rod arms
31	Raise wheel assembly & check bearings for free play by "feel" only & adjust as required
32	Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted

MH	
N/A	
MH	
MH	
MH	
MH	
MH	
N/A	
MH	
MH	
MH	
NA	
MH	



33	Check brake linings & drums for wear whilst hubs are removed
34	Check hubs for cracks and tapered shoulders for wear
35	Remove bearings and clean/inspect for reuse
36	Replace mudflaps & decals as required
37	Remove s/cam slack adjuster pins and rotate/lubricate
38	Pack bearings with fresh grease & reassemble

Initial if adjusted - Tick if OK

PLEASE COMPLETE PAGE 2



TRAILER & DOLLY SERVICE SHEET

Work/Repairs carried out

* NEW TRACK ROD BUSHES & PINS FITTED TO FRONT AXLE LHS & FRONT.
* REBUILT CALIPER & NEW BRAKE PADS FITTED TO MIDDLE AXLE LHS
* NEW EQUALISER BUSHES & PIN FITTED TO FRONT LHS.
* REPLACED TOW EYE

List any defect found

Part No/Consumables	Qty	Part No/Consumables	Qty

Tradesperson Name	MATT H	Signature	
		Date	15-7-25