



WORLD WELDING & TRANSPORT SERVICES

 
## Maintenance Report

VEHICLE: TL 21

DATE: 17-5-24

HRS: —

KLM: 34,984

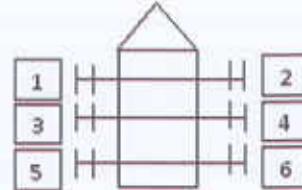

### DESCRIPTION OF MAINTENANCE:

\* REPLACE TIRES ON FRONT AXLES  
RHS WITH NEW ONES (VORTER)

NAME: MAT 14

SIGNATURE: [Signature]






List any defect found
MAIN REAR LEFT RAM SLIGHTLY LEAKING.

[illegible]

Tradesperson Name	MAT 17	Signature	
		Date	22-5-24



[illegible][illegible]

Tradesperson Name	MIT 17	Signature	
		Date	2-6-24





WORLD WELDING & TRANSPORT SERVICES

 
## Maintenance Report

VEHICLE: T221

DATE: 226-24

HRS: \_\_\_\_\_

KLM: 61,876

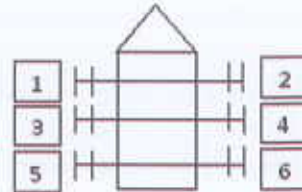

### DESCRIPTION OF MAINTENANCE:

\* FIT 2 NEW TIRES TO REAR  
AXLE LHS

\* REPLACE TIRES ON FRONT AXLE  
LHS WITH RUN-OUTS

NAME: MAT H

SIGNATURE: [Signature]



WORLD WELDING & TRANSPORT SERVICES

 
## Maintenance Report

VEHICLE: TL 21

DATE: 16-7-24

HRS                     

KLM 78 400

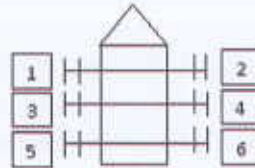

DESCRIPTION OF MAINTENANCE:

\* DIAGNOSE AND REPLACE  
ROAD TRAIN BRAKE RELAY VALVE

NAME: Matt H

SIGNATURE: M.H.



WORLD WELDING & TRANSPORT SERVICES


## Maintenance Report

 VEHICLE: TL 21

DATE: 17-7-24

HRS                     

KLM 79,309

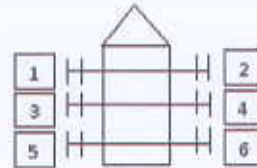

DESCRIPTION OF MAINTENANCE:

\* FIT NEW TIRES TO REAR RHS  
\* REPLACE WORN TIRE ON FRONT AXLE  
RHS INNER WITH RUN-OUT

\* REPLACE WORN TIRES ON MIDDLE AXLE  
LHS WITH RUNOUTS

NAME: MAD H

SIGNATURE: MAD







## TRAILER & DOLLY SERVICE SHEET

Work/Repairs carried out

\* REPLACE FLAT TIRE ON REAR AXLE  
LHS

\* REPLACE BRAKE BOOSTER ON  
MIDDLE AXLE RHS

List any defect found

Part No/Consumables	Qty	Part No/Consumables	Qty

Tradesperson Name	MATT H	Signature	
		Date	3-8-24

**WORLD WELDING & TRANSPORT SERVICES**


## Maintenance Report

VEHICLE: TL 21-LW25

DATE: 14/8/24

HRS 399775 ✓ WW25.

 KLM 19146

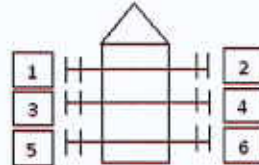

DESCRIPTION OF MAINTENANCE:

TL 21 Replace Booster

NAME: L. Fan

SIGNATURE: 




# TRAILER & DOLLY SERVICE SHEET

DATE 7-9-24 START TIME \_\_\_\_\_ FINISH TIME \_\_\_\_\_  
FLEET NO 7221 KM'S 127,299 HRS \_\_\_\_\_

JOB NO \_\_\_\_\_  
REGO \_\_\_\_\_

 Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable		A Service	B Service	C Service
Local Trailers	40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trailers	15000km 10 days 150000km/365days		15000KM	150000KM
1	Check faults noted on daily prestart and repair as necessary		MH	
2	Check fleet numbers are serviceable		MH	
3	Record Hub meter reading		MH	
4	Lubricate Container Pins		NA	
5	Check operation & condition of all lights/reflectors		MH	
6	Apply Air Check for leaks from boosters, valves & air lines		MH	
7	Adjust brakes , visually inspect components		MH	
8	Check air cells for air leaks and deterioration		MH	
9	Drain all air tanks, report if any oil is present in system		MH	
10	Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points		MH	
11	Check hoist mounting bolts, hoses, coupling		MH	
12	Check number plate & rego label security. Check that rego label is current		MH	
13	Check condition of front air connections, light plug base & electrical lead		MH	
14	Check security of spare wheels & spare wheel carrier/gate rack		MH	
15	Check condition & security of all mudflaps, mudguards, brackets & spray suppression		MH	
16	Check landing legs for damage & security		MH	
17	Check sub frame & cross members for cracks, damage & security		MH	
18	Check condition, position & security of all air hoses		MH	
19	Check brake linings & drums for wear. Check hub seals for leakage		MH	
20	Check security of height control valves and links & adjust if required		MH	
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye NOTE: If draw bar eye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be checked for tolerances		MH	
22	Check wheel nut tensions, check valve stem alignment		MH	
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear		MH	
24	Check condition & security of rear marker signs		MH	
25	Check ring feeder condition, operation & security		MH	
26	Lubricate twist locks & check operation & security of pedestals, straighten handles as required		NA	
27	Check condition & security of rope rails, gate pockets, winch rails & straps		NA	
28	Check condition & security of floor and associated components		MH	
29	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear		MH	
30	Check security & bolt tension od airbag suspension hangers & radius rod arms		MH	
31	Raise wheel assembly & check bearings for free play by "feel" only & adjust as required		MH	
32	Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted		MH	

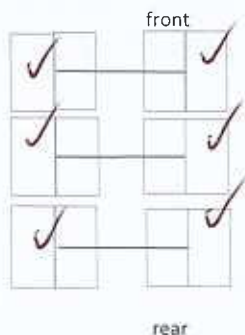

33	Check brake linings & drums for wear whilst hubs are removed
34	Check hubs for cracks and tapered shoulders for wear
35	Remove bearings and clean/inspect for reuse
36	Replace mudflaps & decals as required
37	Remove s/cam slack adjuster pins and rotate/lubricate
38	Pack bearings with fresh grease & reassemble


Initial if adjusted - Tick if OK

PLEASE COMPLETE PAGE 2



## TRAILER & DOLLY SERVICE SHEET

[illegible]

4 REPLACE MUD FLAP ON FRONT LHS

\* INSTALL NEW CLEARANCE LIGHT ON FRONT OF RHS GUARD

2 REPLACES STOP / TAIL LIGHT ON RHS

List any defect found

[illegible]

Tradesperson Name	<i>M. H.</i>	Signature	<i>M. H.</i>
		Date	7-9-24



# Certificate of inspection Trailers & Dollies over 750kg



1395

Ph 0417 600 249  
ABN 97 108 243 714**SUPERIOR  
MACHINERY  
MAINTENANCE**

## Owner and vehicle details

Vehicle Owner's name and address

INWATS  
10 KOLONGO CRES  
MT ISA QLD Postcode 4825

Plate No.

(if applicable)

State

Unit No.

311QZH QLD TL21

VIN/Chassis no.

6T9T25NT0D2NUM091

Make

Model

TRISTAR TRI

Body Shape

Badge (eg. Cargo)

SFH TRAILER

## Compliance type

Compliance

Plate

☒Import  
Plate

Give details

Other

☐☐

Date on Plate

Vehicle Colour

2013 Yellow

Left or Right hand drive?

Tare GVM 47000 GCM

## Results of inspection

Please indicate

Pass

☒

Fail

☒

1st

inspection

Final

inspection

Identification

☒☐

Modifications

☒☐

Lights &amp; Electrical Components

☒☐

Body &amp; Chassis

☒☐

Suspension

☒☐

Wheels &amp; Tyres

☒☐

Brakes

☒☐

Tow Coupling

☒☐

1st Axle

SB

☒

SB

☐

HB

☒

HB

☐

2nd Axle

SB

☒

SB

☐

HB

☒

HB

☐

3rd Axle

SB

☒

SB

☐

HB

☒

HB

☐

4th Axle

SB

☐

SB

☐

HB

☐

HB

☐

Details of other items rejected


## 1st Inspection

Result

☒

Inspection date

12/9/24

Inspection time

1:00 am

Odometer reading

—

Signature of Examiner

S. Py

Examiner's no.

18904

Final inspection (must not be more than 14 days from date of 1st inspection)

Result

☐

Inspection date

/ /

Inspection time

: am

Odometer reading

Signature of Examiner

Examiner's no.

## Inspection Station details

Name and location

SUPERIOR MACHINERY MAINTENANCE  
27 COMMERCIAL RD Postcode 4825

Approved Inspection Station Number

10588

## Certification

Approved examiner - I have inspected the vehicle indicated on this form and found it had no defect that would affect its safe use of the road and it meets the requirements of the Transport Operations (Road Use Management) Act 1995.

Inspected by - Signature of Examiner

S. Py

Date

12-9-24

Name of Examiner (please print)

SAN PYE

Examiner's no.

18904



## TRAILER &amp; DOLLY SERVICE SHEET




DATE 6-10-24 START TIME \_\_\_\_\_ FINISH TIME \_\_\_\_\_  
FLEET NO 721 KM'S 153,634 HRS \_\_\_\_\_

JOB NO \_\_\_\_\_  
REGO \_\_\_\_\_

Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable		A Service	B Service	C Service
Local Trailers	40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trailers	15000km 10 days 150000km/365days		15000KM	150000KM
1	Check faults noted on daily prestart and repair as necessary	MA		
2	Check fleet numbers are serviceable	MA		
3	Record Hub meter reading	MA		
4	Lubricate Container Pins	NA		
5	Check operation & condition of all lights/reflectors	MA		
6	Apply Air Check for leaks from boosters, valves & air lines	MA		
7	Adjust brakes , visually inspect components	MA		
8	Check air cells for air leaks and deterioration	MA		
9	Drain all air tanks, report if any oil is present in system	MA		
10	Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points	MA		
11	Check hoist mounting bolts, hoses, coupling	MA		
12	Check number plate & rego label security. Check that rego label is current	MA		
13	Check condition of front air connections, light plug base & electrical lead	MA		
14	Check security of spare wheels & spare wheel carrier/gate rack	MA		
15	Check condition & security of all mudflaps, mudguards, brackets & spray suppression	MA		
16	Check landing legs for damage & security	MA		
17	Check sub frame & cross members for cracks, damage & security	MA		
18	Check condition, position & security of all air hoses	MA		

 19	Check brake linings & drums for wear. Check hub seals for leakage
20	Check security of height control valves and links & adjust if required
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye NOTE: If draw bar eye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be checked for tolerances
22	Check wheel nut tensions, check valve stem alignment
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear
24	Check condition & security of rear marker signs
25	Check ring feeder condition, operation & security
26	Lubricate twist locks & check operation & security of pedestals, straighten handles as required
27	Check condition & security of rope rails, gate pockets, winch rails & straps
28	Check condition & security of floor and associated components
29	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear
30	Check security & bolt tension of airbag suspension hangers & radius rod arms
31	Raise wheel assembly & check bearings for free play by "feel" only & adjust as required
32	Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted

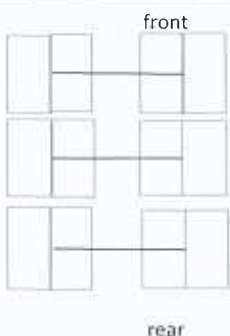33	Check brake linings & drums for wear whilst hubs are removed
34	Check hubs for cracks and tapered shoulders for wear
35	Remove bearings and clean/inspect for reuse
36	Replace mudflaps & decals as required
37	Remove s/cam slack adjuster pins and rotate/lubricate
38	Pack bearings with fresh grease & reassemble


Initial if adjusted - Tick if OK

PLEASE COMPLETE PAGE 2



## TRAILER & DOLLY SERVICE SHEET

### Work/Repairs carried out

\* REPLACE BRAKE PADS ON FRONT AXLE  
RHS.

\* REPLACE TIRE ON FRONT AXLE PAS  
OUTER WITH A RUN-OUT

### List any defect found

Part No/Consumables	Qty	Part No/Consumables	Qty

Tradesperson Name	MATT H	Signature	
		Date	6-10-24



 
WORLD WELDING & TRANSPORT SERVICES

## Maintenance Report

VEHICLE: T2 21 DATE: 2-11-24

HRS \_\_\_\_\_

KLM 171,762

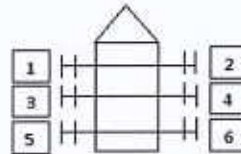

DESCRIPTION OF MAINTENANCE:

\* INSTALL REBUILT HUB WITH  
NEW DISC ROTOR TO REAR AXLE  
RHS

\* INSTALL NEW CALIPER AND  
BRAKE PADS TO REAR AXLE RHS.

NAME: Alan H

SIGNATURE: [Signature]





## TRAILER & DOLLY SERVICE SHEET

DATE 3-12-24

START TIME

FINISH TIME

JOB NO

FLEET NO TZ 21

KM'S

191,418

 
HRS

REGO

Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable		A Service	B Service	C Service
Local Trailers	40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trailers	15000km 10 days 150000km/365days		15000KM	150000KM
1	Check faults noted on daily prestart and repair as necessary		MH	
2	Check fleet numbers are serviceable		MH	
3	Record Hub meter reading		MH	
4	Lubricate Container Pins		N/A	
5	Check operation & condition of all lights/reflectors		MH	
6	Apply Air Check for leaks from boosters, valves & air lines		MH	
7	Adjust brakes , visually inspect components		MH	
8	Check air cells for air leaks and deterioration		MH	
9	Drain all air tanks, report if any oil is present in system		MH	
10	Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points		MH	
11	Check hoist mounting bolts, hoses, coupling		MH	
12	Check number plate & rego label security. Check that rego label is current		MH	
13	Check condition of front air connections, light plug base & electrical lead		MH	
14	Check security of spare wheels & spare wheel carrier/gate rack		MH	
15	Check condition & security of all mudflaps, mudguards, brackets & spray suppression		MH	
16	Check landing legs for damage & security		MH	
17	Check sub frame & cross members for cracks, damage & security		MH	
18	Check condition, position & security of all air hoses		MH	

19	Check brake linings & drums for wear. Check hub seals for leakage	
20	Check security of height control valves and links & adjust if required	
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye eye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be checked for tolerances	NOTE: If draw bar
22	Check wheel nut tensions, check valve stem alignment	
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear	
24	Check condition & security of rear marker signs	
25	Check ring feeder condition, operation & security	
26	Lubricate twist locks & check operation & security of pedestals, straighten handles as required	
27	Check condition & security of rope rails, gate pockets, winch rails & straps	
28	Check condition & security of floor and associated components	
29	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear	
30	Check security & bolt tension of airbag suspension hangers & radius rod arms	
31	Raise wheel assembly & check bearings for free play by "feel" only & adjust as required	
32	Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted	

MH	
MH	
MH	
MH	
MH	
MH	
MH	
N/A	
N/A	
MH	
MH	
MH	
MH	
MH	

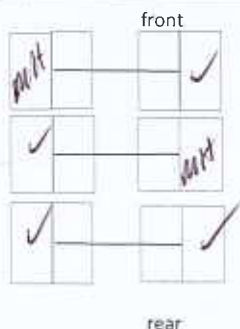

Initial if adjusted - Tick if OK

- 33 Check brake linings & drums for wear whilst hubs are removed
- 34 Check hubs for cracks and tapered shoulders for wear
- 35 Remove bearings and clean/inspect for reuse
- 36 Replace mudflaps & decals as required
- 37 Remove s/cam slack adjuster pins and rotate/lubricate
- 38 Pack bearings with fresh grease & reassemble


PLEASE COMPLETE PAGE 2





\* REPLACE HUB ASSEMBLY ON MIDDLE AXLE RHS WITH REBUILT ONE.

\* INSTALL NEW BRAKE CALIPER ON MIDDLE AXLE R/H AND FIT NEW BRAKE PADS

\* INSTALL REBUILT CALIPER ON FRONT AXLE LHS AND FIT NEW BRAKE PADS

5 Fit New BRAKE PADS TO MIDDLE AXLE  
LHS

\* ADJUST WHEEL BEARINGS ON FRONT AXLE LHS

[illegible]

Tradesperson Name	Matt H	Signature	
		Date	3-12-24