



 
WORLD WELDING & TRANSPORT SERVICES

## Maintenance Report

VEHICLE: 7222

DATE: 1-3-20

HRS/KLMS: N/A

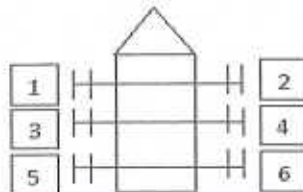

### DESCRIPTION OF MAINTENANCE:

\* REPAIR AIR LEAKS

\* REPLACE DAMAGED BRAKE BOOSTER

ON FRONT AXLE LHS

\* GREASE TURN TABLE

NAME: MATT H

SIGNATURE: [Signature]



Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable		A Service	B Service	C Service
Local Trailers	40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trailers	15000km 10 days 150000km/365days		15000KM	150000KM
1	Check fault repair log and repair as necessary	MH		
2	Check fleet numbers are serviceable	MH		
3	Record Hubmeter reading	N/A		
4	Lubricate Container Pins	M/A		
5	Check operation & condition of all lights/reflectors	MH		
6	Apply Air Check fvor leaks from boosters, valves & air lines	MH		
7	Adjust brakes , visually inspect components	MH		
8	Check air cells for air leaks and deterioration	MH		
9	Drain all air tanks, report if any oil is present in system	MH		
10	Grease trailer incl. brake cams, slack adjusters, landing legs, ringfeeder & other grease points	MH		
11	Check hoist mounting bolts, hoses, coupling	MH		
12	Check number plate & rego label security. Check that rego label is current	MH		
13	Check condition of front air connections, light plug base & electrical lead	MH		
14	Check security of spare wheels & spare wheel carrier/gate rack	N/A		
15	Check condition & security of all mudflaps, mudguards, brackets & spray suppression	MH		
16	Check landing legs for damage & security	MH		
17	Check sub frame & cross members for cracks, damage & security	MH		
18	Check condition, position & security of all air hoses	MH		

19	Check brake linings & drums for wear. Check hub seals for leakage
20	Check security of height control valves and links & adjust if required
21	Check skid plate/king pin security & condition; check draw bar/bushes and towing eye
22	Check wheel nut tensions, check valve stem alignment
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear
24	Check condition & security of rear marker signs
25	Check ringfeeder condition, operation & security
26	Lubricate twistlocks & check operation & security of pedestals, straighten handles as required
27	Check condition & security of rope rails, gate pockets, winch rails & straps
28	Check condition & security of floor and associated components
29	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear
30	Check security & bolt tension of airbag suspension hangers & radius rod arms
31	Raise wheel assembly & check bearings for free play by "feel" only & adjust as required
32	Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted

[illegible]

front

rear

- 33 Check brake linings & drums for wear whilst hubs are removed
- 34 Check hubs for cracks and tapered shoulders for wear
- 35 Remove bearings and clean/inspect for reuse
- 36 Replace mufflaps & decals as required
- 37 Remove s/cam slack adjuster pins and rotate/lubricate
- 38 Pack bearings with fresh grease & reassemble


Initial if adjusted - Tick if C

PLEASE COMPLETE PAGE 2







WORLD WELDING & TRANSPORT SERVICES

 
## Maintenance Report

VEHICLE: TL 22

DATE: 9-4-20

HRS N/A

KLM N/A

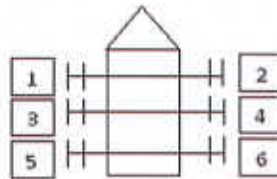

### DESCRIPTION OF MAINTENANCE:

\* REPLACE A-FRAME PIVOT BUSHES  
& PINS.

\* REPLACE WORN TIRES ON  
MIDDLE AXLE LHS AND REAR AXLE  
LHS INNER WITH R/O'S

\* REPAIR HYDRAULIC OIL LEAK  
AT HYDRAULIC FITTING.

\* REPAIR BRAKE CALIPER RETAINER  
TOP THRUST PAD RETAINER ON MIDDLE  
AXLE LHS & REAR AXLE LHS

\* ADJUST AIR BAG HEIGHT

NAME: MAT H

SIGNATURE: [Signature]



WORLD WELDING & TRANSPORT SERVICES

 
## Maintenance Report

VEHICLE: TL 22

DATE: 14-4-20

HRS /

KLM /

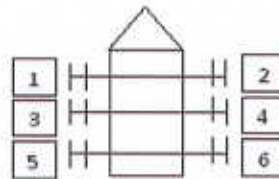

### DESCRIPTION OF MAINTENANCE:

\* REPLACE LEAKING RIDE HEIGHT  
VALVE (REAR)

\* REPLACE LEAKING AIR FITTING  
ON REAR RHS AIR BAG.

\* ADJUST RIDE HEIGHT

\* CHECK OVER FOR AIR LEAKS

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

NAME: MATT H

SIGNATURE: [Signature]

 
**WORLD WELDING & TRANSPORT SERVICES**

## Maintenance Report

VEHICLE: TL22 DATE: 15-4-20

HRS

KLM \_\_\_\_\_

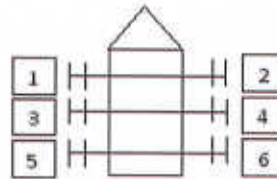

DESCRIPTION OF MAINTENANCE:

\* REPLACE LEAKING AIR BAGS  
ON FRONT AXLE LHS & RHS

NAME: Matt H

SIGNATURE: [Signature]




WORLD WELDING & TRANSPORT SERVICES

## Maintenance Report

VEHICLE: TL 22 DATE: 6-5-20

HRS 5

 KLM 1

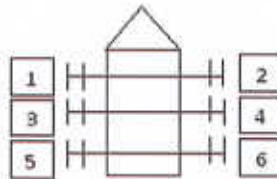

### DESCRIPTION OF MAINTENANCE:

\* FIT 4 NEW TIRES TO  
REAR AXLE (REMINGTON R628)  
\* REPAIR LOOSE TAPPET CLIP  
ON REAR RHS BRAKE CALIPER

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

NAME: MATT H

SIGNATURE: [Signature]






## TRAILER & DOLLY SERVICE SHEET

DATE 6-6-20 START TIME \_\_\_\_\_ FINISH TIME \_\_\_\_\_  
 FLEET NO 72 22 KM'S N/A HRS \_\_\_\_\_

JOB NO \_\_\_\_\_  
 REGO \_\_\_\_\_

Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable		A Service	B Service	C Service
Local Trailers	40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trailers	20000km 10 days 150000km/365days		20000KM	150000KM
1	Check fault repair book and repair as necessary	MH		
2	Check fleet numbers are serviceable	MH		
3	Record Hubmeter reading	—		
4	Lubricate twistlocks & check operation & security of pedestals, straighten handles as required	—		
5	Check operation & condition of all lights/reflectors	MH		
6	Apply Air, Check for leaks from boosters, valves & air lines	MH		
7	Adjust brakes , visually inspect components	—		
8	Check air cells for air leaks and deterioration	MH		
9	Drain all air tanks, report if any oil is present in system	MH		
10	Grease trailer incl. brake cams, slack adjusters, landing legs, ringfeeder & other grease points	MH		
11	Check hoist mounting bolts, hoses, couplings	MH		
12	Check number plate condition and security	MH		
13	Check condition of front air connections, light plug base & electrical lead	MH		
14	Check security of spare wheels & spare wheel carrier/gate rack	—		
15	Check condition & security of all mudflaps, mudguards, brackets & spray suppression	MH		
16	Check landing legs for damage & security	MH		
17	Check sub frame & cross members for cracks, damage & security	MH		
18	Check condition, position & security of all air hoses	MH		

 19	Check brake linings & drums for wear. Check hub seals for leakage
20	Check security of height control valves and links & adjust if required
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye
22	Check wheel nut tensions, check valve stem alignment
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear
24	Check condition & security of rear marker signs
25	Check ringfeeder condition, operation & security
26	Check condition & security of rope rails, gate pockets, winch rails & straps
27	Check condition & security of floor and associated components
28	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear
29	Check security & bolt tension of airbag suspension hangers & radius rod arms
30	Raise wheel assembly & check bearings for free play by "feel" and adjust as required

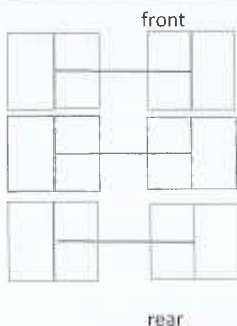33	Check brake linings & drums for wear whilst hubs are removed
34	Check hubs for cracks and tapered shoulders for wear
35	Remove bearings and clean/inspect for reuse
36	Replace mudflaps & decals as required
37	Remove s/cam slack adjuster pins and rotate/lubricate
38	Pack bearings with fresh grease & reassemble


Initial if adjusted - Tick if OK

PLEASE COMPLETE PAGE 2







WORLD WELDING & TRANSPORT SERVICES


## Maintenance Report

 VEHICLE: TZ 22

DATE: 23-6-20

HRS -

KLM -

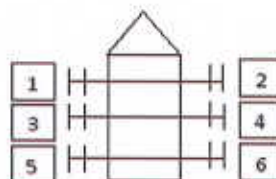

### DESCRIPTION OF MAINTENANCE:

\* FIT NEW SHOCK ABSORBERS TO  
REAR AXLE RHS AND MIDDLE AXLE  
RHS & LHS

\* TIGHTEN LOOSE MOUNTING BOLT  
ON FRONT LHS BRAKE CALIPER

NAME: DAVE H

SIGNATURE: [Signature]



 
WORLD WELDING & TRANSPORT SERVICES

## Maintenance Report

VEHICLE: TZ 22 DATE: 29-6-20

HRS -

KLM -

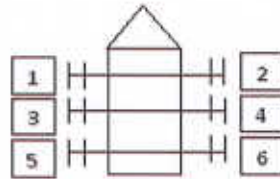

DESCRIPTION OF MAINTENANCE:

\* REPLACED LEAKING AIR BAGS  
ON MIDDLE AXLE LHS & RHS

NAME: MATT H

SIGNATURE: Matt H



WORLD WELDING & TRANSPORT SERVICES


## Maintenance Report

 VEHICLE: TL 22

DATE: 30-6-20

HRS -

KLM -

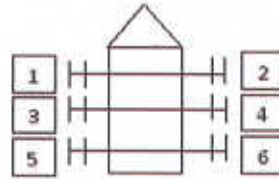

DESCRIPTION OF MAINTENANCE:

\* REPAIR LEAKING AIR HOSE AT  
FRONT AXLE RIDE HEIGHT CONTROL  
VALVE

NAME: MATT H

SIGNATURE: [Signature]






WORLD WELDING & TRANSPORT SERVICES

## Maintenance Report

 VEHICLE: TZ22 DATE: 1-7-20

HRS/KLMS: N/A

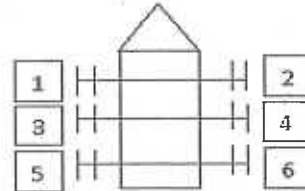

DESCRIPTION OF MAINTENANCE:

\* REPLACE BRAKE RELAY  
VALVE ON FRONT AIR TANK  
\* REPLACE REAR RIDE HEIGHT  
CONTROL VALVE

NAME: MATT H

SIGNATURE: [Signature]




## TRAILER & DOLLY SERVICE SHEET

DATE 25-7-20 START TIME \_\_\_\_\_ FINISH TIME \_\_\_\_\_  
FLEET NO 7200 KM'S — HRS \_\_\_\_\_

JOB NO \_\_\_\_\_  
REGO \_\_\_\_\_

Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable		A Service	B Service	C Service
Local Trailers	80000km/365 days	7 DAYS	90 DAYS	80000KM
Linehaul Trailers	40000km 90 days 150000km/365days		40000KM	150000KM
1	Check fault repair book and repair as necessary	MH		
2	Check fleet numbers are serviceable	MH		
3	Record Hubmeter reading	N/A		
4	Lubricate twistlocks & check operation & security of pedestals, straighten handles as required	N/A		
5	Check operation & condition of all lights/reflectors	MH		
6	Apply Air, Check for leaks from boosters, valves & air lines	MH		
7	Adjust brakes , visually inspect components	MH		
8	Check air cells for air leaks and deterioration	MH		
9	Drain all air tanks, report if any oil is present in system	MH		
10	Grease trailer incl. brake cams, slack adjusters, landing legs, ringfeeder & other grease points	MH		
11	Check hoist mounting bolts, hoses, couplings	MH		
12	Check number plate condition and security	MH		
13	Check condition of front air connections, light plug base & electrical lead	MH		
14	Check security of spare wheels & spare wheel carrier/gate rack	N/A		
15	Check condition & security of all mudflaps, mudguards, brackets & spray suppression	MH		
16	Check landing legs for damage & security	MH		
17	Check sub frame & cross members for cracks, damage & security	MH		
18	Check condition, position & security of all air hoses	MH		

 19	Check brake linings & drums for wear. Check hub seals for leakage
20	Check security of height control valves and links & adjust if required
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye
22	Check wheel nut tensions, check valve stem alignment
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear
24	Check condition & security of rear marker signs
25	Check ringfeeder condition, operation & security
26	Check condition & security of rope rails, gate pockets, winch rails & straps
27	Check condition & security of floor and associated components
28	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear
29	Check security & bolt tension of airbag suspension hangers & radius rod arms
30	Raise wheel assembly & check bearings for free play by "feel" and adjust as required

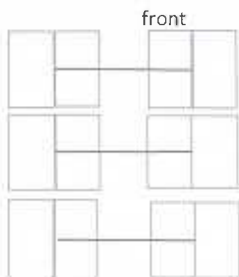front

rear

33	Check brake linings & drums for wear whilst hubs are removed
34	Check hubs for cracks and tapered shoulders for wear
35	Remove bearings and clean/inspect for reuse
36	Replace mudflaps & decals as required
37	Remove s/cam slack adjuster pins and rotate/lubricate
38	Pack bearings with fresh grease & reassemble


Initial if adjusted - Tick if OK

PLEASE COMPLETE PAGE 2

[illegible][illegible][illegible]

Tradesperson Name	MATT H	Signature	ME
		Date	05-7-20




## TRAILER & DOLLY SERVICE SHEET

DATE 29-8-20 START TIME \_\_\_\_\_ FINISH TIME \_\_\_\_\_  
 FLEET NO 7222 KM'S \_\_\_\_\_ HRS \_\_\_\_\_

JOB NO \_\_\_\_\_  
 REGO \_\_\_\_\_

Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable		A Service	B Service	C Service
Local Trailers	80000km/365 days	7 DAYS	90 DAYS	80000KM
Linehaul Trailers	40000km 90 days 150000km/365days		40000KM	150000KM
1	Check fault repair book and repair as necessary	MH		
2	Check fleet numbers are serviceable	MH		
3	Record Hubmeter reading	MH		
4	Lubricate twistlocks & check operation & security of pedestals, straighten handles as required	N/A		
5	Check operation & condition of all lights/reflectors	MH		
6	Apply Air, Check for leaks from boosters, valves & air lines	MH		
7	Adjust brakes, visually inspect components	MH		
8	Check air cells for air leaks and deterioration	MH		
9	Drain all air tanks, report if any oil is present in system	MH		
10	Grease trailer incl. brake cams, slack adjusters, landing legs, ringfeeder & other grease points	MH		
11	Check hoist mounting bolts, hoses, couplings	MH		
12	Check number plate condition and security	MH		
13	Check condition of front air connections, light plug base & electrical lead	MH		
14	Check security of spare wheels & spare wheel carrier/gate rack	N/A		
15	Check condition & security of all mudflaps, mudguards, brackets & spray suppression	MH		
16	Check landing legs for damage & security	MH		
17	Check sub frame & cross members for cracks, damage & security	MH		
18	Check condition, position & security of all air hoses	MH		

 19	Check brake linings & drums for wear. Check hub seals for leakage
20	Check security of height control valves and links & adjust if required
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye
22	Check wheel nut tensions, check valve stem alignment
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear
24	Check condition & security of rear marker signs
25	Check ringfeeder condition, operation & security
26	Check condition & security of rope rails, gate pockets, winch rails & straps
27	Check condition & security of floor and associated components
28	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear
29	Check security & bolt tension of airbag suspension hangers & radius rod arms
30	Raise wheel assembly & check bearings for free play by "feel" and adjust as required

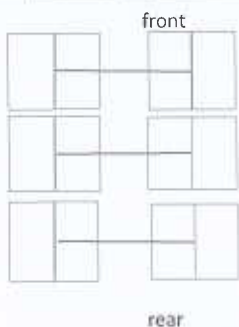
33	Check brake linings & drums for wear whilst hubs are removed
34	Check hubs for cracks and tapered shoulders for wear
35	Remove bearings and clean/inspect for reuse
36	Replace mudflaps & decals as required
37	Remove s/cam slack adjuster pins and rotate/lubricate
38	Pack bearings with fresh grease & reassemble


Initial if adjusted - Tick if OK

PLEASE COMPLETE PAGE 2



[illegible][illegible]

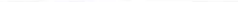Tradesperson Name	MATT H	Signature	
		Date	29-8-20




## TRAILER & DOLLY SERVICE SHEET

DATE 12-9-20 START TIME \_\_\_\_\_ FINISH TIME \_\_\_\_\_ JOB NO \_\_\_\_\_  
 FLEET NO 7200 KM'S - HRS \_\_\_\_\_ REGO \_\_\_\_\_

Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable		A Service	B Service	C Service
Local Trailers	80000km/365 days	7 DAYS	90 DAYS	80000KM
Linehaul Trailers	40000km 90 days 150000km/365days		40000KM	150000KM
1	Check fault repair book and repair as necessary	MH		
2	Check fleet numbers are serviceable	MH		
3	Record Hubmeter reading	N/A		
4	Lubricate twistlocks & check operation & security of pedestals, straighten handles as required	N/A		
5	Check operation & condition of all lights/reflectors	MH		
6	Apply Air, Check for leaks from boosters, valves & air lines	MH		
7	Adjust brakes , visually inspect components	MH		
8	Check air cells for air leaks and deterioration	MH		
9	Drain all air tanks, report if any oil is present in system	MH		
10	Grease trailer incl. brake cams, slack adjusters, landing legs, ringfeeder & other grease points	MH		
11	Check hoist mounting bolts, hoses, couplings	MH		
12	Check number plate condition and security	MH		
13	Check condition of front air connections, light plug base & electrical lead	MH		
14	Check security of spare wheels & spare wheel carrier/gate rack	N/A		
15	Check condition & security of all mudflaps, mudguards, brackets & spray suppression	MH		
16	Check landing legs for damage & security	MH		
17	Check sub frame & cross members for cracks, damage & security	MH		
18	Check condition, position & security of all air hoses	MH		

 19	Check brake linings & drums for wear. Check hub seals for leakage
20	Check security of height control valves and links & adjust if required
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye
22	Check wheel nut tensions, check valve stem alignment
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear
24	Check condition & security of rear marker signs
25	Check ringfeeder condition, operation & security
26	Check condition & security of rope rails, gate pockets, winch rails & straps
27	Check condition & security of floor and associated components
28	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear
29	Check security & bolt tension of airbag suspension hangers & radius rod arms
30	Raise wheel assembly & check bearings for free play by "feel" and adjust as required

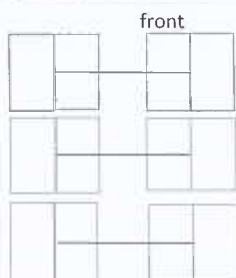rear

33	Check brake linings & drums for wear whilst hubs are removed
34	Check hubs for cracks and tapered shoulders for wear
35	Remove bearings and clean/inspect for reuse
36	Replace mudflaps & decals as required
37	Remove s/cam slack adjuster pins and rotate/lubricate
38	Pack bearings with fresh grease & reassemble


Initial if adjusted - Tick if OK


PLEASE COMPLETE PAGE 2



\* REPLACE FAULTY CLEARANCE LIGHT ON LHS REAR

List any defect found

[illegible]

Tradesperson Name	MRT 4	Signature	
		Date	12-9-20

# Certificate of inspection Trailers & Dollies over 750kg



1066

Ph 0417 600 249  
ABN 97 108 243 714

**SUPERIOR  
MACHINERY  
MAINTENANCE**

## Owner and vehicle details

Vehicle Owner's name and address

LWATS  
10 KOLONGO CRES  
MT ISA QUD Postcode 4825

Plate No.

(if applicable)

State

Unit No.

312 QZH QUD TL22

VIN/Chassis no.

6T9T23NT0D2NUM041

Make

Model

TRI SML TRI

Body Shape

Badge (eg. Cargo)

DOLLY

## Compliance type

Compliance

☒

Import

Plate

☐

Give details

Other

☐

Date on Plate

Vehicle Colour

0513 BLACK

Left or Right hand drive?

Tare  GVM 23500 GCM

## Results of inspection

Please indicate

Pass

☒

Fail

☒

1st

inspection

Final

inspection

Identification	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Modifications	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Lights & Electrical Components	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Body & Chassis	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Suspension	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Wheels & Tyres	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Brakes	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Tow Coupling	<input checked="" type="checkbox"/>	<input type="checkbox"/>
1st Axle	SB <input checked="" type="checkbox"/> HB <input checked="" type="checkbox"/>	SB <input type="checkbox"/> HB <input type="checkbox"/>
2nd Axle	SB <input checked="" type="checkbox"/> HB <input checked="" type="checkbox"/>	SB <input type="checkbox"/> HB <input type="checkbox"/>
3rd Axle	SB <input checked="" type="checkbox"/> HB <input checked="" type="checkbox"/>	SB <input type="checkbox"/> HB <input type="checkbox"/>
4th Axle	SB <input type="checkbox"/> HB <input type="checkbox"/>	SB <input type="checkbox"/> HB <input type="checkbox"/>

Details of other items rejected

LHF GAUDED CRACKED  
SPLIT MUD GAUDED

## 1st Inspection

Result ☒

Inspection date

22/9/20

Inspection time

8:00 am

Odometer reading

-

Signature of Examiner

S-Py

Examiner's no.

18904

Final inspection (must not be more than 14 days from date of 1st inspection)

Result ☒

Inspection date

23/9/20

Inspection time

8:00 am

Odometer reading

-

Signature of Examiner

S-Py

Examiner's no.

18904

## Inspection Station details

Name and location

SUPERIOR MACHINERY MAINTENANCE  
27 COMMERCIAL RD Postcode 4825

Approved Inspection Station Number

10588

## Certification

Approved examiner - I have inspected the vehicle indicated on this form and found it had no defect that would affect its safe use of the road and it meets the requirements of the Transport Operations (Road Use Management) Act 1995.

Inspected by - Signature of Examiner

S-Py

Date

23-9-20

Name of Examiner (please print)

SAM PTE

Examiner's no.

18904

STEEJO PRESS 4749 5407