


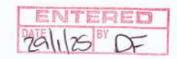

VEHICLE:	7222		D	ATE: 6-/-	- 25
KLM:_	213,29 PEMAINTENANCE:	19		1 H 3 H 5 H	H 2 H 4 H 6
*	INSTALLE	NEW	BRAKE	- PADS 70)
MIDDL	E AXLE	L-45			
K	REPLACE	TIRES	on	MIDDLE	ARCE
LHS	WITH	Pur	ours		
NAME: _	Man	H			
SIGNATURE:	M	7			





VEHICLE: 7272	DATE: 22/1/25
	for the second s
HRS:	\triangle
KLM: 22 3149	1 H 2 3 H 4
DESCRIPTION OF MAINTENANCE:	5 6
Replace Front passinger Tracks po	gets_
§ 	
(
)	
9	
) 	
a i	
. -	
NAME:	
SIGNATURE:	





VEHICLE: 122	DATE: <u>50-7-25</u>
HRS:	1 H 2 3 H 4 5 H 6
* REPLACED WORN TIRES AXLE RHS WITH RU	ON FRONT
AxLE RHS wiTH Ru	N-01173
2	
	
	
NAME: ///	
SIGNATURE.	



-		_	
DATE	24-	3-	25
DATE	VI		-
FLEET	NO	20	11

START TIME		FINISH TIME	
M'S 245	825	HRS	

JOB NO		_	_	
PEGO				

Entered 28/3/25 OF

Service Items - N	Nechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable	A Service	B Service	C Service
Local Trailers	40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trailers	15000km 10 days 150000km/365days	_	15000KM	150000KM
1 Check faults noted on daily pre	estart and repair as necessary	MH		
2 Check fleet numbers are service	eable	MH		
3 Record Hub meter reading		MH		
4 Lubricate Container Pins		NA		
5 Check operation & condition o	f all lights/reflectors	MH		
6 Apply Air Check for leaks from	boosters, valves & air lines	MH		
7 Adjust brakes , visually inspect	components	MH		
8 Check air cells for air leaks and	deterioration	MH		
9 Drain all air tanks, report if any	oil is present in system	MH		
10 Grease trailer incl. brake cams,	, slack adjusters, landing legs, ring feeder & other grease points	MH		
11 Check hoist mounting bolts, ho	oses, coupling	MH		
	pel security. Check that rego label is current	mH		
13 Check condition of front air con	nnections, light plug base & electrical lead	MH		
14 Check security of spare wheels		NIA		
	all mudflaps, mudguards, brackets & spray suppression	MH		
16 Check landing legs for damage		MH		
17 Check sub frame & cross meml		mil		
18 Check condition, position & sec		MH		
19 Check brake linings & drums for	or wear. Check hub seals for leakage]		
	ol valves and links & adjust if required	1		
	rity & condition, check draw bar/bushes and towing eye NOTE: If draw bar			
eye bolt is found loose, it is no	t to be retorqued and must be removed and replaced and draw bar eye boss to be			
21 checked for tolerances		-		
22 Check wheel nut tensions, check	ck valve stem alignment	-		
23 Check all tyre pressures and re	fit valve caps (including spare) report abnormal wear	-		
24 Check condition & security of r	ear marker signs			
25 Check ring feeder condition, or	peration & security			
26 Lubricate twist locks & check o	peration & security of pedestals, straighten handles as required	1		
27 Check condition & security of r	ope rails, gate pockets, winch rails & straps			
28 Check condition & security of f	loor and associated components			
29 Raise trailer by rear frame & in	dividually inspect rocker/radius bushes, wear pads, air cells for wear			
30 Check security & bolt tension of	od airbag suspension hangers & radius rod arms			
31 Raise wheel assembly & check	bearings for free play by "feel" only & adjust as required			
32 Indicate on below drawing who	eel bearings that are replaced, checked and/or adjusted			
front				
	33 Check brake linings & drums for wear whilst hubs are removed			
	34 Check hubs for cracks and tapered shoulders for wear			
	35 Remove bearings and clean/inspect for reuse			

rear

Initial if adjusted - Tick if OK

PLEASE COMPLETE PAGE 2

36 Replace mudflaps & decals as required

37 Remove s/cam slack adjuster pins and rotate/lubricate

38 Pack bearings with fresh grease & reassemble



Work/Repairs carried	out			
* <p1,< td=""><td>T UP</td><td>2010</td><td>(11 -215</td><td>TURN PABLE</td></p1,<>	T UP	2010	(11 -215	TURN PABLE
A SILI	i ou	BNO	UNITA 8	TURNO TITOLE
				II.
List any defect found				
·				
Part No/Consumables	Qty		Dart No/Consumable	
rait No/ consultables	Qty		Part No/Consumable	S Qty
			70-	
Tradesperson Name	MATT	H	Signature	ation
			Date	24-3-25



VEHICLE:	DATE: 12-4-15
HRS: KLM: 255,405 DESCRIPTION OF MAINTENANCE:	1 2 4 4 5 H 6
# NEW TIRES FITTED (TR668)	TO ROAM AXLU RHS
* FIT UP NEW HID	RAULIC HOSE - ROAR RHS
NAME: Man H	
SIGNATURE:	



VEHICLE: _	1622		D	ATE:	4-15
KLM:_	257, 8° DF MAINTENANCE:			1 H 3 H 5	H 2 H 4 H 6
	REPLACE W: TH Pu				AZLE
AXLE	REPLACE	FLAT	TIR. RHS	F ON	MIDDLE Run-ours
C					
NAME:	MAT	H		<u> </u>	
SIGNATURE:	MA				



VEHICLE: TZZZ	DATE: 23/4/25~
	1,"
HRS:	^
11173.	
KLM: 260 340	1 2
	3 1 4
DESCRIPTION OF MAINTENANCE:	5 11 6
Replace pads Back ante posserge	grole
# ***	
\$	
	Ta.
-	
NAME:	
Fran	
SIGNATURE:	



VEHICLE: 72 22	DATE: 16-6-25
HRS:	1 H 2 3 H 4 5 H 6
SCHIF HOW OF WIAHVIEWANCE.	
* REPAIR WIRING +	O FRENT LHS
CLEARANCE LIGHT * REPLACE FRONT ANTI-SAIL BRACKET	RHS MUDFLAF
NAME: MATE /f	
GNATURE:	



DATE 14-7-25	START TIME	FINISH TIME	JOB NO
FLEET NO 72-22	KM'S 280893	HRS	REGO 312 QZH

Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable			B Service	C Service
Local Trailers 40000km/365 days			14 DAYS	40000KM
Linehaul Trailers	15000km 10 days 150000km/365days		15000KM	150000KM
1 Check faults note	ed on daily prestart and repair as necessary		MH	
2 Check fleet numb	pers are serviceable		MH	
3 Record Hub mete	er reading		MH	
4 Lubricate Contain	ner Pins		NA	
5 Check operation	& condition of all lights/reflectors		MH	
6 Apply Air Check f	or leaks from boosters, valves & air lines		mit	
7 Adjust brakes , vi	sually inspect components		MH	
8 Check air cells fo	r air leaks and deterioration		MH	
9 Drain all air tank	s, report if any oil is present in system		MH	
O Grease trailer inc	l. brake cams, slack adjusters, landing legs, ring feeder & other grease points		MH	
L1 Check hoist mou	nting bolts, hoses, coupling		MH	
L2 Check number pl	ate & rego label security. Check that rego label is current		MH	
13 Check condition	of front air connections, light plug base & electrical lead		MH	
L4 Check security of	spare wheels & spare wheel carrier/gate rack		NA	
L5 Check condition	& security of all mudflaps, mudguards, brackets & spray suppression		MH	
L6 Check landing leg	gs for damage & security		MH	
17 Check sub frame	& cross members for cracks, damage & security		MH	
l8 Check condition,	position & security of all air hoses		mH	

19	Check brake linings & drums for wear. Check hub seals for leakage			
20	Check security of height control valves and links & adjust if required			
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye NOTE: If draw bar eye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be checked for tolerances			
22	Check wheel nut tensions, check valve stem alignment			
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear			
24	Check condition & security of rear marker signs			
25	Check ring feeder condition, operation & security			
26	Lubricate twist locks & check operation & security of pedestals, straighten handles as required			
27	Check condition & security of rope rails, gate pockets, winch rails & straps			
28	Check condition & security of floor and associated components			
29	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear			
30	Check security & bolt tension od airbag suspension hangers & radius rod arms			
31	Raise wheel assembly & check bearings for free play by "feel" only & adjust as required			
32	Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted			

4011	
MH	
mit	
MH	
MH	
MH	
MH	
NA	
NA	
NA	
MH	
MH	
Mtt	
MA	
MH	



33	Check brake linings & drums for wear whilst hubs are removed
34	Check hubs for cracks and tapered shoulders for wear
35	Remove bearings and clean/inspect for reuse
36	Replace mudflaps & decals as required
37	Remove s/cam slack adjuster pins and rotate/lubricate
38	Pack bearings with fresh grease & reassemble

rear



Work/Repairs carried out				
*	ADJUSTER	WHEE	BEARINGS AS	MARKED
t an	y defect found			
_				
			30	
		,		
rt No	o/Consumables	Qty	Part No/Consumables	Qty
		-	2K-12	
ades	person Name	MAT H	Signature	mes
			Date	14-7-25

Certificate of inspection Trailers & Dollies over 750kg





	14	5 7 ABN 97 108 243 714	MAINTENANCE
Owner and vehicle details		Details of other items rejected	
Vehicle Owner's name and address		WHEEL NUT IN	DICATORS
WWATS			
10 K010260	CERS		
MT ISA I	QUD Postcode 4825		
Plate No. (if applicable) State	Unit No.		
312 QZH Q4D	1		
VIN/Chassis no.	10 11 11 11 11 12 12 12 12 12 12 12 12 12		
6T9T23NT	0D2NUM041		
Make	Model		
TRISTAL	TRI	Ist Inspection	
Body Shape	Badge (eg. Cargo)	Result X	
Dour	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1.53	
Dout		Inspection date Inspecti	
Compliance type	Give details	25/8/25	8:00 pm
Compliance Import	Other	Odometer reading	
Plate Plate			
Date on Plate Vehicle Colour		Signature of Examiner	Examiner's no.
20113 BLACK		5-12	18904
Left or Right hand drive?		Final inspection (must not be more the	an 14 days from date of 1st inspection)
Tare GVM 28 590	GCM	Result	
		Inspection date Inspecti	on time
Results of inspection Please indicate Pass / Fail		2718 125	8:00 am
Please indicate Pass / Fail	1st Final		8 . 00 pm
	inspection inspection	Odometer reading	
Identification			
Modifications Lights & Electrical Components		Signature of Examiner	Examiner's no.
Body & Chassis		5-3/	18904
Suspension		Inspection Station details	
Wheels & Tyres		Name and location	
Brakes Tow Coupling		SUPFRIOR MACHINI	ED J MONTENING
1st Axle	SB SB	300 FVETOSE JOHN FAIR	00
Totakio	нв нв	27 COMMERCIAL	RD Postcode 4825
2nd Axle	SB SB	Approved Inspection Station Number	1000
Ord Avlo	НВ НВ	10588	
3rd Axle	SB SB HB	Certification	
4th Axle	SB SB	Approved examiner - I have inspected the	
	нв нв	found it had no defect that would affect i	
		requirements of the <i>Transport Operatior</i> Inspected by - Signature of Examiner	ns (Hoad Use Management) Act 1995. Date
		inspected by Folgitatine of Examine	
	5.	D-841	21-8-25
		Name of Examiner (please print)	Examiner's no.

SAU ZYE