


					\wedge	
KLM:	30	2,284	t .		1	H 2
CRIPTION C	F MAINTEN	ANCE:		Ī	5 H	H 6
at.	REPL	4 CE	BRAKE	PADS	01~	LH5
5F	TRAILE	R,	BRAKE	ATLE	MIDDLE	AXLE
REAR	AXL	6				
*	REPL	ALE	TIRES	on	FRONT	AXLE
WIT	H	NEW	ONES (VOLTEX)	LHS	& RHS
(2	NEW	Rims	FITTED	70 ou	TEK POS	1770NS)
					_	
NAMF:	MAT	- h	1			

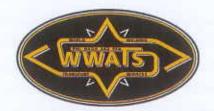

VEHICLE:	7223		DATE: 17-5	-24
HRS:	-		\wedge	
1/1 0 4	35 875		1	1 2
KLIVI:	05 075		3	1 2
ESCRIPTION OF	MAINTENANCE:		5	6
	2			
4	REPLACE 1	EAKING	FRONT	MAIN
Tippee	RAM			
4	WASH DOL	v.v.		
	20 11			
NAME:	Man H			
IGNATURE:	an ga			



DATE 22-5-24
FLEET NO 7223

START TIME	FINISH TIME	
(M'S 39,156	HRS	

JOB NO REGO

Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable	A Service	B Service	C Service
Local Trailers 40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trailers 15000km 10 days 150000km/365days		15000KM	150000KN
1 Check faults noted on daily prestart and repair as necessary	MH		
2 Check fleet numbers are serviceable	MH		
3 Record Hub meter reading	mH		
4 Lubricate Container Pins	NIA		
5 Check operation & condition of all lights/reflectors	MH		
6 Apply Air Check for leaks from boosters, valves & air lines	MH		
7 Adjust brakes , visually inspect components	MH		
8 Check air cells for air leaks and deterioration	MH		
9 Drain all air tanks, report if any oil is present in system	MIH		
10 Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points	MH		
11 Check hoist mounting bolts, hoses, coupling	MH		
12 Check number plate & rego label security. Check that rego label is current	MH		
13 Check condition of front air connections, light plug base & electrical lead	mH		
14 Check security of spare wheels & spare wheel carrier/gate rack	m2-1		
L5 Check condition & security of all mudflaps, mudguards, brackets & spray suppression	MH		
1.6 Check landing legs for damage & security	MH		
17 Check sub frame & cross members for cracks, damage & security	MH		
L8 Check condition, position & security of all air hoses	mit		

19	Check brake linings & drums for wear. Check hub seals for leakage	
20	Check security of height control valves and links & adjust if required	
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye NOTE: If draw bar eye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be checked for tolerances	
22	Check wheel nut tensions, check valve stem alignment	
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear	
24	Check condition & security of rear marker signs	
25	Check ring feeder condition, operation & security	
26	Lubricate twist locks & check operation & security of pedestals, straighten handles as required	
27	Check condition & security of rope rails, gate pockets, winch rails & straps	
28	Check condition & security of floor and associated components	
29	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear	
30	Check security & bolt tension od airbag suspension hangers & radius rod arms	
31	Raise wheel assembly & check bearings for free play by "feel" only & adjust as required	
32	Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted	

-	
	front

33	Check brake linings & drums for wear whilst hubs are removed	
34	Check hubs for cracks and tapered shoulders for wear	
35	Remove bearings and clean/inspect for reuse	
36	Replace mudflaps & decals as required	
37	Remove s/cam slack adjuster pins and rotate/lubricate	
38	Pack bearings with fresh grease & reassemble	

rear



sia C	EPLACE	FRO	ST R	4 1	240 E/AC
7 ^	Eruffee		7-7	1	10.2141
st any defect found					
st any defect found					
			Doub No /Conn	www.alslag	la
ırt No/Consumables	Qty		Part No/Cons	umables	Qty
art No/Consumables	Qty		Part No/Cons	umables	Qty
art No/Consumables	Qty		Part No/Cons	umables	Qty
art No/Consumables	Qty		Part No/Cons	umables	Qty
rt No/Consumables	Qty		Part No/Cons	umables	Qty
art No/Consumables	Qty		Part No/Cons	umables	Qty
art No/Consumables	Qty		Part No/Cons	umables	Qty
art No/Consumables	Qty		Part No/Cons	umables	Qty
rt No/Consumables	Qty		Part No/Cons	umables	Qty
irt No/Consumables	Qty		Part No/Cons	umables	Qty
art No/Consumables	Qty		Part No/Cons	umables	Qty
art No/Consumables	Qty		Part No/Cons	umables	Qty
art No/Consumables	Qty		Part No/Cons	umables	Qty
art No/Consumables	Qty		Part No/Cons	umables	Qty
art No/Consumables	Qty		Part No/Cons	umables	Qty
ırt No/Consumables	Qty		Part No/Cons	umables	Qty
rt No/Consumables	Qty		Part No/Cons	umables	Qty
rt No/Consumables	Qty MoATT	- <i>I-I</i>	Part No/Cons	umables	Qty




DATE 2-6-24
FLEET NO 72-23

START TIME	FINISH TIME	JOB NO
KM'S 466 14	HRS	REGO

Service Items -	Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable	A Service	B Service	C Service
Local Trailers	40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trailers	15000km 10 days 150000km/365days		15000KM	150000KM
1 Check faults noted on daily pre	estart and repair as necessary	mH		
2 Check fleet numbers are service	ceable	MH		
3 Record Hub meter reading		MH		
4 Lubricate Container Pins		NIA		
5 Check operation & condition o	f all lights/reflectors	MH		
6 Apply Air Check for leaks from	boosters, valves & air lines	MH		
7 Adjust brakes , visually inspect	components	MH		
8 Check air cells for air leaks and	deterioration	mH		
9 Drain all air tanks, report if any	y oil is present in system	m1-1		
O Grease trailer incl. brake cams	, slack adjusters, landing legs, ring feeder & other grease points	MH		
1 Check hoist mounting bolts, h	oses, coupling	MH		
2 Check number plate & rego la	pel security. Check that rego label is current	mit		
3 Check condition of front air co	nnections, light plug base & electrical lead	MH		
4 Check security of spare wheels	& spare wheel carrier/gate rack	MH		
5 Check condition & security of	all mudflaps, mudguards, brackets & spray suppression	1014		
6 Check landing legs for damage	& security	with		
7 Check sub frame & cross mem	bers for cracks, damage & security	M1-1		
8 Check condition, position & se	curity of all air hoses	mH		

19	Check brake linings & drums for wear. Check hub seals for leakage
20	Check security of height control valves and links & adjust if required
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye NOTE: If draw bar eye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be checked for tolerances
22	Check wheel nut tensions, check valve stem alignment
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear
24	Check condition & security of rear marker signs
25	Check ring feeder condition, operation & security
26	Lubricate twist locks & check operation & security of pedestals, straighten handles as required
27	Check condition & security of rope rails, gate pockets, winch rails & straps
28	Check condition & security of floor and associated components
29	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear
30	Check security & bolt tension od airbag suspension hangers & radius rod arms
31	Raise wheel assembly & check bearings for free play by "feel" only & adjust as required
32	Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted

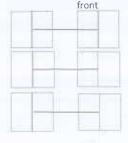

33	Check brake linings & drums for wear whilst hubs are removed	
34	Check hubs for cracks and tapered shoulders for wear	
35	Remove bearings and clean/inspect for reuse	
36	Replace mudflaps & decals as required	
37	Remove s/cam slack adjuster pins and rotate/lubricate	
38	Pack bearings with fresh grease & reassemble	

	_	_	_
Г		_	
			ij
-			_



Vork/Repairs carried o	ut		
st any defect found			
rt No/Consumables	Qty	Part No/Consumables	Qty
radesperson Name	M1977 14	Signature	20-6-24
		2 .	01.00



VEHICLE:	1645	DATE: 2	-7-24
HRS			
KLM	66 401 MAINTENANCE:	3	4 6
#	FIT NEW	TIRES 70	REAR
Fit	REPAIR OIL	LEAK AT	- (FRONT)
	.1		
NAME:	MAT H		
SIGNIATURE	221 2		



VEHICLE:	1625	DAT	E: 4-7-	24
HRS	NA			
KLM			3	<u> </u>
*	REPLACED ASSEMBLY	BRAKE	CALIPER	+
Huss.		ONB	MIUDLE	AXL
	NEN BR	AILS PAUS	FITTE	
	Man H			



VEHICLE:	1245	DATE:	10-1-27
HRS			\triangle
KLM	73,585	3	2
DESCRIPTION OF N	MAINTENANCE:	5	6
No.	F. T. A.F.	TOES	The Rest R
AXLE	RHS C	VORTEX)	70 ROAR
NAME:	Mar 1	4	
SIGNATURE:	121.0		



VEHICLE:	7275		DATE:/	7-7-24	_
KLM	79,001 FMAINTENANCE:		1 H	4 6	
MIDD	REPLACE LE AXIE	WORN RHS	TIRES	on Run-ou	<u>-</u>
NAME:	MAT 1	H			



DATE 2-8-24	START TIME	FINISH TIME	JOB NO	
FLEET NO 7223	KM'S 94, 311	HRS	REGO	

Service Items	- Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable	A Service	B Service	C Service
Local Trailers	40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trailers	15000km 10 days 150000km/365days		15000KM	150000KM
1 Check faults noted on daily	prestart and repair as necessary	MH		
2 Check fleet numbers are ser	viceable	MU		
3 Record Hub meter reading		MH		
4 Lubricate Container Pins		NA		
5 Check operation & condition	n of all lights/reflectors	MH		
6 Apply Air Check for leaks fro	om boosters, valves & air lines	MH		
7 Adjust brakes , visually inspe	ect components	MH		
8 Check air cells for air leaks a	nd deterioration	MH		
9 Drain all air tanks, report if a	any oil is present in system	mH		
10 Grease trailer incl. brake car	ms, slack adjusters, landing legs, ring feeder & other grease points	MH		
11 Check hoist mounting bolts,	hoses, coupling	MH		
12 Check number plate & rego	label security. Check that rego label is current	1271		
13 Check condition of front air	connections, light plug base & electrical lead	MH		
14 Check security of spare whe	els & spare wheel carrier/gate rack	MH		
15 Check condition & security of	of all mudflaps, mudguards, brackets & spray suppression	mit		
16 Check landing legs for dama	ge & security	MH		
17 Check sub frame & cross me	embers for cracks, damage & security	MH		
18 Check condition, position &	security of all air hoses	MH		
		_		
19 Check brake linings & drums	s for wear. Check hub seals for leakage			
20 Check security of height con	atrol valves and links & adjust if required			
	curity & condition, check draw bar/bushes and towing eye NOTE: If draw bar not to be retorqued and must be removed and replaced and draw bar eye boss to be			
22 Check wheel nut tensions, c	heck valve stem alignment			
100 1/2 1/2	refit valve caps (including spare) report abnormal wear	1		
24 Check condition & security of				
25 Check ring feeder condition,				
	k operation & security of pedestals, straighten handles as required			
	of rope rails, gate pockets, winch rails & straps			
Co. 20 100 AV	of floor and associated components			
1 12 72	k individually inspect rocker/radius bushes, wear pads, air cells for wear	1		
30 Check security & bolt tensio	on od airbag suspension hangers & radius rod arms			
	eck bearings for free play by "feel" only & adjust as required			
	wheel bearings that are replaced, checked and/or adjusted			
front				
	33 Check brake linings & drums for wear whilst hubs are removed]		
	34 Check hubs for cracks and tapered shoulders for wear]		
	35 Remove bearings and clean/inspect for reuse			
	36 Replace mudflaps & decals as required			
	37 Remove s/cam slack adjuster pins and rotate/lubricate			

rear

38 Pack bearings with fresh grease & reassemble



Vork/Repairs carried	out		
st any defect found			
t No/Consumables	Qty	Part No/Consumables	Qty
	-	ii -	
			-
	V		
desperson Name	mon H	Signature	m
	1	Date	2-8-24
		IDALE	and a fine



VEHICLE:	7223		DATE:	30 - 8	3 - 24
HRS KLM DESCRIPTION OF	119674		1 3 5		4 6
- *	REPLACE	BRAKE	CAL	WER	and
PADS	REPLACE	WOAN	AXLE	REJ	0~
FROI	VT AZI	E RH	5	WITH	Rund -
OUTS					
NAME:	MATT Ma 1	H			



VEHICLE: 72 23	DATE: 2-9-24
HRSKLM	
* REPLACE WHEEL ANLE LHS WITH	HUB ON REAR
* REPLACE WHERE AXLE LHS WITH I NEW DISC POTOR. BRAKE CALIPON (NOW) +	ALSO REPLACE BRAILE PADS.
NAME: MAY H	



DATE 7-9-24
FLEET NO 72-23


START TIMI	<u> </u>		FINISH TIME	
KM'S	126	795	HRS	

JOB NO _____

Service Item	ns - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable	A Service	B Service	C Service
Local Trailers	40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trailers	15000km 10 days 150000km/365days		15000KM	150000KM
1 Check faults noted on dai	ly prestart and repair as necessary		MH	
2 Check fleet numbers are	serviceable		MH	
3 Record Hub meter readin	g		MH	
4 Lubricate Container Pins			NA	
5 Check operation & condit	cion of all lights/reflectors		MH	
6 Apply Air Check for leaks	from boosters, valves & air lines		mH	
7 Adjust brakes , visually in	spect components		MH	
8 Check air cells for air leak	s and deterioration		MH	
9 Drain all air tanks, report	if any oil is present in system		MH	
10 Grease trailer incl. brake	cams, slack adjusters, landing legs, ring feeder & other grease points		MH	
11 Check hoist mounting bo	ts, hoses, coupling		MH	
12 Check number plate & rego label security. Check that rego label is current			MH	
13 Check condition of front	air connections, light plug base & electrical lead		MH	
14 Check security of spare w	heels & spare wheel carrier/gate rack		mH	
15 Check condition & securit	ty of all mudflaps, mudguards, brackets & spray suppression		mH	
16 Check landing legs for da	mage & security	0	mH	
17 Check sub frame & cross	members for cracks, damage & security		MH	
18 Check condition, position	& security of all air hoses		MH	

19	Check brake linings & drums for wear. Check hub seals for leakage
20	Check security of height control valves and links & adjust if required
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye NOTE: If draw bar eye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be checked for tolerances
22	Check wheel nut tensions, check valve stem alignment
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear
24	Check condition & security of rear marker signs
25	Check ring feeder condition, operation & security
26	Lubricate twist locks & check operation & security of pedestals, straighten handles as required
27	Check condition & security of rope rails, gate pockets, winch rails & straps
28	Check condition & security of floor and associated components
29	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear
30	Check security & bolt tension od airbag suspension hangers & radius rod arms
31	Raise wheel assembly & check bearings for free play by "feel" only & adjust as required
32	Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted

MH	
MH	

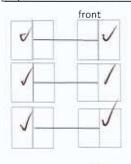

_	
33	Check brake linings & drums for wear whilst hubs are removed
34	Check hubs for cracks and tapered shoulders for wear
35	Remove bearings and clean/inspect for reuse
36	Replace mudflaps & decals as required
37	Remove s/cam slack adjuster pins and rotate/lubricate
38	Pack bearings with fresh grease & reassemble

rear



Work/Repairs carried o	out		
₹ NE	W TIRES	FITTEN TO	READ PAULE
RHS	CARGO POWER)	77.72
		<u> </u>	
X FE	PLACED FAI	ALTY INDIE	ATOR OIL
6HS			
List any defect found			
nor any acree round			
Part No/Consumables	Qty	Part No/Consumables	Qty
	7. —		
Tradesperson Name	Marin 11	Signature	men
rradesperson Name	MATT H	Signature	7-9-74

Certificate of inspection Trailers & Dollies over 750kg






18904

STEEJO PRESS 4743 5607

Owner and vehicle details Vehicle Owner's name and address	Details of other items rejected
WWATS	
10 KOLONGO CRES	
MT IM QUD Postcode 4825	
Plate No.	
if applicable) State Unit No.	
313 QZH QUD TL23	
/IN/Chassis no.	
6T9T25NT0D2NUM092	
Make Model	
TRISTAR TRI	Ist Inspection
Body Shape Badge (eg. Cargo)	Result
SEMI TRAILER	Inspection date Inspection time
Compliance type Give details	12/9/24 1:00 6
Compliance Import Other	Odometer reading
Plate Plate	
Date on Plate Vehicle Colour	Signature of Examiner Examiner's no.
20113 YELLOW	5-12 18904
eft or Right hand drive?	Final inspection (must not be more than 14 days from date of 1st inspection)
Tare GVM 47000 GCM	Result
	Inspection date Inspection time
Results of inspection Please indicate Pass 🗸 Fail 💢	/ / am
Please indicate Pass / Fail / 1st Final	, pm
inspection	Odometer reading
Identification	
Modifications	Signature of Examiner Examiner's no.
Body & Chassis	
Suspension	
Wheels & Tyres	Inspection Station details
Brakes	Name and location
Tow Coupling	Suprior MACHWARY MANTENANCE
1st Axle SB SB HB	SUPPRIOR MACHINALY MANTENANCE 27 COMMERCIAL RD POSTCODE 4825
2nd Axle SB / SB	Approved Inspection Station Number
HB / HB	10588
3rd Axle SB SB	Certification
HB HB HB SB SB	Approved examiner - I have inspected the vehicle indicated on this form and
HB HB	found it had no defect that would affect its safe use of the road and it meets the requirements of the <i>Transport Operations (Road Use Management) Act 1995.</i>
	Inspected by - Signature of Examiner Date
	5-14/ 12-9-24
	Name of Examiner (please print) Examiner's no.

SAM PYE



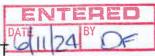

DATE 2	5-9-24
FLEET NO	1223

TART TIME FINISH TIME ______

JOB NO _____

Linehaul Trailers 15000km/365 days Linehaul Trailers 15000km 10 days 150000km/365days 1 Check faults noted on daily prestart and repair as necessary 2 Check fleet numbers are serviceable 3 Record Hub meter reading 4 Lubricate Container Pins 5 Check operation & condition of all lights/reflectors 6 Apply Air Check for leaks from boosters, valves & air lines 7 Adjust brakes , visually inspect components 8 Check air cells for air leaks and deterioration 9 Drain all air tanks, report if any oil is present in system 10 Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points 11 Check hoist mounting bolts, hoses, coupling 12 Check number plate & rego label security. Check that rego label is current 13 Check condition of front air connections, light plug base & electrical lead 14 Check security of spare wheels & spare wheel carrier/gate rack 15 Check landing legs for damage & security 16 Check landing legs for damage & security 17 Check sub frame & cross members for cracks, damage & security 18 Check condition, position & security of all air hoses 19 Check brake linings & drums for wear. Check hub seals for leakage 20 Check security of height control valves and links & adjust if required Check skid plate/king pin security & condition, check draw bar/bushes and towing eye NOTE: If draw bar	MH M	14 DAYS 15000KM	40000KM
1 Check faults noted on daily prestart and repair as necessary 2 Check fleet numbers are serviceable 3 Record Hub meter reading 4 Lubricate Container Pins 5 Check operation & condition of all lights/reflectors 6 Apply Air Check for leaks from boosters, valves & air lines 7 Adjust brakes , visually inspect components 8 Check air cells for air leaks and deterioration 9 Drain all air tanks, report if any oil is present in system 10 Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points 11 Check hoist mounting bolts, hoses, coupling 12 Check number plate & rego label security. Check that rego label is current 13 Check condition of front air connections, light plug base & electrical lead 14 Check security of spare wheels & spare wheel carrier/gate rack 15 Check condition & security of all mudflaps, mudguards, brackets & spray suppression 16 Check landing legs for damage & security 17 Check sub frame & cross members for cracks, damage & security 18 Check condition, position & security of all air hoses 19 Check brake linings & drums for wear. Check hub seals for leakage 20 Check security of height control valves and links & adjust if required	mit mit mit mit mit mit mit mit	15000KM	150000KN
2 Check fleet numbers are serviceable 3 Record Hub meter reading 4 Lubricate Container Pins 5 Check operation & condition of all lights/reflectors 6 Apply Air Check for leaks from boosters, valves & air lines 7 Adjust brakes , visually inspect components 8 Check air cells for air leaks and deterioration 9 Drain all air tanks, report if any oil is present in system 10 Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points 11 Check hoist mounting bolts, hoses, coupling 12 Check number plate & rego label security. Check that rego label is current 13 Check condition of front air connections, light plug base & electrical lead 14 Check security of spare wheels & spare wheel carrier/gate rack 15 Check condition & security of all mudflaps, mudguards, brackets & spray suppression 16 Check landing legs for damage & security 17 Check sub frame & cross members for cracks, damage & security 18 Check condition, position & security of all air hoses 19 Check brake linings & drums for wear. Check hub seals for leakage 20 Check security of height control valves and links & adjust if required	mit mit mit mit mit mit mit mit		
Record Hub meter reading Lubricate Container Pins Check operation & condition of all lights/reflectors Apply Air Check for leaks from boosters, valves & air lines Adjust brakes, visually inspect components Check air cells for air leaks and deterioration Drain all air tanks, report if any oil is present in system Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points Check hoist mounting bolts, hoses, coupling Check number plate & rego label security. Check that rego label is current Check condition of front air connections, light plug base & electrical lead Check security of spare wheels & spare wheel carrier/gate rack Check condition & security of all mudflaps, mudguards, brackets & spray suppression Check landing legs for damage & security Check sub frame & cross members for cracks, damage & security Check condition, position & security of all air hoses Defect the security of height control valves and links & adjust if required	MH MH MH MH MH MH MH MH MH MH MH		
Lubricate Container Pins Check operation & condition of all lights/reflectors Apply Air Check for leaks from boosters, valves & air lines Adjust brakes , visually inspect components Check air cells for air leaks and deterioration Drain all air tanks, report if any oil is present in system Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points Check hoist mounting bolts, hoses, coupling Check number plate & rego label security. Check that rego label is current Check condition of front air connections, light plug base & electrical lead Check security of spare wheels & spare wheel carrier/gate rack Check condition & security of all mudflaps, mudguards, brackets & spray suppression Check landing legs for damage & security Check sub frame & cross members for cracks, damage & security Check sub frame & cross members for cracks, damage & security Check brake linings & drums for wear. Check hub seals for leakage Check brake linings & drums for wear. Check hub seals for leakage Check security of height control valves and links & adjust if required	MH MH MH MH MH MH MH MH MH MH MH		
Check operation & condition of all lights/reflectors Apply Air Check for leaks from boosters, valves & air lines Adjust brakes , visually inspect components Check air cells for air leaks and deterioration Drain all air tanks, report if any oil is present in system Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points Check hoist mounting bolts, hoses, coupling Check number plate & rego label security. Check that rego label is current Check condition of front air connections, light plug base & electrical lead Check security of spare wheels & spare wheel carrier/gate rack Check condition & security of all mudflaps, mudguards, brackets & spray suppression Check landing legs for damage & security Check sub frame & cross members for cracks, damage & security Check condition, position & security of all air hoses Check brake linings & drums for wear. Check hub seals for leakage Check security of height control valves and links & adjust if required	MH MH MH MH MH MH MH MH MH MH MH		
Apply Air Check for leaks from boosters, valves & air lines Adjust brakes , visually inspect components Check air cells for air leaks and deterioration Drain all air tanks, report if any oil is present in system Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points Check hoist mounting bolts, hoses, coupling Check number plate & rego label security. Check that rego label is current Check condition of front air connections, light plug base & electrical lead Check security of spare wheels & spare wheel carrier/gate rack Check condition & security of all mudflaps, mudguards, brackets & spray suppression Check landing legs for damage & security Check sub frame & cross members for cracks, damage & security Check condition, position & security of all air hoses Check brake linings & drums for wear. Check hub seals for leakage Check security of height control valves and links & adjust if required	MH MH MH MH MH MH MH MH MH		
7 Adjust brakes , visually inspect components 8 Check air cells for air leaks and deterioration 9 Drain all air tanks, report if any oil is present in system 10 Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points 11 Check hoist mounting bolts, hoses, coupling 12 Check number plate & rego label security. Check that rego label is current 13 Check condition of front air connections, light plug base & electrical lead 14 Check security of spare wheels & spare wheel carrier/gate rack 15 Check condition & security of all mudflaps, mudguards, brackets & spray suppression 16 Check landing legs for damage & security 17 Check sub frame & cross members for cracks, damage & security 18 Check condition, position & security of all air hoses 19 Check brake linings & drums for wear. Check hub seals for leakage 20 Check security of height control valves and links & adjust if required	MH MH MH MH MH MH MH MH MH		
8 Check air cells for air leaks and deterioration 9 Drain all air tanks, report if any oil is present in system 10 Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points 11 Check hoist mounting bolts, hoses, coupling 12 Check number plate & rego label security. Check that rego label is current 13 Check condition of front air connections, light plug base & electrical lead 14 Check security of spare wheels & spare wheel carrier/gate rack 15 Check condition & security of all mudflaps, mudguards, brackets & spray suppression 16 Check landing legs for damage & security 17 Check sub frame & cross members for cracks, damage & security 18 Check condition, position & security of all air hoses 19 Check brake linings & drums for wear. Check hub seals for leakage 20 Check security of height control valves and links & adjust if required	MH MH MH MH MH MH MH MH		
Drain all air tanks, report if any oil is present in system Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points Check hoist mounting bolts, hoses, coupling Check number plate & rego label security. Check that rego label is current Check condition of front air connections, light plug base & electrical lead Check security of spare wheels & spare wheel carrier/gate rack Check condition & security of all mudflaps, mudguards, brackets & spray suppression Check landing legs for damage & security Check sub frame & cross members for cracks, damage & security Check condition, position & security of all air hoses Check brake linings & drums for wear. Check hub seals for leakage Check security of height control valves and links & adjust if required	MH MH MH MH MH MH MH		
Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points Check hoist mounting bolts, hoses, coupling Check number plate & rego label security. Check that rego label is current Check condition of front air connections, light plug base & electrical lead Check security of spare wheels & spare wheel carrier/gate rack Check condition & security of all mudflaps, mudguards, brackets & spray suppression Check landing legs for damage & security Check sub frame & cross members for cracks, damage & security Check condition, position & security of all air hoses Check brake linings & drums for wear. Check hub seals for leakage Check security of height control valves and links & adjust if required	MH MH MH MH MH MH		
Check hoist mounting bolts, hoses, coupling Check number plate & rego label security. Check that rego label is current Check condition of front air connections, light plug base & electrical lead Check security of spare wheels & spare wheel carrier/gate rack Check condition & security of all mudflaps, mudguards, brackets & spray suppression Check landing legs for damage & security Check sub frame & cross members for cracks, damage & security Check condition, position & security of all air hoses Check brake linings & drums for wear. Check hub seals for leakage Check security of height control valves and links & adjust if required	MIH MIH MIH MIH MIH		
Check number plate & rego label security. Check that rego label is current Check condition of front air connections, light plug base & electrical lead Check security of spare wheels & spare wheel carrier/gate rack Check condition & security of all mudflaps, mudguards, brackets & spray suppression Check landing legs for damage & security Check sub frame & cross members for cracks, damage & security Check condition, position & security of all air hoses Check brake linings & drums for wear. Check hub seals for leakage Check security of height control valves and links & adjust if required	MH MH MH MH		
Check condition of front air connections, light plug base & electrical lead Check security of spare wheels & spare wheel carrier/gate rack Check condition & security of all mudflaps, mudguards, brackets & spray suppression Check landing legs for damage & security Check sub frame & cross members for cracks, damage & security Check condition, position & security of all air hoses Check brake linings & drums for wear. Check hub seals for leakage Check security of height control valves and links & adjust if required	MH MH MH MH		
Check security of spare wheels & spare wheel carrier/gate rack Check condition & security of all mudflaps, mudguards, brackets & spray suppression Check landing legs for damage & security Check sub frame & cross members for cracks, damage & security Check condition, position & security of all air hoses Check brake linings & drums for wear. Check hub seals for leakage Check security of height control valves and links & adjust if required	MH MH MH		
Check condition & security of all mudflaps, mudguards, brackets & spray suppression Check landing legs for damage & security Check sub frame & cross members for cracks, damage & security Check condition, position & security of all air hoses Check brake linings & drums for wear. Check hub seals for leakage Check security of height control valves and links & adjust if required	mit		
Check landing legs for damage & security Check sub frame & cross members for cracks, damage & security Check condition, position & security of all air hoses Check brake linings & drums for wear. Check hub seals for leakage Check security of height control valves and links & adjust if required	mit		
Check sub frame & cross members for cracks, damage & security 18 Check condition, position & security of all air hoses 19 Check brake linings & drums for wear. Check hub seals for leakage 20 Check security of height control valves and links & adjust if required	MH		
Check condition, position & security of all air hoses 19 Check brake linings & drums for wear. Check hub seals for leakage 20 Check security of height control valves and links & adjust if required	MH		
19 Check brake linings & drums for wear. Check hub seals for leakage 20 Check security of height control valves and links & adjust if required	anH		1.
19 Check brake linings & drums for wear. Check hub seals for leakage 20 Check security of height control valves and links & adjust if required	100 10 1		
eye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be			
21 checked for tolerances	1		
22 Check wheel nut tensions, check valve stem alignment	-		-
23 Check all tyre pressures and refit valve caps (including spare) report abnormal wear	-		
24 Check condition & security of rear marker signs	-	-	-
25 Check ring feeder condition, operation & security	-	_	-
26 Lubricate twist locks & check operation & security of pedestals, straighten handles as required	-	-	-
27 Check condition & security of rope rails, gate pockets, winch rails & straps	-		
28 Check condition & security of floor and associated components	-	1	
29 Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear	-		
30 Check security & bolt tension od airbag suspension hangers & radius rod arms	-	-	_
31 Raise wheel assembly & check bearings for free play by "feel" only & adjust as required	-	-	-
32 Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted	1		-

rear

36 Replace mudflaps & decals as required

38 Pack bearings with fresh grease & reassemble

37 Remove s/cam slack adjuster pins and rotate/lubricate



Work/Repairs carried o	out		
LHS (C	ARGO POWER	FITTED TO	ROME ARKE
+ F	FIT NEW	SKID PLATE	PAD
List any defect found			
List any defect found			
Part No/Consumables	Qty	Part No/Consumables	Qty
Tradesperson Name	MANT H	Signature	200






VEHICLE:	1223		DATE: 27-10	5-24
HRS KLM DESCRIPTION OF M	169,862 MAINTENANCE:		1 3 5	2
**	INSTALL	REBULT	WHEEL	HyB
_ 76	MIDDLE	AXLE	LHS.	-
*	IN STALL	New	BRAVE	PADS
	MIDOLE			
<u> </u>				
	MAT /T	2		
SIGNATURE:	ma	among part of		





VEHICLE:	72 23		DATE:3/	-10-24
KLM	OF MAINTENANCE:		1 H 3 H 5 H	2 4 4 6
			thes wi	
			CHS.	
<u> </u>	INSTALLE ARLE	ReBuil	MIDDLU	1 70
REAM		Rofs &	BRAKE P.	
NAME:	MATO			

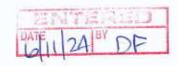



VEHICLE: 723	DATE: 5-11-24
HRS	1
A REBUILT ONE.	EDER WITH
NAME: MAT H	
SIGNATURE:	