



VEHICLE:	TL 24	DATE: 3-1-25	
	Q1(003 DF MAINTENANCE:	1 H 2 3 H 4 5 H 6	
WITH	REPLACE HUB ON	NAIDDLE AXLE LI WITH NON DISC ROY	is ac.
			_
NAME:	Mar II		





VEHICLE: 72 24	DATE: 30- 1-25
HRS:	1   2   4   4   5   6
*NEW TIRES FITTED TO	RUAN AXLE LHS
* NEW BRAKE PAOS FIT	TED TO ROMP AXLE
NAME: MAM H	



DATE 5-2-24
FLEET NO 72-24

START TIME	FINISH TIME
KM'S 237,785	HRS


JOB NO \_\_\_\_\_

Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable	A Service	B Service	C Service
Local Trailers 40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trailers 15000km 10 days 150000km/365days		15000KM	150000KM
1 Check faults noted on daily prestart and repair as necessary		MH	
2 Check fleet numbers are serviceable		MA	
3 Record Hub meter reading		MA	
4 Lubricate Container Pins		NA	
5 Check operation & condition of all lights/reflectors		mH	
6 Apply Air Check for leaks from boosters, valves & air lines		MH	
7 Adjust brakes , visually inspect components		MA	
8 Check air cells for air leaks and deterioration		MH	
9 Drain all air tanks, report if any oil is present in system		MH	
Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points		MA	
Check hoist mounting bolts, hoses, coupling		MH	
Check number plate & rego label security. Check that rego label is current		MH	
Check condition of front air connections, light plug base & electrical lead		MH	
14 Check security of spare wheels & spare wheel carrier/gate rack		NA	
Check condition & security of all mudflaps, mudguards, brackets & spray suppression		mH	
L6 Check landing legs for damage & security		MH	
Check sub frame & cross members for cracks, damage & security		MH	
L8 Check condition, position & security of all air hoses		MH	

19	Check brake linings & drums for wear. Check hub seals for leakage
20	Check security of height control valves and links & adjust if required
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye  NOTE: If draw bar eye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be checked for tolerances
22	Check wheel nut tensions, check valve stem alignment
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear
24	Check condition & security of rear marker signs
25	Check ring feeder condition, operation & security
26	Lubricate twist locks & check operation & security of pedestals, straighten handles as required
27	Check condition & security of rope rails, gate pockets, winch rails & straps
28	Check condition & security of floor and associated components
29	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear
30	Check security & bolt tension od airbag suspension hangers & radius rod arms
31	Raise wheel assembly & check bearings for free play by "feel" only & adjust as required
32	Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted

38 Pack bearings with fresh grease & reassemble

MH		
mH		
MA		_
NA		_
NA		-
MH		
MH	P	
MH		
MH		

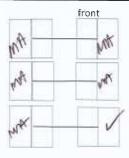

33	Check brake linings & drums for wear whilst hubs are removed	
34	Check hubs for cracks and tapered shoulders for wear	
35	Remove bearings and clean/inspect for reuse	
36	Replace mudflaps & decals as required	
37	Remove s/cam slack adjuster pins and rotate/lubricate	

rea

Initial if adjusted - Tick if OK

PLEASE COMPLETE PAGE 2

ĺ			
Ì			
	ī		



Work/Repairs carried out						
RHS SIR	CLACE W	ORN	2055ES	on	MODU	s Axle
KHS SPR	ine Itya	MER				
& REP	ACE S	PRING	EYE	Bus Hes	8	WEAR PLATES
on MID	DLG AXL	હ				
List may defeat found						
List any defect found						
Part No/Consumables	Qty		Part No/C	onsumables	Qty	
	**					
Tradesperson Name	MATI	4	Signature		1	17-
	25 40 55	W.	Date		5.	2-25

Entered 21/3/25 OF.



**WORLD WELDING & TRANSPORT SERVICES** 

VEHICLE:	16 24		DATE:	15-5-	73
KLM:	24 1,961 OF MAINTENANCE:			1 H H H 5 H	4 6
*	REPLACE H	us on	RUAR	AXLE 1	415
WITH	REBUILT	ONE DO	INTH NEU	U DISC R	ROF
A	FIT NEW	BENKE	PARS	to Repri	LHS
-					
NAME:	Mars	H		-	
SIGNATURE:	me			-:	



Entered 28/3/25 OF

DATE 2	4-3-25
FLEET NO _	1224

START TIME	_ FINISH TIME	JOB NO
KM'S 247512	HRS	REGO

Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable	A Service	B Service	C Service
Local Trailers 40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trailers 15000km 10 days 150000km/365days		15000KM	150000KM
1 Check faults noted on daily prestart and repair as necessary	MH		
2 Check fleet numbers are serviceable	MH		
3 Record Hub meter reading	MH		
4 Lubricate Container Pins	NA		
5 Check operation & condition of all lights/reflectors	MH		
6 Apply Air Check for leaks from boosters, valves & air lines	MH		
7 Adjust brakes , visually inspect components	MH		
8 Check air cells for air leaks and deterioration	MH		
9 Drain all air tanks, report if any oil is present in system	MH		
10 Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points	mH		
11 Check hoist mounting bolts, hoses, coupling	MH		
12 Check number plate & rego label security. Check that rego label is current	MH		
13 Check condition of front air connections, light plug base & electrical lead	MH	1	
14 Check security of spare wheels & spare wheel carrier/gate rack	NIA		
15 Check condition & security of all mudflaps, mudguards, brackets & spray suppression	my		
16 Check landing legs for damage & security	MH		
17 Check sub frame & cross members for cracks, damage & security	MHI		
18 Check condition, position & security of all air hoses	MH		
	_		
19 Check brake linings & drums for wear. Check hub seals for leakage			
20 Check security of height control valves and links & adjust if required			
Check skid plate/king pin security & condition, check draw bar/bushes and towing eye eye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be checked for tolerances			
22 Check wheel nut tensions, check valve stem alignment			
23 Check all tyre pressures and refit valve caps (including spare) report abnormal wear			
24 Check condition & security of rear marker signs			
25 Check ring feeder condition, operation & security			
26 Lubricate twist locks & check operation & security of pedestals, straighten handles as required			
27 Check condition & security of rope rails, gate pockets, winch rails & straps			
28 Check condition & security of floor and associated components			
29 Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear			
30 Check security & bolt tension od airbag suspension hangers & radius rod arms			
31 Raise wheel assembly & check bearings for free play by "feel" only & adjust as required			
32 Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted			
front			
33 Check brake linings & drums for wear whilst hubs are removed			
34 Check hubs for cracks and tapered shoulders for wear			
35 Remove bearings and clean/inspect for reuse			
36 Replace mudflaps & decals as required			
37 Remove s/cam slack adjuster pins and rotate/lubricate			

rear

Initial if adjusted - Tick if OK

PLEASE COMPLETE PAGE :

38 Pack bearings with fresh grease & reassemble



Vork/Repairs carried o	out			
SPLIT	- OP	AND	GREPSE	TURN THISLE
any defect found				
t No/Consumables	Qty		Part No/Consumabl	es Qty
			51	
adesperson Name	MAIT	14	Signature	ma

Date

24-3-25



VEHICLE: 7624	DATE: 23/4/25
	· · · · · · · · · · · · · · · · · · ·
HRS:	
KLM: 262 160	1 H 2 3 H 4
DESCRIPTION OF MAINTENANCE:	5   6
Replace pads Front the drive	c seels
repair prois Fish with arie	75 3/00
₹ <sup>0</sup> &	
-	
	**************************************
NAME:	
NAME: Lake	
SIGNATURE:	

Entered 16/5/25 DF.



#### **WORLD WELDING & TRANSPORT SERVICES**

VEHICLE: 72 24	DATE: 5-5-25
HRS:  KLM: 266,425  DESCRIPTION OF MAINTENANCE:	1 H 2 3 H 4 5 H 6
+ REPLACE CALIPER ON	FRONT AXLE RHS
WITH NEW ONE	
E	
<del></del>	
NAME: MASS H	
SIGNATURE:	

Entered 16/5/25 DF.



**WORLD WELDING & TRANSPORT SERVICES** 

VEHICLE:	7/24	DATE:/	0-5-25
	267,256  PF MAINTENANCE:	1 3 + 5 +	2 
AXLE	FIT 2 NEW LHS (TR 690	TIRES )	TO FRONT
57			
NAME:			



VEHICLE:	72-24	DATE: 17-5-	-25
	268,821 Kim		2
	- MAINTENANCE:	5 H	6
£	FIT 2 NEW (TRIANCLE TR	TIRES TO PR	ONT AXL
RHS	(TRIANCLÉ TR	690)	
NAME:	MAD H		
SIGNATURE:	ma		



VEHICLE: 7424	DATE: 25/5/25
HRS:	
	1   2
KLM:	3 + 4
ESCRIPTION OF MAINTENANCE:	5 1 6
	<del>19-11</del>
Kepline Front left Airburg	
1.11 0 0 10 0 10 0	.0
weld before to yours support	
NAME: Lfac	
SIGNATURE:	
SIGNATURE:	



VEHICLE:	100	7	DATE:	16-6-25
KLM;	274,7	787		1     2
ESCRIPTION OF M				5 + 6
* RE	PLACE	FRONT	LH 5	CLEARANCE
LIGHT	AND	REPAIR	WIRE	SG.
NAME:	MAT	4		
SIGNATURE:	ma			




DATE 14-7-25
FLEET NO 72-24

START TIME	FINISH TIME
KM'S 2828	34 HRS

Service It	ems - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable	A Service	B Service	C Service
Local Trailers	40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trailers	15000km 10 days 150000km/365days		15000KM	150000KN
1 Check faults noted on o	daily prestart and repair as necessary		MH	
2 Check fleet numbers as	re serviceable		MH	
3 Record Hub meter read	ling		MH	
4 Lubricate Container Pir	s		NA	
5 Check operation & con	dition of all lights/reflectors		MA	
6 Apply Air Check for lea	ks from boosters, valves & air lines		MH	
7 Adjust brakes , visually	inspect components		MH	
8 Check air cells for air le	aks and deterioration		MH	
9 Drain all air tanks, repo	ort if any oil is present in system		MH	
10 Grease trailer incl. brak	e cams, slack adjusters, landing legs, ring feeder & other grease points		MH	
11 Check hoist mounting b	polts, hoses, coupling		MH	
12 Check number plate &	rego label security. Check that rego label is current		MH	
L3 Check condition of fror	t air connections, light plug base & electrical lead		MH	
L4 Check security of spare	wheels & spare wheel carrier/gate rack		NA	
L5 Check condition & secu	rity of all mudflaps, mudguards, brackets & spray suppression		MH	
L6 Check landing legs for o	iamage & security		MH	
17 Check sub frame & cros	ss members for cracks, damage & security		MH	
L8 Check condition, positi	on & security of all air hoses		MH	

19	Check brake linings & drums for wear. Check hub seals for leakage			
20	Check security of height control valves and links & adjust if required			
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye  NOTE: If draw bar eye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be checked for tolerances			
22	Check wheel nut tensions, check valve stem alignment			
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear			
24	Check condition & security of rear marker signs			
25	Check ring feeder condition, operation & security			
26	Lubricate twist locks & check operation & security of pedestals, straighten handles as required			
27	Check condition & security of rope rails, gate pockets, winch rails & straps			
28	Check condition & security of floor and associated components			
29	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear			
30	Check security & bolt tension od airbag suspension hangers & radius rod arms			
31	Raise wheel assembly & check bearings for free play by "feel" only & adjust as required			
32	Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted			

MH	
mH	10-1
MH	
MH	
MH MH	
NA	
NA	
MH	
MH	
MA	

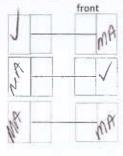

33	Check brake linings & drums for wear whilst hubs are removed
34	Check hubs for cracks and tapered shoulders for wear
35	Remove bearings and clean/inspect for reuse
36	Replace mudflaps & decals as required
37	Remove s/cam slack adjuster pins and rotate/lubricate
38	Pack bearings with fresh grease & reassemble

rear



ork/Repairs carried o	out		
* Prom	es RANS	PARC DOL	10,8715
Ax1-E	PHT	PADS ON	70110156
	1-1/3		
t any defect found			
rt No/Consumables	Qty	Part No/Consumables	Qty
		r dre rroy consumusies	
idesperson Name	MATE H	Signature	MA
,	1.16/11		111111



VEHICLE: 76 24	DATE: <u>69/7/25</u>
HRS:	
KLM: 24892	1 2
	3 1 4
DESCRIPTION OF MAINTENANCE:	5 6
	1,
- ,	
Torangle TR69 Rear A. Replan tym	the passager side
1	
thefun topm	
<del></del>	
\$	
<del></del>	
NAME	
NAME: Land	
SIGNATURE:	

### **Certificate of inspection Trailers & Dollies over 750kg**





	1 4 5 9 ABN 97 108 243 714 MAINTENANCE
Owner and vehicle details	Details of other items rejected
Vehicle Owner's name and address	WHEEL NUT INDICATORS
WWAIS	
10 KOLONGO CRES	
MT IM QLD Postcode	4825
Plate No. (if applicable) State Unit No.	
314 QZH QU> TL24	
VIN/Chassis no.	
6T9T23NTOD2NUL	1,0,4,2
Make Model	
TRISTAR TRI	Ist Inspection
Body Shape Badge (eg. Cargo)	Result 🔀
Dour	
Dour	Inspection date Inspection time
Compliance type Give details	25 / 8 /25 8:00 mm
Compliance Import Other	Odometer reading
Plate Plate	
Date on Plate Vehicle Colour	Signature of Examiner Examiner's no.
2013 BLACK	5-2 1890 4
1.6. 8:44	Final inspection (must not be more than 14 days from date of 1st inspection)
Left or Right hand drive?	Result
Tare GVM 23500 GCM	riodult
Results of inspection	Inspection date Inspection time
Please indicate Pass 🗸 Fail 🗶	27/8/25 8:00
1st	Final Odometer reading
inspection Identification	inspection
Modifications	Cignotive of Everyings
Lights & Electrical Components	Signature of Examiner Examiner's no.
Body & Chassis Suspension	S-12y 18904
Wheels & Tyres	Inspection Station details
Brakes	Name and location
Tow Coupling	SUPRRIOR MACHINIZET MANTENANCE
	B 27 CAMMERCIAL IRA Protocodo 6825
	Approved Inspection Station Number
	10588
	B Certification
	Approved examiner - I have inspected the vehicle indicated on this form and
A	found it had no defect that would affect its safe use of the road and it meets the
	requirements of the <i>Transport Operations (Road Use Management) Act 1995.</i> Inspected by - Signature of Examiner  Date
	27-8-25
	Name of Examiner (please print) Examiner's no.

SAM PYE