



 
WORLD WELDING & TRANSPORT SERVICES

Maintenance Report

VEHICLE: TL 25

DATE: 15-3-20

HRS/KLMS: N/A

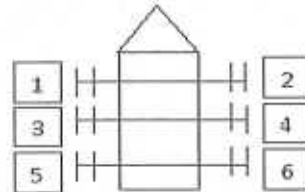

DESCRIPTION OF MAINTENANCE:

* REPLACE WORN SPRING EYE
BUSHES ON FRONT AXLE RHS, MIDDLE
AXLE LHS, AND REAR AXLE RHS

B-3-20

* REPLACE CALIPER ON REAR AXLE
LHS WITH A REBUILT ONE AND FIT NEW
BRAKE PADS

* REPLACE CALIPER ON MIDDLE AXLE
LHS WITH A NEW ONE AND FIT NEW
BRAKE PADS

* 4 NEW TIRES FITTED TO REAR AXLE
* REPLACED FAULTY CLEARANCE LIGHTS
ON LHS X 2

NAME: MAT H

SIGNATURE: [Signature]




TRAILER & DOLLY SERVICE SHEET

DATE 5.4.20 START TIME _____ FINISH TIME _____ JOB NO _____
 FLEET NO 7225 KM'S N/A HRS _____ REGO _____

Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable		A Service	B Service	C Service
Local Trailers	40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trailers	15000km 10 days 150000km/365days		15000KM	150000KM
1	Check fault repair bok and repair as ncessary	NA		
2	Check fleet numbers are serviceable	MH		
3	Record Hubmeter reading	N/A		
4	Lubricate Container Pins	N/A		
5	Check operation & condition of all lights/reflectors	MH		
6	Apply Air Check fvor leaks from boosters, valves & air lines	MH		
7	Adjust brakes , visually inspect components	MH		
8	Check air cells for air leaks and deterioration	MH		
9	Drain all air tanks, report if any oil is present in system	MH		
10	Grease trailer incl. brake cams, slack adjusters, landing legs, ringfeeder & other grease points	MH		
11	Check hoist mounting bolts, hoses, coupling	MH		
12	Check number plate & rego label security. Check that rego label is current	MH		
13	Check condition of front air connections; light plug base & electrical lead	MH		
14	Check security of spare wheels & spare wheel carrier/gate rack	MH		
15	Check condition & security of all mudflaps, mudguards, brackets & spray suppression	MH		
16	Check landing legs for damage & security	MH		
17	Check sub frame & cross members for cracks, damage & security	MH		
18	Check condition, position & security of all air hoses	MH		

19	Check brake linings & drums for wear. Check hub seals for leakage
20	Check security of height control valves and links & adjust if required
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye
22	Check wheel nut tensions, check valve stem alignment
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear
24	Check condition & security of rear marker signs
25	Check ringfeeder condition, operation & security
26	Lubricate twistlocks & check operation & security of pedestals, straighten handles as required
27	Check condition & security of rope rails, gate pockets, winch rails & straps
28	Check condition & security of floor and associated components
29	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear
30	Check security & bolt tension od airbag suspension hagers & radius rod arms
31	Raise wheel assembly & check bearings for free play by "feel" only & adjust as required
32	Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted

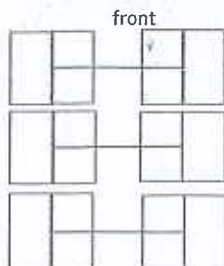 

33	Check brake linings & drums for wear whilst hubs are removed
34	Check hubs for cracks and tapered shoulders for wear
35	Remove bearings and clean/inspect for reuse
36	Replace muflaps & decals as required
37	Remove s/cam slack adjuster pins and rotate/lubricate
38	Pack bearings with fresh grease & reassemble


Initial if adjusted - Tick if C

PLEASE COMPLETE PAGE 2



* Grosse Knapid

[illegible]

Tradesperson Name	MATT H	Signature	
		Date	5-4-20



WORLD WELDING & TRANSPORT SERVICES

 
Maintenance Report

VEHICLE: TL 25

DATE: 15-4-20

HRS /

KLM /

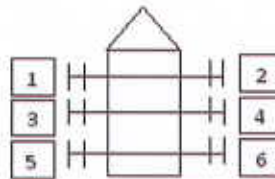

DESCRIPTION OF MAINTENANCE:

* REPLACE LEAKING AIR BAGS
ON FRONT AXLE & MIDDLE
AXLE LHS & RHS

NAME: Mark H

SIGNATURE: [Signature]



 
WORLD WELDING & TRANSPORT SERVICES

Maintenance Report

VEHICLE: TL 25

DATE: 17-5-20

HRS/KLMS: N/A

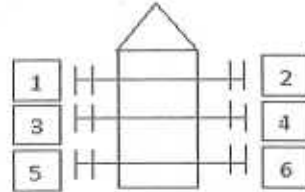

DESCRIPTION OF MAINTENANCE:

* REPLACE WORN TIRES ON
FRONT AXLE LHS AND RHS
WITH Run OUTS

* REPLACE WORN BRAKE PADS
ON FRONT AXLE LHS

* REPLACE SPRING EYE BUSH
ON REAR AXLE LHS

NAME: MAT H

SIGNATURE: [Signature]




TRAILER & DOLLY SERVICE SHEET

DATE 6-6-20 START TIME _____ FINISH TIME _____
 FLEET NO TL 25 KM'S ✓ HRS _____

JOB NO _____
 REGO _____

Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable		A Service	B Service	C Service
Local Trailers	40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trailers	20000km 10 days 150000km/365days		20000KM	150000KM
1	Check fault repair book and repair as necessary	MH		
2	Check fleet numbers are serviceable	MH		
3	Record Hubmeter reading	—		
4	Lubricate twistlocks & check operation & security of pedestals, straighten handles as required	—		
5	Check operation & condition of all lights/reflectors	MH		
6	Apply Air, Check for leaks from boosters, valves & air lines	MH		
7	Adjust brakes, visually inspect components	MH		
8	Check air cells for air leaks and deterioration	MH		
9	Drain all air tanks, report if any oil is present in system	MH		
10	Grease trailer incl. brake cams, slack adjusters, landing legs, ringfeeder & other grease points	MH		
11	Check hoist mounting bolts, hoses, couplings	MH		
12	Check number plate condition and security	MH		
13	Check condition of front air connections, light plug base & electrical lead	MH		
14	Check security of spare wheels & spare wheel carrier/gate rack	MH		
15	Check condition & security of all mudflaps, mudguards, brackets & spray suppression	MH		
16	Check landing legs for damage & security	MH		
17	Check sub frame & cross members for cracks, damage & security	MH		
18	Check condition, position & security of all air hoses	MH		

19	Check brake linings & drums for wear. Check hub seals for leakage
20	Check security of height control valves and links & adjust if required
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye
22	Check wheel nut tensions, check valve stem alignment
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear
24	Check condition & security of rear marker signs
25	Check ringfeeder condition, operation & security
26	Check condition & security of rope rails, gate pockets, winch rails & straps
27	Check condition & security of floor and associated components
28	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear
29	Check security & bolt tension of airbag suspension hangers & radius rod arms
30	Raise wheel assembly & check bearings for free play by "feel" and adjust as required

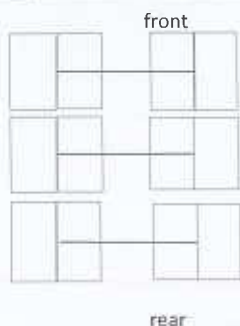 

33	Check brake linings & drums for wear whilst hubs are removed
34	Check hubs for cracks and tapered shoulders for wear
35	Remove bearings and clean/inspect for reuse
36	Replace mudflaps & decals as required
37	Remove s/cam slack adjuster pins and rotate/lubricate
38	Pack bearings with fresh grease & reassemble

Initial if adjusted - Tick if OK

PLEASE COMPLETE PAGE 2



4 ADJUST RIDE HEIGHT

* REPLACE LEAKING SHOCK ABSORBERS ON MIDDLE AXLE LHS & RHS AND FRONT AXLE RHS.

List any defect found

Tradesperson Name	MAT H	Signature	MAT
		Date	6-6-20



 
WORLD WELDING & TRANSPORT SERVICES

Maintenance Report

VEHICLE: 7225 DATE: 2-7-20

HRS —

KLM —

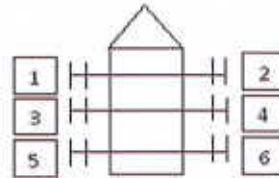

DESCRIPTION OF MAINTENANCE:

* REPLACE BOTH SERVICE
BRAKE RELAY VALVES ON REAR
AIR TANK
* GREASE LEGS

NAME: MATT H

SIGNATURE: [Signature]




TRAILER & DOLLY SERVICE SHEET

DATE 25-7-20 START TIME _____ FINISH TIME _____
FLEET NO 72 25 KM'S — HRS _____

JOB NO _____
REGO _____

Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable		A Service	B Service	C Service
Local Trailers	80000km/365 days	7 DAYS	90 DAYS	80000KM
Linehaul Trailers	40000km 90 days 150000km/365days		40000KM	150000KM
1	Check fault repair book and repair as necessary	MH		
2	Check fleet numbers are serviceable	MH		
3	Record Hubmeter reading	N/A		
4	Lubricate twistlocks & check operation & security of pedestals, straighten handles as required	N/A		
5	Check operation & condition of all lights/reflectors	MH		
6	Apply Air, Check for leaks from boosters, valves & air lines	MH		
7	Adjust brakes , visually inspect components	MH		
8	Check air cells for air leaks and deterioration	MH		
9	Drain all air tanks, report if any oil is present in system	MH		
10	Grease trailer incl. brake cams, slack adjusters, landing legs, ringfeeder & other grease points	MH		
11	Check hoist mounting bolts, hoses, couplings	MH		
12	Check number plate condition and security	MH		
13	Check condition of front air connections, light plug base & electrical lead	MH		
14	Check security of spare wheels & spare wheel carrier/gate rack	MH		
15	Check condition & security of all mudflaps, mudguards, brackets & spray suppression	MH		
16	Check landing legs for damage & security	MH		
17	Check sub frame & cross members for cracks, damage & security	MH		
18	Check condition, position & security of all air hoses	MH		

19	Check brake linings & drums for wear. Check hub seals for leakage
20	Check security of height control valves and links & adjust if required
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye
22	Check wheel nut tensions, check valve stem alignment
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear
24	Check condition & security of rear marker signs
25	Check ringfeeder condition, operation & security
26	Check condition & security of rope rails, gate pockets, winch rails & straps
27	Check condition & security of floor and associated components
28	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear
29	Check security & bolt tension of airbag suspension hangers & radius rod arms
30	Raise wheel assembly & check bearings for free play by "feel" and adjust as required

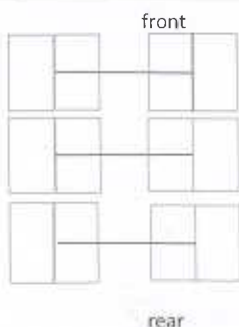 

33	Check brake linings & drums for wear whilst hubs are removed
34	Check hubs for cracks and tapered shoulders for wear
35	Remove bearings and clean/inspect for reuse
36	Replace mudflaps & decals as required
37	Remove s/cam slack adjuster pins and rotate/lubricate
38	Pack bearings with fresh grease & reassemble

Initial if adjusted - Tick if OK


PLEASE COMPLETE PAGE 2



* REPLACE REAR RHS AIR BAG

REPLACE SHOCKS ON REAR AXLE

List any defect found

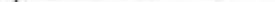Tradesperson Name	MATT H	Signature	
		Date	25-7-20




TRAILER & DOLLY SERVICE SHEET

DATE 29-8-20 START TIME _____ FINISH TIME _____
FLEET NO 7225 KM'S _____ HRS _____

JOB NO _____
REGO _____

Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable		A Service	B Service	C Service
Local Trailers	80000km/365 days	7 DAYS	90 DAYS	80000KM
Linehaul Trailers	40000km 90 days 150000km/365days		40000KM	150000KM
1	Check fault repair book and repair as necessary	MH		
2	Check fleet numbers are serviceable	MH		
3	Record Hubmeter reading	N/A		
4	Lubricate twistlocks & check operation & security of pedestals, straighten handles as required	N/A		
5	Check operation & condition of all lights/reflectors	MH		
6	Apply Air, Check for leaks from boosters, valves & air lines	MH		
7	Adjust brakes , visually inspect components	MH		
8	Check air cells for air leaks and deterioration	MH		
9	Drain all air tanks, report if any oil is present in system	MH		
10	Grease trailer incl. brake cams, slack adjusters, landing legs, ringfeeder & other grease points	MH		
11	Check hoist mounting bolts, hoses, couplings	MH		
12	Check number plate condition and security	MH		
13	Check condition of front air connections, light plug base & electrical lead	MH		
14	Check security of spare wheels & spare wheel carrier/gate rack	MH		
15	Check condition & security of all mudflaps, mudguards, brackets & spray suppression	MH		
16	Check landing legs for damage & security	MH		
17	Check sub frame & cross members for cracks, damage & security	MH		
18	Check condition, position & security of all air hoses	MH		

19	Check brake linings & drums for wear, Check hub seals for leakage
20	Check security of height control valves and links & adjust if required
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye
22	Check wheel nut tensions, check valve stem alignment
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear
24	Check condition & security of rear marker signs
25	Check ringfeeder condition, operation & security
26	Check condition & security of rope rails, gate pockets, winch rails & straps
27	Check condition & security of floor and associated components
28	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear
29	Check security & bolt tension of airbag suspension hangers & radius rod arms
30	Raise wheel assembly & check bearings for free play by "feel" and adjust as required

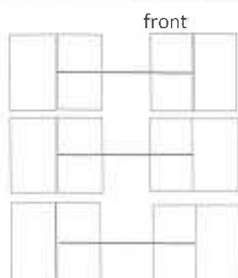 

front

rear

33	Check brake linings & drums for wear whilst hubs are removed
34	Check hubs for cracks and tapered shoulders for wear
35	Remove bearings and clean/inspect for reuse
36	Replace mudflaps & decals as required
37	Remove s/cam slack adjuster pins and rotate/lubricate
38	Pack bearings with fresh grease & reassemble

Initial if adjusted - Tick if OK

PLEASE COMPLETE PAGE 2



* REPLACE LEAKING WFT RAM ON REAR OF TRAILER

List any defect found

[illegible]




TRAILER & DOLLY SERVICE SHEET

DATE 12-9-20 START TIME _____ FINISH TIME _____
FLEET NO 7285 KM'S ✓ HRS _____

JOB NO _____
REGO _____

Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable		A Service	B Service	C Service
Local Trailers	80000km/365 days	7 DAYS	90 DAYS	80000KM
Linehaul Trailers	40000km 90 days 150000km/365days		40000KM	150000KM
1	Check fault repair book and repair as necessary	MH		
2	Check fleet numbers are serviceable	MH		
3	Record Hubmeter reading	N/A		
4	Lubricate twistlocks & check operation & security of pedestals, straighten handles as required	N/A		
5	Check operation & condition of all lights/reflectors	MH		
6	Apply Air, Check for leaks from boosters, valves & air lines	MH		
7	Adjust brakes , visually inspect components	MH		
8	Check air cells for air leaks and deterioration	MH		
9	Drain all air tanks, report if any oil is present in system	MH		
10	Grease trailer incl. brake cams, slack adjusters, landing legs, ringfeeder & other grease points	MH		
11	Check hoist mounting bolts, hoses, couplings	MH		
12	Check number plate condition and security	MH		
13	Check condition of front air connections, light plug base & electrical lead	MH		
14	Check security of spare wheels & spare wheel carrier/gate rack	MH		
15	Check condition & security of all mudflaps, mudguards, brackets & spray suppression	MH		
16	Check landing legs for damage & security	MH		
17	Check sub frame & cross members for cracks, damage & security	MH		
18	Check condition, position & security of all air hoses	MH		

19	Check brake linings & drums for wear. Check hub seals for leakage
20	Check security of height control valves and links & adjust if required
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye
22	Check wheel nut tensions, check valve stem alignment
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear
24	Check condition & security of rear marker signs
25	Check ringfeeder condition, operation & security
26	Check condition & security of rope rails, gate pockets, winch rails & straps
27	Check condition & security of floor and associated components
28	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear
29	Check security & bolt tension of airbag suspension hangers & radius rod arms
30	Raise wheel assembly & check bearings for free play by "feel" and adjust as required

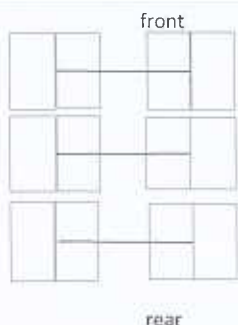 

33	Check brake linings & drums for wear whilst hubs are removed
34	Check hubs for cracks and tapered shoulders for wear
35	Remove bearings and clean/inspect for reuse
36	Replace mudflaps & decals as required
37	Remove s/cam slack adjuster pins and rotate/lubricate
38	Pack bearings with fresh grease & reassemble

Initial if adjusted - Tick if OK

PLEASE COMPLETE PAGE 2

Certificate of inspection Trailers & Dollies over 750kg



1069

Ph 0417 600 249
ABN 97 108 243 714**SUPERIOR
MACHINERY
MAINTENANCE**

Owner and vehicle details

Vehicle Owner's name and address

WWATS		
110 KOLONGO	CRES	
MT ISA	QLD	Postcode 4825

Plate No.

(if applicable)

State

Unit No.

315 QZH	QLD	TL25
---------	-----	------

VIN/Chassis no.

6T9T25NT0D2NUM093

Make

Model

TRISTAR	ST3
---------	-----

Body Shape

Badge (eg. Cargo)

SEMI TRAILER	
--------------	--

Compliance type

Compliance

Plate

☒

Import

Plate

☐

Give details

Other

☐☐

Date on Plate

Vehicle Colour

0513	YELLOW / BLACK
------	----------------

Left or Right hand drive?

Tare		GVM	47000	GCM	
------	--	-----	-------	-----	--

Results of inspection

Please indicate

Pass

☒

Fail

☒

1st

inspection

Final

inspection

Identification	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Modifications	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Lights & Electrical Components	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Body & Chassis	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Suspension	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Wheels & Tyres	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Brakes	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Tow Coupling	<input checked="" type="checkbox"/>	<input type="checkbox"/>
1st Axle	SB <input checked="" type="checkbox"/> HB <input checked="" type="checkbox"/>	SB <input type="checkbox"/> HB <input type="checkbox"/>
2nd Axle	SB <input checked="" type="checkbox"/> HB <input checked="" type="checkbox"/>	SB <input type="checkbox"/> HB <input type="checkbox"/>
3rd Axle	SB <input checked="" type="checkbox"/> HB <input checked="" type="checkbox"/>	SB <input type="checkbox"/> HB <input type="checkbox"/>
4th Axle	SB <input type="checkbox"/> HB <input type="checkbox"/>	SB <input type="checkbox"/> HB <input type="checkbox"/>

Details of other items rejected

DOOR CRACK. x2

1st Inspection

Result ☒

Inspection date

22 / 9 / 20

Inspection time

8:00	am
------	----

Odometer reading

-

Signature of Examiner

S. Py

Examiner's no.

18904

Final inspection (must not be more than 14 days from date of 1st inspection)

Result ☒

Inspection date

23 / 9 / 20

Inspection time

8:00	am
------	----

Odometer reading

-

Signature of Examiner

S. Py

Examiner's no.

18904

Inspection Station details

Name and location

SUPERIOR MACHINERY MAINTENANCE	
27 COMMERCIAL RD	Postcode 4825

Approved Inspection Station Number

10588

Certification

Approved examiner - I have inspected the vehicle indicated on this form and found it had no defect that would affect its safe use of the road and it meets the requirements of the Transport Operations (Road Use Management) Act 1995.

Inspected by - Signature of Examiner

S. Py

Date

23-9-20

Name of Examiner (please print)

SAM PYE

Examiner's no.

18904
