



WORLD WELDING & TRANSPORT SERVICES


Maintenance Report

VEHICLE: TL 25

DATE: 1-5-24

HRS: _____

KLM: 32,007

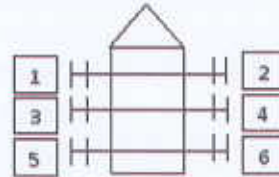

DESCRIPTION OF MAINTENANCE:

* REPLACE LEAKING FRONT HYDRAULIC
RAM FOR 8IN

NAME: Matt H

SIGNATURE: Matt H

TRAILER & DOLLY SERVICE SHEET



TRAILER & DOLLY SERVICE SHEET

Work/Repairs carried out

✶	REPLACE	FRONT	RHS	MUD FLAP
✶	REPLACE	FRONT	RHS	CAMPER AND BRAKE PADS
✶	REPLACE	REAR	RLH	BRAKE PADS

List any defect found

Part No/Consumables	Qty	Part No/Consumables	Qty

Tradesperson Name	MARTIN H	Signature	
		Date	22-5-24

TRAILER & DOLLY SERVICE SHEET

[illegible]

Tradesperson Name	MATH	Signature	
		Date	2-6-24



WORLD WELDING & TRANSPORT SERVICES


Maintenance Report

VEHICLE: TL 25

DATE: 2-7-24

HRS

KLM 66,529

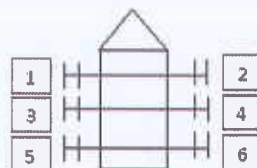

DESCRIPTION OF MAINTENANCE:

* REPLACE WORN TIRES ON
MIDDLE AXLE LHS & RHS WITH
Run-outs

* REPLACE BRAKE CALIPER &
BRAKE PADS ON MIDDLE AXLE
LHS

NAME: Matt H

SIGNATURE: Matt H


WORLD WELDING & TRANSPORT SERVICES

Maintenance Report

VEHICLE: 7225 DATE: 10-7-24

HRS _____

KLM 73,667

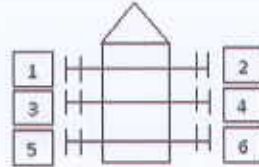

DESCRIPTION OF MAINTENANCE:

* FIT NEW BRAKE PAD TO
REAR AXLE LHS

NAME: Matt H

SIGNATURE:



TRAILER & DOLLY SERVICE SHEET

DATE 18-7-24

START TIME _____

FINISH TIME _____

JOB NO _____

FLEET NO 1225


KM'S 80,054

HRS _____

REGO _____

Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable		A Service	B Service	C Service
Local Trailers	40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trailers	15000km 10 days 150000km/365days		15000KM	150000KM
1	Check faults noted on daily prestart and repair as necessary	MH		
2	Check fleet numbers are serviceable	MH		
3	Record Hub meter reading	MH		
4	Lubricate Container Pins	NA		
5	Check operation & condition of all lights/reflectors	MH		
6	Apply Air Check for leaks from boosters, valves & air lines	MH		
7	Adjust brakes , visually inspect components	MH		
8	Check air cells for air leaks and deterioration	MH		
9	Drain all air tanks, report if any oil is present in system	MH		
10	Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points	MH		
11	Check hoist mounting bolts, hoses, coupling	MH		
12	Check number plate & rego label security. Check that rego label is current	MH		
13	Check condition of front air connections, light plug base & electrical lead	MH		
14	Check security of spare wheels & spare wheel carrier/gate rack	MH		
15	Check condition & security of all mudflaps, mudguards, brackets & spray suppression	MH		
16	Check landing legs for damage & security	MH		
17	Check sub frame & cross members for cracks, damage & security	MH		
18	Check condition, position & security of all air hoses	MH		

19	Check brake linings & drums for wear. Check hub seals for leakage
20	Check security of height control valves and links & adjust if required
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye NOTE: If draw bar eye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be checked for tolerances
22	Check wheel nut tensions, check valve stem alignment
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear
24	Check condition & security of rear marker signs
25	Check ring feeder condition, operation & security
26	Lubricate twist locks & check operation & security of pedestals, straighten handles as required
27	Check condition & security of rope rails, gate pockets, winch rails & straps
28	Check condition & security of floor and associated components
29	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear
30	Check security & bolt tension of airbag suspension hangers & radius rod arms
31	Raise wheel assembly & check bearings for free play by "feel" only & adjust as required
32	Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted

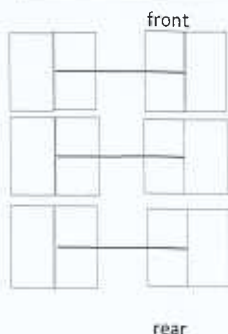

33	Check brake linings & drums for wear whilst hubs are removed
34	Check hubs for cracks and tapered shoulders for wear
35	Remove bearings and clean/inspect for reuse
36	Replace mudflaps & decals as required
37	Remove s/cam slack adjuster pins and rotate/lubricate
38	Pack bearings with fresh grease & reassemble

Initial if adjusted - Tick if OK

PLEASE COMPLETE PAGE 2



TRAILER & DOLLY SERVICE SHEET


Work/Repairs carried out

* REPLACE WORN TIRE ON REAR AXLE
LHS INNER WITH RUN-OUT

* REPAIR AIR LEAK ON AIR BAG
ON MIDDLE AXLE RHS

List any defect found

Part No/Consumables	Qty	Part No/Consumables	Qty

Tradesperson Name	MATT H	Signature	
		Date	18-7-24

WORLD WELDING & TRANSPORT SERVICES


Maintenance Report

VEHICLE: TL25

DATE: 22/7/2021

HRS

KLM

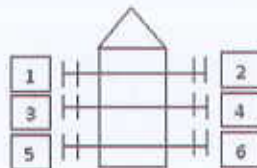

DESCRIPTION OF MAINTENANCE:

Reptane Brake Safety valve under
trailer

NAME: Brandon Feltz

SIGNATURE: _____



WORLD WELDING & TRANSPORT SERVICES


Maintenance Report

VEHICLE: TL 25

DATE: 8.8.24

HRS

KLM

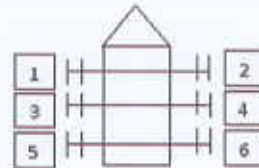

DESCRIPTION OF MAINTENANCE:

* REPLACE HUB ON MIDDLE AXLE
RHS (FAILED WHEEL BEARING) WITH A REBUILT
ONE.

* NEW DISC ROTOR & BRAKE PADS
FITTED.

* REPLACED FLAT TIRE ON FRONT
AXLE LHS OUTER WITH R-OUT

NAME: MAN H

SIGNATURE: [Signature]



WORLD WELDING & TRANSPORT SERVICES


Maintenance Report

VEHICLE: 7225

DATE: 30-8-24

HRS

KLM 119,690

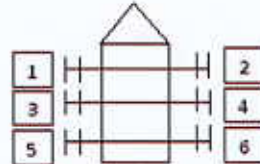

DESCRIPTION OF MAINTENANCE:

* REPLACE WHEEL HUB ON FRONT
AXLE RHS WITH A NEW ONE AND
NEW DISC ROTOR. ALSO FIT NEW
BRAKE CALIPER AND NEW BRAKE PADS.

NAME: Matt H

SIGNATURE: Matt H



* FIT NEW TIRES TO REAR AXLE
LHS AND RHS

4 INSTALL NEW BRAKE CALIPER & BRAKE PAD TO REAR AXLE LHS

* REPLACE RITS INDICATOR

* REPLACE RHS ROAD MARKER SIGN

[illegible]

Tradesperson Name

H. 2. 11. 11

Signature

Date _____

[Signature]

7-9-24

Certificate of inspection Trailers & Dollies over 750kg



1399

Ph 0417 600 249
ABN 97 108 243 714

**SUPERIOR
MACHINERY
MAINTENANCE**

Owner and vehicle details

Vehicle Owner's name and address

WWATS
10 KOLONGO CRES
MT ISA QLD Postcode 4825

Plate No.

(if applicable)

State

Unit No.

315 QZH QLD TL25

VIN/Chassis no.

6T9T25NT0D2NUM093

Make

Model

TRISTAR TRI

Body Shape

Badge (eg. Cargo)

SEMI TRAILER

Compliance type

Compliance

Plate

☒

Import
Plate

☐

Give details

Other

☐

Date on Plate

Vehicle Colour

2013 YELLOW

Left or Right hand drive?

Tare GVM 47000 GCM

Results of inspection

Please indicate

Pass

☒

Fail

☒

1st
inspection

Final
inspection

Identification

☒

☐

Modifications

☒

☐

Lights & Electrical Components

☒

☐

Body & Chassis

☒

☐

Suspension

☒

☐

Wheels & Tyres

☒

☐

Brakes

☒

☐

Tow Coupling

☒

☐

1st Axle

SB

☒

SB

☐

HB

☒

HB

☐

2nd Axle

SB

☒

SB

☐

HB

☒

HB

☐

3rd Axle

SB

☒

SB

☐

HB

☒

HB

☐

4th Axle

SB

☐

SB

☐

HB

☐

HB

☐

Details of other items rejected

1st Inspection

Result

☒

Inspection date

Inspection time

12/9/24 1:00 am

Odometer reading

Signature of Examiner

Examiner's no.

S-Py 18904

Final inspection (must not be more than 14 days from date of 1st inspection)

Result

☐

Inspection date

Inspection time

/ / : am pm

Odometer reading

Signature of Examiner

Examiner's no.

Inspection Station details

Name and location

SUPERIOR MACHINERY MAINTENANCE
27 COMMERCIAL RD Postcode 4825

Approved Inspection Station Number

10588

Certification

Approved examiner - I have inspected the vehicle indicated on this form and found it had no defect that would affect its safe use of the road and it meets the requirements of the Transport Operations (Road Use Management) Act 1995.

Inspected by - Signature of Examiner

Date


S-Py 12-9-24

Name of Examiner (please print)

Examiner's no.

SM PYE 18904

STEEJO PRESS 4743 5807

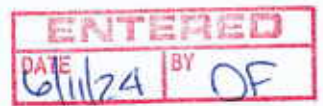


TRAILER & DOLLY SERVICE SHEET

DATE 25-9-24 START TIME _____ FINISH TIME _____ JOB NO _____
 FLEET NO 7225 KM'S 143,109 HRS _____ REGO _____

Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable		A Service	B Service	C Service
Local Trailers	40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trailers	15000km 10 days 150000km/365days		15000KM	150000KM
1	Check faults noted on daily prestart and repair as necessary	MH		
2	Check fleet numbers are serviceable	MH		
3	Record Hub meter reading	MH		
4	Lubricate Container Pins	N/A		
5	Check operation & condition of all lights/reflectors	MH		
6	Apply Air Check for leaks from boosters, valves & air lines	MH		
7	Adjust brakes , visually inspect components	MH		
8	Check air cells for air leaks and deterioration	MH		
9	Drain all air tanks, report if any oil is present in system	MH		
10	Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points	MH		
11	Check hoist mounting bolts, hoses, coupling	MH		
12	Check number plate & rego label security. Check that rego label is current	MH		
13	Check condition of front air connections, light plug base & electrical lead	MH		
14	Check security of spare wheels & spare wheel carrier/gate rack	MH		
15	Check condition & security of all mudflaps, mudguards, brackets & spray suppression	MH		
16	Check landing legs for damage & security	MH		
17	Check sub frame & cross members for cracks, damage & security	MH		
18	Check condition, position & security of all air hoses	MH		

19	Check brake linings & drums for wear. Check hub seals for leakage
20	Check security of height control valves and links & adjust if required
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye NOTE: If draw bar eye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be checked for tolerances
22	Check wheel nut tensions, check valve stem alignment
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear
24	Check condition & security of rear marker signs
25	Check ring feeder condition, operation & security
26	Lubricate twist locks & check operation & security of pedestals, straighten handles as required
27	Check condition & security of rope rails, gate pockets, winch rails & straps
28	Check condition & security of floor and associated components
29	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear
30	Check security & bolt tension od airbag suspension hangers & radius rod arms
31	Raise wheel assembly & check bearings for free play by "feel" only & adjust as required
32	Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted

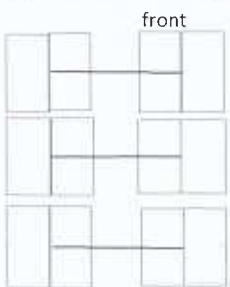

front

rear

33	Check brake linings & drums for wear whilst hubs are removed
34	Check hubs for cracks and tapered shoulders for wear
35	Remove bearings and clean/inspect for reuse
36	Replace mudflaps & decals as required
37	Remove s/cam slack adjuster pins and rotate/lubricate
38	Pack bearings with fresh grease & reassemble

Initial if adjusted - Tick if OK

PLEASE COMPLETE PAGE 2



WORLD WELDING & TRANSPORT SERVICES


Maintenance Report

VEHICLE: TL25

DATE: 17/10/24

HRS _____

KLM 161612

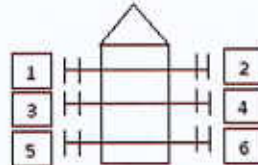

DESCRIPTION OF MAINTENANCE:

Replace Brake Caliper

NAME: L. F. M.

SIGNATURE: [Signature]



WORLD WELDING & TRANSPORT SERVICES


Maintenance Report

VEHICLE: TL 25

DATE: 20-11-24

HRS: N/A

KLM: 183,268

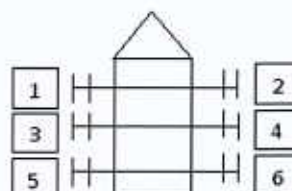

DESCRIPTION OF MAINTENANCE:

* REPLACE FRONT AXLE ASSY
(AXLE , HUBS , CALIPERS)

* FIT 2 NEW SHOCKS TO FRONT
AXLE

* REPLACE SPRING EYE BUSINES ON
FRONT AXLE LHS & RHS AND WELD
IN NEW WEAR PLATES .

NAME: Mark H


SIGNATURE: [Signature]



DATE 3-12-24 START TIME _____ FINISH TIME _____ JOB NO _____
FLEET NO 1225 KM'S 190.764 HRS _____ REGO _____

19	Check brake linings & drums for wear. Check hub seals for leakage	
20	Check security of height control valves and links & adjust if required	
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye eye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be checked for tolerances	NOTE: If draw bar
22	Check wheel nut tensions, check valve stem alignment	
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear	
24	Check condition & security of rear marker signs	
25	Check ring feeder condition, operation & security	
26	Lubricate twist locks & check operation & security of pedestals, straighten handles as required	
27	Check condition & security of rope rails, gate pockets, winch rails & straps	
28	Check condition & security of floor and associated components	
29	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear	
30	Check security & bolt tension of airbag suspension hangers & radius rod arms	
31	Raise wheel assembly & check bearings for free play by "feel" only & adjust as required	
32	Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted	

MH	
MH	
MH	
MH	
MH	
MH	
NKJ	
NKJ	
MH	
MH	
MH	
MH	
MH	

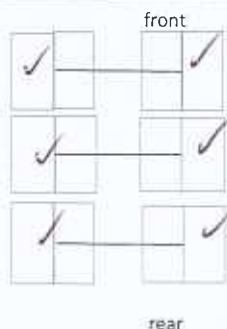

- 33 Check brake linings & drums for wear whilst hubs are removed
- 34 Check hubs for cracks and tapered shoulders for wear
- 35 Remove bearings and clean/inspect for reuse
- 36 Replace mudflaps & decals as required
- 37 Remove s/cam slack adjuster pins and rotate/lubricate
- 38 Pack bearings with fresh grease & reassemble

Initial if adjusted - Tick if OK

PLEASE COMPLETE PAGE 2

