



VEHICLE: 725	DATE: 1-1-25
HRS:	1 2 4 5 6
AKLE LYS WITH A REBU	ABSY ON MODES
ARLE LHS	PARS TO MIDDUS
_ * REPUBLIS WORD TIRES	with Run-ours
NAME: Man H	
SIGNATURE:	





VEHICLE:	7225			DATE: 2- /	-25	
KLM:_	20 9, C OF MAINTENANCE:			1 H	2 4 6	
Rus	REPLACE	PRES RUN-0	ws	FRONT	HYLE	
						<u> </u>
						ł
		2				
NAME: _	MAT	- <u>H</u>		<u></u>		
SIGNATURE:	M/4					



DATE 5-2-25
FLEET NO 72-9-5


START TIME	FINISH TIME
KM'S 237/13	HRS

JOB NO	
200 V	
REGO	

Service I	tems - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable	A Service	B Service	C Service
Local Trailers	40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trailers	15000km 10 days 150000km/365days		15000KM	150000KM
1 Check faults noted on	daily prestart and repair as necessary		MH	
2 Check fleet numbers a	re serviceable		MH	
3 Record Hub meter rea	ding		MH	
4 Lubricate Container P	ins		NIA	
5 Check operation & co	ndition of all lights/reflectors		MH	
6 Apply Air Check for lea	aks from boosters, valves & air lines		MH	
7 Adjust brakes , visually	y inspect components		MH	
8 Check air cells for air I	eaks and deterioration		MH	
9 Drain all air tanks, rep	ort if any oil is present in system		MH	
10 Grease trailer incl. bra	ke cams, slack adjusters, landing legs, ring feeder & other grease points		MH	
11 Check hoist mounting	bolts, hoses, coupling		MH	
12 Check number plate 8	rego label security. Check that rego label is current		MH	
13 Check condition of fro	nt air connections, light plug base & electrical lead		MH	
14 Check security of spar	e wheels & spare wheel carrier/gate rack		MH	
15 Check condition & sec	urity of all mudflaps, mudguards, brackets & spray suppression		MH	
16 Check landing legs for	damage & security		MH	
17 Check sub frame & cro	oss members for cracks, damage & security		MH	
18 Check condition, posit	ion & security of all air hoses		MH	

19	Check brake linings & drums for wear. Check hub seals for leakage	
20	Check security of height control valves and links & adjust if required	
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye NOTE: If draw bar eye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be checked for tolerances	
22	Check wheel nut tensions, check valve stem alignment	
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear	
24	4 Check condition & security of rear marker signs	
25	Check ring feeder condition, operation & security	
26	Lubricate twist locks & check operation & security of pedestals, straighten handles as required	
27	Check condition & security of rope rails, gate pockets, winch rails & straps	
28	Check condition & security of floor and associated components	
29	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear	
30	Check security & bolt tension od airbag suspension hangers & radius rod arms	
31	Raise wheel assembly & check bearings for free play by "feel" only & adjust as required	
32	Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted	

MH	
MH	
NA	
NA	
MH	

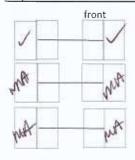

33	Check brake linings & drums for wear whilst hubs are removed
34	Check hubs for cracks and tapered shoulders for wear
35	Remove bearings and clean/inspect for reuse
36	Replace mudflaps & decals as required
37	Remove s/cam slack adjuster pins and rotate/lubricate
38	Pack bearings with fresh grease & reassemble

Initial if adjusted - Tick if OK PLEASE COMPLETE PAGE 2



Work/Repairs carried o	out		
		K(
* Fr	TR668)	TIRES TO /	PEAR AXLE
LH5 (TR668)		
h 1/A	ED A ROOK	- (A) 10-0 PO	PARIO ST FOR
2010	AXLE LHS	a Christe Br	HURST FOR
11110 1	TXLG LAS		
U.A. L. C. A.C. L.			
List any defect found			
Part No/Consumables			T.
Part No/Consumables	Qty	Part No/Consumables	Qty
			**
Tradesperson Name	MATTHEW H	Signature	nen
		Date	5-2-20



THE MEDIT OF PETER STATES	

DATE 21	t-3	-	25
	7	0	<

START TIME	FINISH TIME	
mus 246 8/13	LIDC	

JOB NO	
DECO	

Entered 28/3/25 OF

Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable	A Service	B Service	C Service
Local Trailers 40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trailers 15000km 10 days 150000km/365days		15000KM	150000KN
1 Check faults noted on daily prestart and repair as necessary	MH		
2 Check fleet numbers are serviceable	MH		
3 Record Hub meter reading	MH		
4 Lubricate Container Pins	NA		
5 Check operation & condition of all lights/reflectors	MH		
6 Apply Air Check for leaks from boosters, valves & air lines	MH		
7 Adjust brakes , visually inspect components	MH		
8 Check air cells for air leaks and deterioration	MH		
9 Drain all air tanks, report if any oil is present in system	MIT		
Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points	MH		
11 Check hoist mounting bolts, hoses, coupling	MH		
Check number plate & rego label security. Check that rego label is current	MH	1	
Check condition of front air connections, light plug base & electrical lead	MH		
14 Check security of spare wheels & spare wheel carrier/gate rack	MH		
L5 Check condition & security of all mudflaps, mudguards, brackets & spray suppression	MH		
16 Check landing legs for damage & security	MH		
17 Check sub frame & cross members for cracks, damage & security	MH		
18 Check condition, position & security of all air hoses	mH		

19	Check brake linings & drums for wear. Check hub seals for leakage
20	Check security of height control valves and links & adjust if required
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye NOTE: If draw bar eye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be checked for tolerances
22	Check wheel nut tensions, check valve stem alignment
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear
24	Check condition & security of rear marker signs
25	Check ring feeder condition, operation & security
26	Lubricate twist locks & check operation & security of pedestals, straighten handles as required
27	Check condition & security of rope rails, gate pockets, winch rails & straps
28	Check condition & security of floor and associated components
29	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear
30	Check security & bolt tension od airbag suspension hangers & radius rod arms
31	Raise wheel assembly & check bearings for free play by "feel" only & adjust as required
32	Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted

Tront
1, 1

33	Check brake linings & drums for wear whilst hubs are removed
34	Check hubs for cracks and tapered shoulders for wear
35	Remove bearings and clean/inspect for reuse
36	Replace mudflaps & decals as required
37	Remove s/cam slack adjuster pins and rotate/lubricate
38	Pack bearings with fresh grease & reassemble

rear

Initial if adjusted - Tick if OK

PLEASE COMPLETE PAGE 2



Nork/Repairs carried o	ut		
+ REPLA	ce FLAT T	TRE on MU	AXLE -45
OUTER	WITH A	The on MID	
+ SPLIT	UP AND C	HECK + CAUTS	& Hinti pin
-524			
KERL KERL	ACÉ NOEN	BARS ON	TIRE CARRIUR
V 10 P			
4			
List any defect found			
			107
			95
Dant No/Consumables	low.	D 111/6	
Part No/Consumables	Qty	Part No/Consumables	Qty
		-	
Fradesperson Name	MATT H	Signature	M,g
		Date	24-3-25

Entered 1615/25 OF.



WORLD WELDING & TRANSPORT SERVICES

VEHICLE: 72 25	DATE: 4-5-25
HRS: KLM: 265,6/2 DESCRIPTION OF MAINTENANCE:	
(WD 159) AND FIT NEW	REAR AXLE RHS BRAKE PAOS
NAME: Man	
SIGNATURE:	

Entered 16/5/25 DF



WORLD WELDING & TRANSPORT SERVICES

VEHICLE: _	1425	DATE: 10-5-25
KLM:_	266,552 DF MAINTENANCE:	1 2 4 4 5 6
	REPLACE LAKING	
LHS	FIT NEW TIRES (TR 690)	TO FRONT AXLE
		*
	1747	
NAME: _	Mor H	
SIGNATURE:	M	



VEHICLE:	72-25	DATE: 17-5-25	
HRS:		_	
KLM:	268 114	1 H 2 3 H 4	
ESCRIPTION OF	MAINTENANCE:	5	
	2		_
*	REPLACE LEAKING	HUPAULIC RAM (N	NAI
AT	REAR OF TRAILER		_
			_
			_
			_
			_
			_
			_
			_
			_
			_
NAME:	Mon H		_
IGNATURE:	ma		



VEHICLE: TL 25			_ DATE	: <u>8-6</u>	-25	
HRS:	092			1 H		2
DESCRIPTION OF MAINTENANCE				5 H] #[5
* RESEAR	HD	Ram	AT	Rom	OF	TRAILES
4						
NAME: Man	14					
SIGNATURE:						



VEHICLE:	72 25	DATE: 16-6-25
KLM:	274,074 OF MAINTENANCE:	1 2 4 5 6
¥	REPAIR WIRING TO ANCE LIGHT	
CLETIC	RÉPLACE O-RING	IN AIR SIDE
NAME:	Maa H	
IGNATURE:	Ma	



DATE 14-7-25 S FLEET NO 72-25 K


TART	TIME	_ FINISH TIME	
(M'S_	082074	HRS	

JOB NO REGO 315 QZH

Service Items - Mechanic/Fitters to complete Initial = OK, X Repair, NA = Not Applicable	A Service	B Service	C Service
Local Trailers 40000km/365 days	7 DAYS	14 DAYS	40000KM
Linehaul Trailers 15000km 10 days 150000km/365days		15000KM	150000KM
1 Check faults noted on daily prestart and repair as necessary		MH	
2 Check fleet numbers are serviceable		MH	
3 Record Hub meter reading		MH	
4 Lubricate Container Pins		MA	
5 Check operation & condition of all lights/reflectors		MH	
6 Apply Air Check for leaks from boosters, valves & air lines		MH	
7 Adjust brakes , visually inspect components		MH	
8 Check air cells for air leaks and deterioration		MH	
9 Drain all air tanks, report if any oil is present in system		MH	
10 Grease trailer incl. brake cams, slack adjusters, landing legs, ring feeder & other grease points		MH	
11 Check hoist mounting bolts, hoses, coupling		mlt	
12 Check number plate & rego label security. Check that rego label is current		mit	
13 Check condition of front air connections, light plug base & electrical lead		mH	
14 Check security of spare wheels & spare wheel carrier/gate rack		mH	
15 Check condition & security of all mudflaps, mudguards, brackets & spray suppression		MH	
16 Check landing legs for damage & security		MH	
17 Check sub frame & cross members for cracks, damage & security		MH	
18 Check condition, position & security of all air hoses		mH	

19	Check brake linings & drums for wear. Check hub seals for leakage					
20	20 Check security of height control valves and links & adjust if required					
21	Check skid plate/king pin security & condition, check draw bar/bushes and towing eye NOTE: If draw bar eye bolt is found loose, it is not to be retorqued and must be removed and replaced and draw bar eye boss to be checked for tolerances					
22	Check wheel nut tensions, check valve stem alignment					
23	Check all tyre pressures and refit valve caps (including spare) report abnormal wear					
24	Check condition & security of rear marker signs					
25	Check ring feeder condition, operation & security					
26	Lubricate twist locks & check operation & security of pedestals, straighten handles as required					
27	Check condition & security of rope rails, gate pockets, winch rails & straps					
28	Check condition & security of floor and associated components					
29	Raise trailer by rear frame & individually inspect rocker/radius bushes, wear pads, air cells for wear					
30	Check security & bolt tension od airbag suspension hangers & radius rod arms					
31	Raise wheel assembly & check bearings for free play by "feel" only & adjust as required					
32	Indicate on below drawing wheel bearings that are replaced, checked and/or adjusted					

MH	
mH	
MH	
MH	
MH	
MIH	
NIA	
NIA	
NA	
MH	

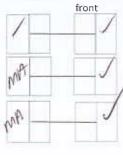

33	Check brake linings & drums for wear whilst hubs are removed
34	Check hubs for cracks and tapered shoulders for wear
35	Remove bearings and clean/inspect for reuse
36	Replace mudflaps & decals as required
37	Remove s/cam slack adjuster pins and rotate/lubricate
38	Pack bearings with fresh grease & reassemble

rear



Work/Repairs carried out				
List any defect found				
0 11 /0 11	f _a .	1	Tiso Tiso	
Part No/Consumables	Qty	Part No/Consumables	Qty	
	34:			
Tradesperson Name	H TIEM	Signature	ma	
		Date	14-7-25	

Certificate of inspection Trailers & Dollies over 750kg



Ph 0417 600 249



	14	ABN 97 108 243 71		
Owner and vehicle details		Details of other items rejected		
Vehicle Owner's name and address		DOOR CRACKS		
WWAIS		WHATEL NUT I	NOICATOR	
10 KOLONGO CRES			701710(1003	
MT ISA QUD Posto	code 4825			
Plate No. (if applicable) State Unit No.				
N3000/	_			
315 QZH QUD TL2	<u> </u>			
VIN/Chassis no.				
6,T,9,T,2,5,N,T,0,D,2,N,C	LM093			
Make Model				
TRISTAL TRI		Ist Inspection		
Body Shape Badge (eg. Cargo)	Result X		
SFMI TRAICER				
Gizet toticis			ction time	
Compliance type Give details		2518 125	8:00 pm	
Compliance Import Other		Odometer reading		
Plate Plate				
Date on Plate Vehicle Colour		Signature of Examiner	Examiner's no.	
2013 YELLOW/BLACK		Olgradure of Experiment	18904	
		0-1-9		
Left or Right hand drive?			than 14 days from date of 1st inspection)	
Tare GVM 47000 GCM	271.1	Result		
		Inspection date Inspec	ction time	
Results of inspection Please indicate Pass Fail X		The state of the s		
Please indicate Pass / Fail / Ist	Final	271 8 125	8:00 am	
inspection	inspection	Odometer reading		
Identification		_		
Modifications Lights & Electrical Components		Signature of Examiner	Examiner's no.	
Lights & Electrical Components Body & Chassis Suspension Wheels & Tyres			18904	
Suspension		J- 14	18704	
Wheels & Tyres		Inspection Station details		
Brakes		Name and location		
Tow Coupling		SUPPRIOR MACHINA	er Maurenauck	
1st Axle SB	SB	27 COMFREAL	Postcode 9825	
HB 2nd Axle SB	HB			
HB /	SB HB	Approved Inspection Station Number		
3rd Axle SB	SB	10588		
нв /	НВ	Certification		
4th Axle SB	SB	Approved examiner - I have inspected	the vehicle indicated on this form and tits safe use of the road and it meets the	
НВ	HB	requirements of the Transport Operation	ons (Road Use Management) Act 1995.	
		Inspected by - Signature of Examiner	Date	
			22 0 06	
		5-14	27-8-25	
		Name of Examiner (please print)	Examiner's no.	

SM

PYE