

<u>Date</u>	<u>WO</u>	<u>Meter #1</u>	<u>Type</u>
07/08/2010	236	7,942	
09/02/2010	573	7,942	
11/15/2010	574	7,956	
11/10/2010	1108	7,956	
11/15/2010	1128	7,956	
11/15/2010	1129	7,956	
12/17/2010	1394	7,962	
01/24/2011	1692	7,975	Repair
01/26/2011	1709	7,975	
01/28/2011	1711	7,975	
02/01/2011	1756	7,975	Repair
02/01/2011	1766	7,975	Repair
02/15/2011	1871	7,996	
06/03/2011	2842	7,996	Re-active repair
06/20/2011	2992	7,996	Preventive Maintenance
11/16/2011	4312	7,996	Preventive Maintenance
01/11/2012	4789	8,009	Preventive Maintenance
01/19/2012	4858	8,009	
01/19/2012	4865	8,009	Re-active repair
01/19/2012	4869	8,009	Preventive Maintenance
08/17/2012	6593	8,012	GPS - Installation
08/16/2012	6594	8,012	Preventive Maintenance
09/05/2012	6733	8,026	Preventive Maintenance
09/12/2012	6793	8,026	Re-active repair

11/30/2012	7346	8,031	Preventive Maintenance
01/11/2013	7688	8,039	Preventive Maintenance
01/16/2013	7726	8,041	Re-active repair
01/17/2013	7735	8,041	Re-active repair
05/07/2013	8664	8,041	Re-active repair
05/14/2013	8729	8,041	Preventive Maintenance
07/17/2013	9030	8,056	Re-active repair
08/22/2013	9553	8,056	Preventive Maintenance
09/26/2013	9796	8,056	GPS - Installation
09/26/2013	9798	8,056	PM - OAL Service
11/18/2013	10216	8,056	Preventive Maintenance
04/07/2014	11388	8,056	Preventive Maintenance
07/09/2014	12085	8,078	Re-active repair
07/16/2014	12127	8,078	Re-active repair
07/16/2014	12140	8,078	Re-active repair
07/16/2014	12152	8,078	Re-active repair
12/04/2014	13292	8,099	Re-active repair
01/07/2015	13497	8,099	Preventive Maintenance
01/08/2015	13532	8,111	Re-active repair
01/08/2015	13533	8,111	Re-active repair
01/10/2015	13566	8,118	Re-active repair
01/13/2015	13577	8,118	Re-active repair
01/20/2015	13614	8,118	Re-active repair
01/22/2015	13623	8,133	
01/29/2015	13694	8,148	Re-active repair
04/10/2015	14230	8,150	Preventive Maintenance
09/25/2015	15396	8,150	Re-active repair
01/04/2016	16057	8,150	Preventive Maintenance
01/07/2016	16085	8,150	Re-active repair
01/08/2016	16086	8,150	Preventive Maintenance
01/11/2016	16060	8,174	Re-active repair

02/17/2016	16320	8,177	Preventive Maintenance
03/24/2016	16671	8,177	Re-active repair

04/20/2016	16811	8,179	Re-active repair
04/27/2016	16871	8,180	Preventive Maintenance

11/28/2016	18417	8,182	Preventive Maintenance
12/05/2016	18425	8,182	Re-active repair

01/04/2017	18674	8,182	
01/06/2017	18685	8,182	Preventive Maintenance
01/09/2017	18692	8,182	Preventive Maintenance
01/12/2017	18734	8,195	Re-active repair
01/25/2017	18740	8,200	Re-active repair
02/24/2017	19071	8,200	Preventive Maintenance
08/29/2017	20599	8,200	Re-active repair

09/13/2017	20700	8,203	
01/03/2018	21488	8,203	
01/03/2018	21489	8,203	
01/05/2018	21496	8,203	Modifications
01/05/2018	21528	8,203	Re-active repair
01/09/2018	21553	8,203	Preventive Maintenance
01/31/2018	21739	8,229	Re-active repair
03/13/2018	22044	8,229	Re-active repair
03/02/2018	22081	8,237	Re-active repair
06/04/2018	22793	8,244	Re-active repair

06/01/2018	22795	8,244	
11/15/2018	23646	8,244	
11/15/2018	23992	8,246	
11/16/2018	23993	8,246	

11/16/2018	23995	8,246	
11/16/2018	24004	8,246	

11/17/2018	24005	8,246	
11/19/2018	24023	8,246	Re-active repair
05/08/2019	25436	8,246	
07/16/2019	26026	8,247	
07/25/2019	25575	8,248	
11/15/2019	26868	8,248	

01/13/2020	27282	8,248	
01/23/2020	27296	8,248	Modifications
01/24/2020	27300	8,248	
01/29/2020	27414	8,248	
05/07/2020	28090	8,254	
05/30/2020	28268	8,254	
06/05/2020	28319	8,254	
06/16/2020	28334	8,254	
07/09/2020	28581	8,254	
04/28/2021	30669	8,272	
03/10/2021	30269	8,272	

03/10/2021	30270	8,272	
12/13/2021	30360	8,272	
12/24/2021	32454	8,272	
01/10/2022	32563	8,288	
01/13/2022	32601	8,288	
01/15/2022	32720	8,288	
09/08/2022	34406	8,291	
09/08/2022	34420	8,299	
09/08/2022	34421	8,299	
10/03/2022	34605	8,299	
09/29/2022	34606	8,299	
09/29/2022	34607	8,299	

09/08/2022 34405 8,299

01/20/2023 35554 8,309

02/07/2023 35708 8,309 Preventive Maintenance

12/23/2023 37800 8,309

02/06/2023 35630 8,309

03/27/2023 35755 8,309

06/19/2023 36762 8,309

01/24/2024 38026 8,309

06/19/2024 39184 8,309

09/09/2024 39981 8,317

09/13/2024 40042 8,317

03/03/2025 41638 8,317

03/04/2025 41786 8,317

06/19/2024 39186 8,317

01/14/2025 41191 8,317

04/14/2025 42412 8,317

05/12/2025 42864 8,317

08/26/2025 43804 8,317

08/26/2025 43805 8,317

Maintenance Performed

clutch hydraulic system

no start

200 Hr Service, Change - Engine Oil and Filter, Check - Air Filter Restriction & Record Reading, Check - Antifreeze level and strength, Check - Battery condition and fluid level, Check - cooling system hoses etc, Check - drive belts, Check - Emerg...

engine oil filler repair

Plow cylinder -

Beacon

Transmission

wing pulley check and repair

Tire

cyl pin

reinstall moldboard.

Hyd leak

lights

Snow Wing - Remove and store

Replace - First Aid Kit with new from Stores

Snow Wing - Install and check operation, 200 Hr Service, Change - Engine Oil and Filter, Check - Air Filter Restriction & Record Reading, Check - Antifreeze level and strength, Check - Battery condition and fluid level, Check - cooling system hose...

Charge Battery

charge system check and repair

no start, block heater

block heater check and repair

GPS Installation

Replace - First Aid Kit with new from Stores

Snow Wing - Remove and store, blade controls

no start

Snow Wing - Install and check operation, hydraulic hose - replace

Change - Fuel Filter

Hyd leak

Flat Repair - Tire

hydraulic leak

Snow Wing - Remove and store

reinstall blade

Replace - First Aid Kit with new from Stores

GPS

200 Hr Service, Change - Engine Oil and Filter, Check - Air Filter Restriction & Record Reading, Check - Antifreeze level and strength, Check - Battery condition and fluid level, Check - cooling system hoses etc, Check - drive belts, Check - Emerg...

Snow Wing - Install and check operation

Snow Wing - Remove and store

Hyd leak

mirror, Cutting edge - adjust, GPS

AWD hydraulic hose

service call, Flat Repair - Tire

Tire - Flat Repair

Snow Wing - Install and check operation

wing lights, front flashing light

Oil pressure light

Oil pressure light

Weld on wear bar

lights

grader wing top lift pulley assy

Hyd leak

Snow Wing - Remove and store

Unit will not start

Snow Wing - Install and check operation

Chains

weld rd bar on mulboard

left front wheel motor

Check - Fire Extinguisher

Removw Wing and mount, Park brake lever does not stay applied, Snow Wing - Remove and store

Re- place LF wheel motor assm.

200 Hr Service, Change - Engine Oil and Filter, Check - Air Filter Restriction & Record Reading, Check - Antifreeze level and strength, Check - Battery condition and fluid level, Check - cooling system hoses etc, Check - drive belts, Check - Emerg...

Snow Wing - Install and check operation

Door lock

LF wheel drive motor hyd hose blown

Change - Fuel Filter

curb stop on mulboard

no start

Change - Hydraulic Oil Filter(s), Change - Transmission Oil & Filter, Transmission

Check - Fire Extinguisher

RH front drive motor upper hyd hose leaking

Snow Wing - Remove and store

replace wing cutting edge

Wing lift cable Jammed

curb stop guards

Transmission

plow curb guard

corner bits

clutch pedal and mullboard corner bits

lights

Wing heel guide

Front wheel drive HYD hose leaking bad

LF tandem flat tire

Change - Fuel Filter

200 Hr Service, Change - Engine Oil and Filter, Check - Air Filter Restriction & Record Reading,

Check - Antifreeze level and strength, Check - Battery condition and fluid level, Check -

Emergency Steering and Brake System, Check - Exhaust System,...

Fuel theft damage

Wing flasher lights

swap front cutting edge over
locking hyd tank cap
Snow Wing - Remove and store
Install new GPS
LF steer hyd drive motor leaking, leaking front drive motor, replace AWD hyd filter
200 Hr Service, Change - Engine Oil and Filter, Check - Air Filter Restriction & Record Reading,
Check - Antifreeze level and strength, Check - Battery condition and fluid level, Check -
Emergency Steering and Brake System, Check - Exhaust System,...
install tire chains
under body plow curb guards
block heater replace
Change - Hydraulic Oil Filter(s), Change - Transmission Oil & Filter
Snow Wing - Remove and store
Check over
Control arm fell off
Steering repair, RH tie rod pulled out
Return Parts
Replace - First Aid Kit with new from Stores, Snow Wing - Remove and store
200 Hr Service, Change - Engine Oil and Filter, Check - Air Filter Restriction & Record Reading,
Check - Antifreeze level and strength, Check - Battery condition and fluid level, Check -
Emergency Steering and Brake System, Check - Exhaust System,...
Change - Fuel Filter
left front dive motor leaking hyd oil
Snow Wing - Install and check operation
blade curb stops/exhaust repair
Check - Fire Extinguisher
Engine oil filler tube, HYD leak at valve body
Leaking hydraulic cylinders
Rear flood light
Mast cable clamps - replace
Tire chains
Snow Wing - Remove and store
Snow Wing - Install and check operation

Replace - First Aid Kit with new from Stores, 200 Hr Service, Steam clean engine, Road Test vehicle & return to user, Lube - driveline U joints, Lube - door and hood hinges, Lube - all hinge pins and bushings, Clean - interior of cab, remove debris...

Check - Fire Extinguisher, Snow Wing - Install and check operation

Hyd hoses - replace

Jump start / check over

RR tire flat

Hyd cylinders leaking

Snow Wing - Remove and store, Change - Transmission Oil & Filter, Change - Hydraulic Oil Filter(s), Change - Fuel Filter

Snow Wing - Install and check operation

Snow Wing - Remove and store

Boost and charge battery

Remove snow chains/cutting edge replace

Replace - First Aid Kit with new from Stores

Check - Fire Extinguisher

Replace - First Aid Kit with new from Stores, Check - Fire Extinguisher, 200 Hr Service, Steam clean engine, Road Test vehicle & return to user, Lube - driveline U joints, Lube - door and hood hinges, Lube - all hinge pins and bushings, Clean - in...

Snow Wing - Install and check operation

Snow Wing - Remove and store

GO9 GPS upgrade

Out of service - Prep

200 Hr Service, Change - Engine Oil and Filter, Check - Air Filter Restriction & Record Reading, Check - Antifreeze level and strength, Check - Battery condition and fluid level, Check - Emergency Steering and Brake System, Check - Exhaust System,...