

Dump truck/Moxy

SERVICING SCHEDULE

Date: 4/06/2026
LR No: LR500
Rego: N/A

VIN: WTB00334
KMs/Hours: 7722 HR
Service Type: MINOR

INSPECTION SCHEDULE

EVERY SERVICE

The following inspections require having the engine running or machine moving. Use of an operator and spotter may be required.

IN CAB

No.	ACTION	CHECKS	S	US	N/A	Initial
1	Inspect	Door latches & seals, smoke bomb cab (if necessary)	<i>S</i>			
2	Inspect	Seat belt for damage, fraying & anchor bolt security	<i>S</i>			
3	Check	Seat for correct operation, excessive movement, cover & cushion condition	<i>S</i>			
4	Check	Windscreen & other glass in the cab for chips or cracks	<i>S</i>			
5	Check	Operation of window winders & door handles	<i>S</i>			
6	Check	Pedal rubbers are on & in good condition	<i>S</i>			
7	Check	For breakdown triangles, condition & complete set	<i>S</i>			
8	Check	For first aid kit, in date & complete	<i>S</i>			
9	Check	Operation of ignition & security of key, instrument cluster, warning alarms, warning indicator lights & horn	<i>S</i>			
10	Check	Park lights, headlights, spot lights, indicators, brake lights, internal cab light, reverse camera & rotating beacon	<i>S</i>			
11	Check	Operation of AM / FM radio & UHF radio	<i>S</i>			
12	Check	Operation of horn	<i>S</i>			
13	Check	Operation of E-Stops	<i>S</i>			
14	Check	Wipers & Washers	<i>S</i>			
15	Check	Fire extinguisher for safety ties, gauge in green, rotate a couple of times & tap bottom to release sediment	<i>S</i>			

RUNNING CHECKS

No.	ACTION	CHECKS	S	US	N/A	Initial
16	Connect	For excessive exhaust smoke or abnormal noises / vibrations	<i>S</i>			
17	Check	Operation of steering wheel (lock to lock), security of the column adjustor	<i>S</i>			
18	Check	Secondary steering system for operation	<i>S</i>			
19	Test	Operation of automatic transmission kick down, lock-up & neutral inhibitor switch	<i>S</i>			
20	Inspect	Service brake operation / adjustment	<i>S</i>			
21	Check	Park brake operation (test on a 10° slope)	<i>S</i>			
22	Check	For brake drag	<i>S</i>			
23	Check	Steering cylinder pins & bushes for excessive movement	<i>S</i>			
24	Inspect	Steering cylinders for damage to the chrome & for leaks	<i>S</i>			
25	Check	Brake accumulator test (apply & release service brake pedal and release the service brake pedal for a minimum of three applications, until alert indicator) if indicator doesn't illuminate refer to OEM Manual	<i>S</i>			
26	Check	Operation of ride control, bucket kick out & bucket auto level	<i>S</i>			

27	Check	Bucket pivot pins, Dog bone pins,& bushes for excessive movement & grease penetration	ℳ			
28	Check	Bucket tilt, Loader lift frame cylinders pins & bushes for excessive move movement & grease penetration	ℳ			
29	Check	Articulation Pins & Bushes for excessive movement & grease penetration	ℳ			
30	Check	Cutting edges, edge cutters, goanna's & heel plates for excessive wear & security	ℳ			
31	Check	Operation of Air Conditioner	ℳ			
32	Check	Using a scan tool check for faults	ℳ			
33	Check	DPF / DET Status & conduct manual burn if required	ℳ			

FRAME & BODY

Park on level ground, Isolate generator, Fit body prop, Relieve all pressures, Start from front right hand side and work clockwise around generator checking each item below

No.	ACTION	CHECKS	S	US	N/A	Initial
34	Check	Cab mounts, operation of cab tilt & locking mechanism	ℳ			
35	Inspect	ROP's for security & integrity	ℳ			
36	Check	Bonnet mounts, operation of bonnet tilt struts / locking mechanism	ℳ			
37	Check	For external body damage / security of bonnet to main body, Check hinged doors / panels / sliding doors for correct operation & locking	ℳ			
38	Check	Rear vision mirrors & brackets for condition & operation	ℳ			
39	Inspect	Steering column mounting & universal joints for movement, SMU for leaks & grease penetration of Uni's	ℳ			
40	Check	Steps & handrails for security	ℳ			
41	Check	Mudguards, mudflaps for condition & security	ℳ			
42	Check	For metal fatigue in chassis, cross members & tow hitch	ℳ			
43	Inspect	All hydraulic hoses for signs of rubbing, leaks & deterioration	ℳ			
44	Check / Clean	Battery box, mountings, signs of corrosion, terminal security & condition, cables & electrolyte levels	ℳ			
45	Inspect	All air lines, valves / fittings for air leaks & chaffing	ℳ			
46	Check	Brake master cylinders, slave cylinders for leaks & fluid level	ℳ			
47	Inspect	All grease lines & fittings for damage / security & grease penetration	ℳ			
48	Inspect	Electrical harness / junction boxes for chaffing & dust sealing	ℳ			
49	Inspect	Tow hitch / pin	ℳ			
50	Check	Hazard warning / component location Decals	ℳ			

UNDER BONNET / ENGINE BAY

No.	ACTION	CHECKS	S	US	N/A	Initial
51	Inspect	Exhaust manifolds / covers, bolts, turbo, piping for any leaks & security	ℳ			
52	Inspect / Tighten	Air induction boxes / hoses / piping / fittings for damage, clamps for tension & presence of dusting	ℳ			
53	Inspect	Fuel pump / pipes / hoses / clamps, for leakage & movement	ℳ			
54	Inspect	Engine for oil leaks & damaged hoses	ℳ			
55	Check	Engine mounts for wear & security	ℳ			
56	Check	Water pump "tell tail" for leakage or blockage & check bearing for movement	ℳ			
57	Check	Alternator pulley, mountings, bearings & idler pulleys	ℳ			
58	Inspect	Air Conditioner compressor pulley, mountings, hose connections for leakage & movement	ℳ			
59	Inspect	Fan, alternator, air conditioner belts for cracking / unusual wear	ℳ			
60	Inspect	Fan blades for cracks, wear, damage & security	ℳ			
61	Check	Radiator mountings, coolant leakage & air flow through radiator (Clean when required)	ℳ			
62	Inspect	Coolant, heater hoses, clamps for condition, leaks & tension	ℳ			
63	Inspect	Electrical harnesses / connections for damage & security	ℳ			

64	Inspect	Engine bay is free of combustible materials i.e. leaves, sticks & rags for prevention of fire hazards										S			
65	Clean	Vibration dampener, idler, A/C & alternator pulleys for dust build up										S			
POWER TRAIN & AXLES															
No.	ACTION	CHECKS										S	US	N/A	Initial
66	Inspect	Transmission & hydraulic pump pipes, hoses, clamps for tension & oil leaks										S			
67	Inspect	Transmission & hydraulic pump mountings & security										S			
68	Inspect	Universal joints / slip joints / centre bearings for movement & rubber deterioration, check for grease penetration										S			
69	Inspect	Differentials for oil leaks, excessive movement in input & output shafts										S			
70	Check	Trunions for excessive movement & grease penetration										S			
71	Inspect	Wheel rims for damage, cracks, missing or loose wheel nuts										S			
72	Inspect	Tyres for damage, tread depth & pressure										S			
	Depth	P1:		mm	P2:		mm	P3:		mm	P4:		mm		
	Damage	P1:			P2:			P3:			P4:		Adjusted To		
	Pressure	P1:		psi	P2:		psi	P3:		psi	P4:		psi		
73	Inspect	All grease lines for damage / security & grease penetration													
74	Inspect	Electrical harnesses / junction boxes for chaffing & dust sealing													
2000 / 2500 HOUR SERVICE															
Check / Change or Adjust															
No.	ACTION	CHECKS										S	US	N/A	Initial
75		Cylinder 1	Cylinder 2	Cylinder 3	Cylinder 4	Cylinder 5	Cylinder 6								
	Intake														
	Exhaust														
76	Check	Jack up & check wheel bearings, adjust or replace if necessary													
77	Measure	Service Brake Wear Indicator													
		P1:		mm	P2:		mm	P3:		mm	P4:				
78	Measure	Brake drums or Rotors													
		P1:		mm	P2:		mm	P3:		mm	P4:				
79	Measure	Brake linings or pads													
		P1:		mm	P2:		mm	P3:		mm	P4:				
80	Inspect	For worn, damaged or broken brake actuators / leaking wheel cylinders, broken springs or retaining clips													
81	Check	Glow Plugs for power & conduct a continuity test on each plug													
82	Check	Using a Coolant Test Strip & compare to chart, change if necessary													
LUBRICATION SCHEDULE															
EVERY SERVICE															
1	Lubricate	All grease points:										Y			
250 HOUR SERVICE															
2	SOS	Engine Oil:										Y			
500 Hour Service															
3	SOS	Hydraulic Oil:					Y					Transmission:		Y	
		Front Differential:					Y					Rear Differential:		Y	
		P1 Final Drive:					Y					P2 Final Drive:		Y	
3	SOS	P3 Final Drive:										P4 Final Drive:			
4	Change	Engine Oil:													
5	Change Filters	Engine Oil (Cut/Inspect):					Y					Primary Air Filter:		Y	
		Fuel / Water Separator:					Y					Secondary Fuel:		Y	
6	Inspect / Change	Secondary Air Filters:					Y					Signs of Dusting Y / N:		N/A	
7	Inspect / Clean	Air Cleaner Dust Bowl:					Y					Fuel Tank Strainer:		Y	
8	Inspect / Clean / Change	Engine Breather:					Y								

[illegible]