



Peter Kittle Toyota

SERVICE TAX INVOICE

LR117

Peter Kittle Toyota
1459 Main North Road,
Para Hills West, SA 5096

T 08 8256 1212

peterkittletoyota.com.au

BSB: 035 000 ACC: 710 299
ABN: 91 620 982 694 ACN: 620 982 694
MVD: 284 343 ARC: AU44997

EMAIL ADDRESS
jarod.hosking@lincgroup.com.au

REPAIR ORDER/TAX INVOICE No JC34260839	PAGE: 1
C2 Alt. Cust 1 (Account)	

CUSTOMER: LINCT GROUP PTY LTD PO Box 444 Pakenham VIC 3810		DATE: 05/10/2023	TIME IN: 8:45 AM	TIME OUT: 3:30 PM	KILOMETERS: 61522	ADVISER: CM
		VEHICLE: 2021 ISUZU D-MAX SX (4x2) 6 SP AUTO S			MONTH/YEAR	AIR:
		REG. No: S023CSF	STOCK No:	SELLING DEALER:		
CUSTOMER No: 472236	VIN: MPATFR40JMT002027		ENGINE No: MPATFR40JMT002027			
CONTACT NAME: Jarod Hosking		COLOUR/TRIM /			ORDER No: 7777	
CONTACT NUMBERS: M:0456729189		WAR. EXP:	WAR. KM:	EXT.WAR.EXP:	EXT.WAR.KM:	FIRST REG:

	PRICE	QTY/HRS	AMOUNT
JOB DETAILS			
JOB 1 60,000KS LOG BOOK SERVICE			299.86
Replaced engine oil & oil filter. Cabin Filter Sump plug washer rear diff oil replace Inspected drive b elt. Checked all fluid levels & topped up as required. Inspected brake pads & discs. Checked lights, wiper/washers, horn & electrical systems. Checked condition & pressures of all tyres including spare. Inspected drive shafts including CV boots. Tightened drive shaft bolts. Road tested vehicle & report any defects.			
FRONT BRAKES 7MM REAR BRAKES 4MM - drums			
FRONT TYRES 7MM REAR TYRES 7MM Spare is new Rotated tyres Adjusted headlights down			
PRT 0888800001C	ORD P/N 0888800001EP	1	.90
PRT 19334606	OIL FILTER	1	31.23
PRT 19282590	CABIN FILTER ACC164	1	30.95
CON 5W 40 C3 ENGINE OIL			111.65
CON 80W 90 Gear Oil			84.50
MIS Workshop Sundries			9.09
JOB 1 SUBTOTAL			568.18

9999

30982
ENTERED
Date 10/10 By CT

RECOMMENDATIONS

***** CONTINUED *****

CASH ☐ CREDIT CARD ☐ FLEETLEASE ☐ REF.NO. _____

EFTPOS (DETAILS) _____ RECEIVED BY _____

Payment can be made electronically using the following bank account details:

Bank: Westpac Account Name: PKMC Adelaide P/L T/As Peter Kittle Toyota

BSB: 035-000 Account No: 710299

Please quote your account/invoice number as reference. Remittance advices to debtors@peterkittle.com.au



Peter Kittle Toyota

SERVICE TAX INVOICE

Peter Kittle Toyota
1459 Main North Road,
Para Hills West, SA 5096

T 08 8256 1212

peterkittletoyota.com.au

EMAIL ADDRESS

jarod.hosking@linctgroup.com.au

BSB: 035 000 ACC: 710 299
ABN: 91 620 982 694 ACN: 620 982 694
MVD: 284 343 ARC: AU44997

REPAIR ORDER/TAX INVOICE No
JC34260839

PAGE:
2

C2 Alt. Cust 1 (Account)

CUSTOMER: LINCT GROUP PTY LTD PO Box 444 Pakenham VIC 3810		DATE: 05/10/2023	TIME IN: 8:45 AM	TIME OUT: 3:30 PM	KILOMETERS: 61522	ADVISER: CM
		VEHICLE: 2021 ISUZU D-MAX SX (4x2) 6 SP AUTO S			MONTH/YEAR	AIR:
		REG. No: S023CSF	STOCK No:	SELLING DEALER:		
CUSTOMER No: 472236		VIN: MPATFR40JMT002027		ENGINE No: MPATFR40JMT002027		
CONTACT NAME: Jarod Hosking		COLOUR/TRIM /			ORDER No: 7777	
CONTACT NUMBERS: M:0456729189		WAR. EXP:	WAR. KM:	EXT.WAR.EXP:	EXT.WAR.KM:	FIRST REG:

JOB DETAILS

PRICE

QTY/HRS

AMOUNT

ENTIRE CHASIS COVERED IN DIRT

**** Next service due: 04/10/2024 or odometer reading: 75000 whichever comes first.

LABOUR	\$299.86
CONSUMABLES	\$196.15
PARTS	\$63.08
MISCELLANEOUS	\$9.09
SUBTOTAL	\$568.18
GST	\$56.82
TOTAL INCLUDES GST	\$625.00

PRINTED 05/10/23 12:22:10

CASH ☐ CREDIT CARD ☐ FLEETLEASE ☐ REF.NO. _____

EFTPOS (DETAILS) _____ RECEIVED BY _____

Payment can be made electronically using the following bank account details:

Bank: Westpac Account Name: PKMC Adelaide P/L T/As Peter Kittle Toyota

BSB: 035-000 Account No: 710299

Please quote your account/invoice number as reference. Remittance advices to debtors@peterkittle.com.au

Light Vehicle Servicing

SERVICING SCHEDULE

Date : 5/19/2025
LR No: LR117
Rego: S023CSF

VIN: MPATFR40JMT002027
KMs/Hours: 85153
Service Type: 10000

INSPECTION SCHEDULE

The following inspections require having the engine running or machine moving. Use of an operator and spotter may be required.

IN CAB

No.	ACTION	CHECKS	S	US	N/A	Initial
1	Inspect	Door latches & seals	X			AI
2	Check	Operation of window winders & door handles	X			AI
3	Inspect	Seat belt for damage, fraying & anchor bolt security	X			AI
4	Check	Seat for correct operation, excessive movement, cover & cushion condition	X			AI
5	Check	Operation of ignition & security of key, instrument cluster, warning alarms, warning indicator lights & horn	X			AI
6	Check	Windscreen & other glass in the cab for chips or cracks	X			AI
7	Check	Wipers & Washers	X			AI
8	Check	Park lights, headlights, spot lights, indicators, brake lights, internal cab light, reverse camera & rotating beacon	X			AI
9	Check	Operation of AM / FM radio & UHF radio	X			AI
10	Check	Rear view mirrors & brackets for condition & operation	X			AI
11	Check	Operation of steering wheel (lock to lock), security of the column adjustor	X			AI
12	Check	Operation of Air conditioner and heater	X			AI
13	Check	Clutch pedal free play operation & adjustment	X			AI
14	Check	Pedal rubbers are on & in good condition	X			AI
15	Check	For a wheel brace & jack	X			AI
16	Check	For a first aid kit, in date & complete	X			AI
17	Check	Operation of E-Stops			X	AI
18	Check	Fire extinguisher for safety ties, gauge in green, rotate a couple of times & tap bottom to release sediment	X			AI

RUNNING CHECKS

No.	ACTION	CHECKS	S	US	N/A	Initial
19	Check	For excessive exhaust smoke or abnormal noises / vibrations	X			AI
20	Test	Operation of automatic transmission kick down, lock-up & neutral inhibitor switch	X			AI
21	Test	Operation of gears	X			AI
22	Inspect	Service brake operation / adjustment	X			AI
23	Test	Park brake operation (test on a 10° slope)	X			AI
24	Test	For brake drag & Park brake drag	X			AI
25	Test	Cruise Control	X			AI
26	Check	The general driving characteristics of the vehicle	X			AI
27	Check	Using a scan tool check for fault codes			X	AI
28	Check	DPF Status & conduct a manual burn if required			X	AI

FRAME & BODY						
<i>Park on level ground, Isolate generator, Fit body prop, Relieve all pressures, Start from front right hand side and work clockwise around generator checking each item below</i>						
No.	ACTION	CHECKS	S	US	N/A	Initial
29	Check	Cab mounts, bonnet release cable, operation of bonnet tilt struts / Locking mechanism	X			AI
30	Check	For external body damage	X			AI
31	Check	Mudguards mudflaps for condition & Security	X			AI
32	Check	For metal fatigue in chassis rails, cross members & tow hitch frame and tow ball	X			AI
33	Check	Mudguards, mudflaps for condition & security	X			AI
34	Check	For metal fatigue in chassis rails, cross members & tow hitch frame	X			AI
35	inspect	Electrical harnesses / Junction boxes for chaffing & dust sealing	X			AI
36	inspect	Check battery box, mountings, terminals, cables & electrolyte levels	X			AI
37	Inspect	Exhaust Mufflers, piping ad mounts for leaks and security	X			AI
38	Check	Hazard warning / component location Decals	X			AI
39	Inspect	All grease points	X			AI
No.	ACTION	CHECKS	S	US	N/A	Initial
40	Check /Clean	Check battery isolator, battery box, mountings, teminals, cables and electrolyte levels	x			AI
41	Inspect	Exhaust manifolds / covers, bolts, turbo, piping for any leaks & security	X			AI
42	Inspect / Tighten	Air induction boxes / hoses / piping / fittings for damage & presence of dusting	x			AI
43	Inspect	Fuel pump / pipes / hoses / clamps, for leakage & movement	X			AI
44	Inspect	Engine for oil leaks & damaged hoses	X			AI
45	Check	Engine mounts for wear & security	X			AI
46	Check	Water pump "tell tail" for leakage or blockage	X			AI
47	Check	Alternator pulley, mountings, bearings & idler pulleys	X			AI
48	Check	Air Conditioner compressor pulley, mountings, hose connections for leakage & movement	X			AI
49	Inspect	Fan, alternator, air conditioner belts for condition & tension	X			AI
50	Inspect	Fan blades for cracks, wear, damage & security	X			AI
51	Check	Radiator mountings, coolant leakage & air flow through radiator	X			AI
52	Inspect	Coolant / heater hoses / clamps for condition, leaks & tightness	X			AI
53	Inspect	Power steering box for oil leaks, excessive movement, security of steering column & drag link	X			AI
54	Inspect	Steering column universal joints, slip joint & mountings	X			AI
55	Inspect	Electrical harnesses / connections for damage & security	X			AI
56	Inspect	Engine bay is free of combustible materials i.e. leaves, sticks & rags for prevention of fire hazards	X			AI
POWER TRAIN & AXLES						
<i>Jack up all axles to check wheel bearings, steering linkages & kingpins</i>						
No.	ACTION	CHECKS	S	US	N/A	Initial
57	Check	Wheel rims for damage, cracks missing or loose wheel nuts	x			AI
58	Check	Front wheel bearings adjust or replace if necessary	X			AI
59	Check	Rear wheel bearings and replace if necessary	X			AI
60	Inspect	Both front and rear drive shafts	X			AI
61	Inspect	All brake linings, pads for thickness, adjustment & adjust if required	X			AI
62	Check	Operation / wear of brake callipers	X			AI
63	Inspect	for movement in both upper and lower ball joints, shock towers security, steering linkages and ball joints	X			AI

64	Inspect	all Shackle pins, bushes, shock absorbers, U bolts, wear plates for wear movements and tension										X			AI				
65	Inspect	Torque rod arms, pins, bushes, mounting bolts for & tension													AI				
66	Check	Gearbox / Transmission for oil leaks, mounts and lubrication pivot points										X			AI				
67	Check	Differential for oil leaks, excessive movement in input and output shafts										X			AI				
68	Inspect	Tyres for damage, tread depth & pressure																	
	Depth / Damage	P2:	70	mm	P4:	65	mm	P8:		mm	P12:		mm	P16:		mm			
								P7:		mm	P11:		mm	P15:		mm			
								P6:		mm	P10:		mm	P14:		mm			
69	Pressure	P1:	70	mm	P3:	65	mm	P5:		mm	P9:		mm	P13:		mm			
		P2:	40	psi	P4:	45	psi	P8:		psi	P12:		psi	P16:		psi			
								P7:		psi	P11:		psi	P15:		psi			
								P6:		psi	P10:		psi	P14:		psi			
		P1:	40	psi	P3:	45	psi	P5:		psi	P9:		psi	P13:		psi			
70	Rotate	Tyres including spare												X					
30,000km Service																			
Check / Change / Adjust																			
Brake drums and Rotors																			
71	Measure	RHSF:			mm	RHSR			mm										
		LHFS:			mm	RHSR			mm										
Brake linings or pads																			
72	Measure	RHSF:			mm	RHSR			mm										
		LHFS:			mm	RHSR			mm										
73	Inspect	For worn, damages or broken brake actuators / leaking wheel cylinders																	
100,000 km Service																			
74	Check	Wheel bearings Check / Change & Re-pack with grease																	
		LHSF:			LHSR:			RHSF:			RHSR:								
75	Check	Glow plus for power & conduct continuity test on each plug																	
76	Check	Using a coolant Test strip & Compare to chart, change if necessary																	
77	Replace	Timing Belt																	
Lubrication Schedule																			
10,000 km Service																			
78	Change	Engine oil						AI	Fuel / Water seperator						AI				
	Change Filters	Engine oil (cut/ Inspect						AI	Transfer case										
	Check / Topup	Gearbox / Transmission :						N/A	Rear diff										
		Front Diff:						AI	Coolant										
		Power Steering:						AI	Windscreen washer fluid										
		Brake / Clutch Fluid:																	
20,000km Service																			
78	Change Filters	High Pressure Fuel filter							Air cleaner										
79	Inspect Air intake	Signs of dusting Y / N							Front Diff										
80	Inspect / Clean	Engine:							Rear Diff										
81	Replace breathers	Gearbox / Transmission																	
30,000 km Service																			
82	Change	Gearbox / Transmission Oil							Transfer Case oil										
		Front Diff Oil							Rear Diff Oil										
		Power steering Oil																	
83	Change Filters	Transmission Filter							Cab Filter										
100,000 km Service																			
84	Check	Coolant:																	
AFTER EVERY SERVICE																			
85	Check	Allfluid levels are correct & the light vehicle is running / operating as per OEM specifications, disconnect trailer																	

DEFECTS / COMENTS & PARTS TO BE ORDERED	
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
10	10
11	11
12	12
13	13
14	14
15	15
16	16
17	17
18	18
19	19
20	20
21	21
22	22
23	23
24	24
25	25
26	26
27	27
28	28
29	29
30	30
31	31
32	32
33	33
34	34
35	35
36	36
37	37
38	38
39	39
40	40
41	41
42	42
43	43
44	44
45	45
46	46
47	47
48	48
49	49
50	50
51	51
52	52
53	53
54	54
55	55
56	56
57	57
58	58
59	59
60	60
61	61
62	62
63	63
64	64
65	65
66	66
67	67
68	68
69	69
70	70
71	71
72	72
73	73
74	74
75	75
76	76
77	77
78	78
79	79
80	80
81	81
82	82
83	83
84	84
85	85
86	86
87	87
88	88
89	89
90	90
91	91
92	92
93	93
94	94
95	95
96	96
97	97
98	98
99	99
100	100

This image shows a blank sheet of primary-ruled paper. It features two solid vertical lines forming left and right margins. Between these margins are ten sets of horizontal lines, each consisting of a solid top line, a dashed middle line, and a solid bottom line, providing a guide for letter height and placement. The entire page is otherwise white and contains no text or other markings.

SERVICE COMPLETION DECLARATION

On signing / initialling this service report you deem that this service has been thoroughly completed. The equipment is in a safe and operational condition at the time of inspection / service.

ISAAC APPRAH

Mechanic / Supervisor Signature

Inspection Completion Date

Name of Mechanic / Supervisor



Peter Kittle Toyota

SERVICE TAX INVOICE

LR117

Peter Kittle Toyota
1459 Main North Road,
Para Hills West, SA 5096

T 08 8256 1212

peterkittletoyota.com.au

BSB: 035 000 ACC: 710 299
ABN: 91 620 982 694 ACN: 620 982 694
MVD: 284 343 ARC: AU44997

EMAIL ADDRESS

jarod.hosking@linctgroup.com.au

REPAIR ORDER/TAX INVOICE No JC34246308	PAGE: 1
C2 Alt. Cust 1	(Account)

CUSTOMER: LINCT GROUP PTY LTD PO Box 444 Pakenham VIC 3810		DATE: 06/03/2023	TIME IN: 7:45 AM	TIME OUT: 12:45 PM	KILOMETERS: 47559	ADVISER: CM
		VEHICLE: 2021 ISUZU D-MAX SX (4x2) 6 SP AUTO S			MONTH/YEAR	AIR:
		REG. No: S023CSF	STOCK No: LR117	SELLING DEALER:		
CUSTOMER No: 472236	VIN: MPATFR40JMT002027	ENGINE No: MPATFR40JMT002027				
CONTACT NAME: Jarod Hosking		COLOUR/TRIM /			ORDER No:	
CONTACT NUMBERS: M:0456729189		WAR. EXP:	WAR. KM:	EXT.WAR.EXP:	EXT.WAR.KM:	FIRST REG:

PRICE QTY/HR\$ AMOUNT

JOB DETAILS

JOB 2 45,000KM LOG BOOK SERVICE

284.54

Replaced engine oil & oil filter.
Inspected drive belt.
Replaced brake fluid
Replace Air filter
Checked all fluid levels & topped up as required.
Inspected brake pads & discs.
Checked lights, wiper/washers, horn & electrical systems.
Checked condition & pressures of all tyres including spare.
Inspected drive shafts including CV boots.
Tightened drive shaft bolts.
Road tested vehicle & report any defects.

FRONT BRAKES 6MM
REAR BRAKES 3MM - drums

FRONT TYRES 3MM
REAR TYRES 3MM
Spare is new
Rotated tyres

SCANNED

PRT	0888800001C	ORD P/N 0888800001EP	1	.90
PRT	19334606	OIL FILTER	1	31.23
PRT	A2040	RYCO AIR FILTER - PANEL	1	64.95
PRT	0882380220	BRAKEFLUID 500ML	1	10.51
CON	5W 40 C3 ENGINE OIL			119.63
MIS	Workshop Sundries			9.85
JOB 2 SUBTOTAL				521.61

JOB DETAILS

JOB 3 adjust headlights too high

NO CHARGE

***** CONTINUED *****

CASH ☐ CREDIT CARD ☐ FLEETLEASE ☐ REF.NO. _____

EFTPOS (DETAILS) _____ RECEIVED BY _____

Payment can be made electronically using the following bank account details:

Bank: Westpac Account Name: PKMC Adelaide P/L T/As Peter Kittle Toyota

BSB: 035-000 Account No: 710299

Please quote your account/invoice number as reference. Remittance advices to debtors@peterkittle.com.au



Peter Kittle Toyota

SERVICE TAX INVOICE

Peter Kittle Toyota
1459 Main North Road,
Para Hills West, SA 5096

T 08 8256 1212

peterkittletoyota.com.au

BSB: 035 000 ACC: 710 299
ABN: 91 620 982 694 ACN: 620 982 694
MVD: 284 343 ARC: AU44997

EMAIL ADDRESS
jarod.hosking@linctgroup.com.au

REPAIR ORDER/TAX INVOICE No JC34246308	PAGE: 2
C2 Alt. Cust 1 (Account)	

CUSTOMER: LINCT GROUP PTY LTD PO Box 444 Pakenham VIC 3810		DATE: 06/03/2023	TIME IN: 7:45 AM	TIME OUT: 12:45 PM	KILOMETERS: 47559	ADVISER: CM
		VEHICLE: 2021 ISUZU D-MAX SX (4x2) 6 SP AUTO S			MONTH/YEAR	AIR:
		REG. No: S023CSF	STOCK No:	SELLING DEALER:		
CUSTOMER No: 472236	VIN: MPATFR40JMT002027		ENGINE No: MPATFR40JMT002027			
CONTACT NAME: Jarod Hosking		COLOUR/TRIM /			ORDER No:	
CONTACT NUMBERS: M:0456729189		WAR. EXP:	WAR. KM:	EXT.WAR.EXP:	EXT.WAR.KM:	FIRST REG:

JOB DETAILS

PRICE QTY/HRS AMOUNT

Adjusted headlights down

JOB 3 SUBTOTAL

NO CHARGE

RECOMMENDATIONS

ENTIRE CHASSIS COVERED IN DIRT

**** Next service due: 06/03/2024 or odometer reading: 60000 whichever comes first.

LABOUR	\$284.54
CONSUMABLES	\$119.63
PARTS	\$107.59
MISCELLANEOUS	\$9.85
SUBTOTAL	\$521.61
GST	\$52.16
TOTAL INCLUDES GST	\$573.77

PRINTED 08/05/23 10:43:03

CASH ☐ CREDIT CARD ☐ FLEETLEASE ☐ REF.NO. _____

EFTPOS (DETAILS) _____ RECEIVED BY _____

Payment can be made electronically using the following bank account details:

Bank: Westpac Account Name: PKMC Adelaide P/L T/As Peter Kittle Toyota

BSB: 035-000 Account No: 710299

Please quote your account/invoice number as reference. Remittance advices to debtors@peterkittle.com.au



LIGHT VEHICLE SERVICING

Date:	05.12.24	VIN:	MPATFR40JMT002027
Unit Number:	LR117	Mechanic:	AMANDA
Rego Number:	S023CSF	Mechanic:	A. Lockwood
Service Type:	10,000	Serviceman:	
Kilometres:	74,704	Operator:	
Hours:		Spotter:	

INSPECTION SCHEDULE

EVERY 10,000 SERVICE

The following inspections require having the engine running or machine moving. Use of an operator and spotter may be required.

IN CAB

No.	ACTION	CHECKS	S	US	N/A	Initial
1	Inspect	Door latches & seals	X			AH
2	Check	Operation of window winders & door handles	X			AH
3	Inspect	Seat belt for damage, fraying & anchor bolt security	X			AH
4	Check	Seat for correct operation, excessive movement, cover & cushion condition	X			AH
5	Check	Operation of ignition & security of key, instrument cluster, warning alarms, warning indicator lights & horn	X			AH
6	Check	Windscreen & other glass in the cab for chips or cracks	X			AH
7	Check	Wipers & Washers	X			AH
8	Check	Park lights, headlights, spot lights, indicators, brake lights, internal cab light, reverse camera & rotating beacon	X			AH
9	Check	Operation of AM / FM radio & UHF radio	X			AH
10	Check	Rear view mirrors & brackets for condition & operation	X			AH
11	Check	Operation of steering wheel (lock to lock), security of the column adjuster	X			AH
12	Check	Operation of air conditioner & heater	X			AH
13	Check	Clutch pedal free play operation / adjustment	X			AH
14	Check	Pedal rubbers are on & in good condition	X			AH
15	Check	For breakdown triangles, condition & complete set		X		AH
16	Check	For the wheel brace & jack	X			AH
17	Check	For a first aid kit, in date & complete	X			AH
18	Check	Operation of E-Stops			X	AH
19	Check	Fire extinguisher for safety ties, gauge in green, rotate a couple of times & tap bottom to release sediment		X		AH

RUNNING CHECKS

No.	ACTION	CHECKS	S	US	N/A	Initial
20	Check	For excessive exhaust smoke or abnormal noises / vibrations	X			AH
21	Test	The operation of all gears, ease of selection, ease of selection between 2WD & 4 x 4 High & low range	X			AH
22	Test	Operation of automatic transmission kick down, lock-up & neutral inhibitor	X			AH
23	Test	Service brake operation / adjustment	X			AH
24	Test	Park brake operation (test on a 10° slope)	X			AH

25	Test	For brake & park brake drag	X			AH
26	Test	Cruise control	X			AH
27	Test	Lane Assist & Front / Rear Traffic Alert systems	X			AH
28	Check	The general driving characteristics of vehicle	X			AH
29	Check	Using a scan tool, check for faults	X			AH
30	Check	DPF Status & conduct a manual burn if required	X			AH

FRAME & BODY

Park on level ground, Isolate generator, Fit body prop, Relieve all pressures, Start from front right hand side and work

No.	ACTION	CHECKS	S	US	N/A	Initial
31	Check	Cab mounts, bonnet release cable, operation of bonnet tilt struts / locking mechanism	X			AH
32	Check	For external body damage	X			AH
33	Check	Mudguards, mudflaps for condition & security	X			AH
34	Check	For metal fatigue in chassis rails, cross members, tow hitch frame & tow ball	X			AH
35	Inspect	Electrical harnesses / junction boxes for chaffing & dust sealing		X		AH
36	Inspect	Exhaust mufflers, piping & mounts for leaks & security	X			AH
37	Check	Hazard warning / component location Decals	X			AH
38	Inspect	All grease lines for damage / security & grease penetration	X			AH

UNDER BONNET / ENGINE BAY

No.	ACTION	CHECKS	S	US	N/A	Initial
39	Check / Clean	Check battery isolator, battery box, mountings, terminals, cables & electrolyte levels	X			AH
40	Inspect	Exhaust manifolds / covers, bolts, turbo, piping for any leaks & security	X			AH
41	Inspect / Tighten	Air induction boxes / hoses / piping / fittings for damage & presence of dusting	X			AH
42	Inspect	Fuel pump / pipes / hoses / clamps, for leakage & movement	X			AH
43	Inspect	Engine for oil leaks & damaged hoses	X			AH
44	Inspect	Engine mounts for wear & security	X			AH
45	Check	Water pump "tell tail" for leakage or blockage	X			AH
46	Inspect	Alternator pulley, mountings, bearings & idler pulleys	X			AH
47	Inspect	Air Conditioner compressor pulley, mountings, hose connections for leakage & movement	X			AH
48	Inspect	Fan, alternator, air conditioner belts for condition & tension	X			AH
49	Inspect	Fan blades for cracks, wear, damage & security	X			AH
50	Check	Radiator mountings, coolant leakage & air flow through radiator	X			AH
51	Inspect	Coolant / heater hoses / clamps for condition, leaks & tightness	X			AH
52	Inspect	Power steering reservoir, pump, hoses for leakage	X			AH
53	Inspect	Power steering box for oil leaks, excessive movement, security of steering	X			AH
54	Inspect	Steering column universal joints, slip joint & mountings	X			AH
55	Inspect	Electrical harnesses / connections for damage & security	X			AH
56	Inspect	Engine bay is free of combustible materials i.e. leaves, sticks & rags for prevention of fire hazards	X			AH

POWER TRAIN & AXLES

Jack up all axles to check wheel bearings, steering linkages & kingpins

No.	ACTION	CHECKS	S	US	N/A	Initial
57	Inspect	Wheel rims for damage, cracks missing or loose wheel nuts	X			AH
58	Check	Front wheel bearings adjust or replace if necessary	X			AH
59	Check	Rear wheel bearings adjust or replace if necessary	X			AH
60	Inspect	Both front & rear drive shafts	X			AH
61	Inspect	All brake linings, pads for thickness & adjustment, adjust if required	X			AH
62	Check	Operation / wear of brake callipers	X			AH

63	Inspect	For movement in both upper & lower ball joints, shocky tower security, steering linkages & ball joints						X			AH
64	Inspect	All shackle pins, bushes, shock absorbers, U bolts, wear plates for wear, movement& tension						X			AH
65	Inspect	Universal joints, slip joints, centre bearings for movement & rubber						X			AH
66	Inspect	Torque rod arms, pins, bushes, mounting bolts for wear & tension						X			AH
67	Inspect	Gearbox / Transmission for oil leaks, mounts & lubrication of pivot points						X			AH
68		Differentials for oil leaks, excessive movement in input & output shafts						X			AH
	Inspect	Tyres for damage, tread depth & pressure				SPARE					AH
69	Depth	LHSF:	8	mm	LHSR:	7	mm				AH
		RHSF:	8	mm	RHSR:	8	mm				
	Damage	LHSF:			LHSR:						AH
		RHSF:			RHSR:						
70	Pressure	RHSF:	36	psi	RHSR:	36	psi				AH
		LHSF:	36	psi	LHSR:	36	psi				
71	Rotate	Tyres, including spare									AH

30,000 km Service

Check / Change & Adjust

No.	ACTION	CHECKS						S	US	N/A	Initial
72	Measure	Brake drums or Rotors									
		RHSF:		mm	RHSR:		mm				
		LHSF:		mm	RHSR:		mm				
73	Measure	Brake linings or pads									
		RHSF:		mm	RHSR:		mm				
		LHSF:		mm	LHSR:		mm				
74	Inspect	For worn, damaged or broken brake actuators / leaking wheel cylinders,									

100,000 km Service

75		Cylinder 1		Cylinder 2		Cylinder 3		Cylinder 4					
	Intake												
	Exhaust												
		Cylinder 5		Cylinder 6		Cylinder 8		Cylinder 8					
	Intake												
	Exhaust												
76	Check	Wheel Bearings Check /Change & Re-pack with grease											
		LHSF:		LHSR:		RHSF:		RHSR:					
77	Check	Glow Plugs for power & conduct a continuity test on each plug											
78	Check	Using a Coolant Test Strip & compare to chart, change if necessary											
79	Replace	Replace Timing Belt											

LUBRICATION SCHEDULE

15,000 km

80	Change	Engine Oil:		X			
81	Change Filters	Engine Oil (Cut/Inspect):		X	Fuel / Water Seperator:		X
82	Check / Top up	Gearbox / Transmission:		X	Transfer Case:		
		Front Diff:			Rear Diff:		X
		Power Steering Fluid:		X	Coolant:		X
		Brake / Clutch Fluid:		X	Windscreen Washer Fluid:		X

30,000 km Service

83	Change Filters	High Pressure Fuel Filter:			Air Cleaner:		
84	Inspect Air Intake	Signs of Dusting Y /N:					
85	Inspect , Clean /	Engine:			Front Diff:		

[illegible]

Name of Mechanic / Supervisor

Light Vehicle Servicing

SERVICING SHEDULE

Date : 18/05/2026
LR No: 117
Rego: 8023CSF

VIN: MPATFR4QJMT002027
KMs/Hours: 96388km
Service Type: 10000km

INSPECTION SCHEDULE

The following inspections require having the engine running or machine moving. Use of an operator and spotter may be required.

IN CAB

No.	ACTION	CHECKS	S	US	N/A	Initial
1	Inspect	Door latches & seals	x			MD
2	Check	Operation of window winders & door handles	x			MD
3	Inspect	Seat belt for damage, fraying & anchor bolt security	x			MD
4	Check	Seat for correct operation, excessive movement, cover & cushion condition	x			MD
5	Check	Operation of ignition & security of key, instrument cluster, warning alarms, warning indicator lights & horn	x			MD
6	Check	Windscreen & other glass in the cab for chips or cracks	x			MD
7	Check	Wipers & Washers	x			MD
8	Check	Park lights, headlights, spot lights, indicators, brake lights, internal cab light, reverse camera & rotating beacon	x			MD
9	Check	Operation of AM / FM radio & UHF radio	x			MD
10	Check	Rear view mirrors & brackets for condition & operation	x			MD
11	Check	Operation of steering wheel (lock to lock), security of the column adjustor	x			MD
12	Check	Operation of Air conditioner and heater	x			MD
13	Check	Clutch pedal free play operation & adjustment	x			MD
14	Check	Pedal rubbers are on & in good condition	x			MD
15	Check	For a wheel brace & jack	x			MD
16	Check	For a first aid kit, in date & complete	x			MD
17	Check	Operation of E-Stops	x			MD
18	Check	Fire extinguisher for safety ties, gauge in green, rotate a couple of times & tap bottom to release sediment	x			MD

RUNNING CHECKS

No.	ACTION	CHECKS	S	US	N/A	Initial
19	Check	For excessive exhaust smoke or abnormal noises / vibrations	x			MD
20	Test	Operation of automatic transmission kick down, lock-up & neutral inhibitor switch	x			MD
21	Test	Operation of gears	x			MD
22	Inspect	Service brake operation / adjustment	x			MD
23	Test	Park brake operation (test on a 10° slope)	x			MD
24	Test	For brake drag & Park brake drag	x			MD
25	Test	Cruise Control	x			MD
26	Check	The general driving characteristics of the vehicle	x			MD
27	Check	Using a scan tool check for fault codes	x			MD
28	Check	DPF Status & conduct a manual burn if required	x			MD

FRAME & BODY						
Park on level ground, Isolate generator, Fit body prop, Relieve all pressures, Start from front right hand side and work clockwise around generator checking each item below						
No.	ACTION	CHECKS	S	US	N/A	Initial
29	Check	Cab mounts, bonnet release cable, operation of bonnet tilt struts / Locking mechanism	x			MD
30	Check	For external body damage	x			MD
31	Check	Mudguards mudflaps for condition & Security	x			MD
32	Check	For metal fatigue in chassis rails, cross members & tow hitch frame and tow ball	x			MD
33	Check	Mudguards, mudflaps for condition & security	x			MD
34	Check	For metal fatigue in chassis rails, cross members & tow hitch frame	x			MD
35	inspect	Electrical harnesses / Junction boxes for chaffing & dust sealing	x			MD
36	inspect	Check battery box, mountings, terminals, cables & electrolyte levels	x			MD
37	Inspect	Exhaust Mufflers, piping ad mounts for leaks and security	x			MD
38	Check	Hazard warning / component location Decals	x			MD
39	Inspect	All grease points	x			MD
No.	ACTION	CHECKS	S	US	N/A	Initial
40	Check /Clean	Check battery isolator, battery box, mountings, teminals, cables and electrolyte levels	x			MD
41	Inspect	Exhaust manifolds / covers, bolts, turbo, piping for any leaks & security		x		MD
42	Inspect / Tighten	Air induction boxes / hoses / piping / fittings for damage & presence of dusting	x			MD
43	Inspect	Fuel pump / pipes / hoses / clamps, for leakage & movement	x			MD
44	Inspect	Engine for oil leaks & damaged hoses	x			MD
45	Check	Engine mounts for wear & security	x			MD
46	Check	Water pump "tell tail" for leakage or blockage	x			MD
47	Check	Alternator pulley, mountings, bearings & idler pulleys				MD
48	Check	Air Conditioner compressor pulley, mountings, hose connections for leakage & movement	x			MD
49	Inspect	Fan, alternator, air conditioner belts for condition & tension				MD
50	Inspect	Fan blades for cracks, wear, damage & security	x			MD
51	Check	Radiator mountings, coolant leakage & air flow through radiator	x			MD
52	Inspect	Coolant / heater hoses / clamps for condition, leaks & tightness	x			MD
53	Inspect	Power steering box for oil leaks, excessive movement, security of steering column & drag link	x			MD
54	Inspect	Steering column universal joints, slip joint & mountings	x			MD
55	Inspect	Electrical harnesses / connections for damage & security	x			MD
56	Inspect	Engine bay is free of combustible materials i.e. leaves, sticks & rags for prevention of fire hazards	x			MD
POWER TRAIN & AXLES						
Jack up all axles to check wheel bearings, steering linkages & kingpins						
No.	ACTION	CHECKS	S	US	N/A	Initial
57	Check	Wheel rims for damage, cracks missing or loose wheel nuts	x			MD
58	Check	Front wheel bearings adjust or replace if necessary	x			MD
59	Check	Rear wheel bearings and replace if necessary	x			MD
60	Inspect	Both front and rear drive shafts	x			MD
61	Inspect	All brake linings, pads for thickness, adjustment & adjust if required	x			MD
62	Check	Operation / wear of brake callipers	x			MD
63	Inspect	for movement in both upper and lower ball joints, shock towers security, steering linkages and ball joints	x			MD

64	Inspect	all Shackle pins, bushes, shock absorbers, U bolts, wear plates for wear movements and tension								X			MD			
65	Inspect	Torque rod arms, pins, bushes, mounting bolts for & tension										X				
66	Check	Gearbox / Transmission for oil leaks, mounts and lubrication pivot points											MD			
67	Check	Differential for oil leaks, excessive movement in input and output shafts											MD			
68	Inspect	Tyres for damage, tread depth & pressure														
	Depth / Damage	P2:		mm	P4:		mm	P8:		mm	P12:		mm	P16:		mm
						P7:		mm	P11:		mm	P15:		mm		
						P6:		mm	P10:		mm	P14:		mm		
69	Pressure	P1:		mm	P3:		mm	P5:		mm	P9:		mm	P13:		mm
		P2:		psi	P4:		psi	P8:		psi	P12:		psi	P16:		psi
						P7:		psi	P11:		psi	P15:		psi		
						P6:		psi	P10:		psi	P14:		psi		
70	Rotate	Tyres including spare														
30,000km Service																
Check / Change / Adjust																
Brake drums and Rotors																
71	Measure	RHSF:		mm	RHSR:		mm									
		LHFS:		mm	RHSR:		mm									
Brake linings or pads																
72	Measure	RHSF:		mm	RHSR:		mm									
		LHFS:		mm	RHSR:		mm									
73	Inspect	For worn, damages or broken brake actuators / leaking wheel cylinders														
100,000 km Service																
74	Check	Wheel bearings Check / Change & Re-pack with grease														
		LHSF:		LHSR:		RHSF:		RHSR:								
75	Check	Glow plus for power & conduct continuity test on each plug														
76	Check	Using a collant Test strip & Compare to chart, change if necessary														
77	Replace	Timing Belt														
Lubrication Schedule																
10,000 km Service																
78	Change	Engine oil						x	Fuel / Water seperator				x			
	Change Filters	Engine oil (cut/ Inspect						x	Transfer case							
	Check / Topup	Gearbox / Transmission :						x	Rear diff				x			
		Front Diff:							Coolant				x			
		Power Steering:						x	Windscreen washer fluid				x			
		Brake / Clutch Fluid:						x								
20,000km Service																
78	Change Filters	High Pressure Fuel filter							Air cleaner							
79	Inspect Air intake	Signs of dusting Y / N							Front Diff							
80	Inspect / Clean	Engine:							Rear Diff							
81	Replace breathers	Gearbox / Transmission														
30,000 km Service																
82	Change	Gearbox / Transmission Oil							Transfer Case oil							
		Front Diff Oil							Rear Diff Oil							
		Power steering Oil														
83	Change Filters	Transmission Filter							Cab Filter							
100,000 km Service																
84	Check	Coolant:														
AFTER EVERY SERVICE																
85	Check	Allfluid levels are correct & the light vehicle is running / operating as per OEM specifications, disconnect trailer														

DEFECTS / COMENTS & PARTS TO BE ORDERED

Removed intake piping and found excessive engine oil on intake side of turbo, suspected failed seal in turbo, will need to have turbo replaced. Engine has excessive blow by.

Replaced LH headlight globe

SERVICE COMPLETION DECLARATION

On signing / initialling this service report you deem that this service has been thoroughly completed. The equipment is in a safe and operational condition at the time of inspection / service.

MATTY

Mechanic / Supervisor Signature

18/05/2026

Inspection Completion Date

MATTY

Name of Mechanic / Supervisor