

LR216.



Hallam Truck Centre  
ABN: 64 007 568 309  
217 Princes Highway  
Hallam VIC 3803  
03 8796 9100



TAX INVOICE 791490

RK0406

Date: 14/02/2023

Rego: LINCT1

Page 1 of 3

Charge to: **CASH SALES SERVICE**  
4770 HALLAM TRUCK CENTRE  
HALLAM VIC 3803

Customer: **LINCT001**  
**Linct Rentals Pty Ltd ATF RMP Family Trust**  
Suite 7, 2-4 Purton Road  
PAKENHAM VIC 3810

Phone Mobile 0418 140 661  
Contact: **Steve**

ABN:

|                       |                    |                   |                       |               |
|-----------------------|--------------------|-------------------|-----------------------|---------------|
| Order No:             | Next Service Date: | <b>14/02/2024</b> | Next Service Kms:     | <b>75,000</b> |
| Service Adviser: TS   | Odometer reading:  | 45,712            | Warranty Expiry Date: | 30/08/2023    |
| VIN 6F5000000NA474296 | Engine No.         | 80423858          | Delivery Date:        | 01/09/2022    |
| Stock Number K3752    | Model T909         |                   | Engine Hours:         | 698.00        |

## \*\*\* RECOMMENDATIONS \*\*\*

30,000 KM B-TYPE SERVICE

| Product                                        | Description | Quantity | Price Excl. |
|------------------------------------------------|-------------|----------|-------------|
| <b>CARRIED OUT B-TYPE SERVICE AS PER SHEET</b> |             |          |             |

|             |                                                                    |    |        |
|-------------|--------------------------------------------------------------------|----|--------|
|             | REPLACED ENGINE OIL AND REQUIRED FILTESRS                          |    |        |
|             | INSPECTED FOR REPORTED FORWARD CAMERA INTERMITTENTLY DROPPING OUT. |    |        |
|             | CONFIRMED FAULT AND REPLACED FAULTY CAMERA. TESTED OK              |    |        |
|             | INSPECTED FOR REPORTED POOR GPS MAPS SIGNAL. CHECKED ANTENNA FOR   |    |        |
|             | OBSTRUCTIONS, OK. UPDATED GPS AND TESTED OK                        |    |        |
|             | REPLACED MISSING GRUB SCREWS FROM DRIVE MUDGUARDS                  |    |        |
| 01L         | LABOUR SCHEDULED SERVICE                                           |    | 661.00 |
| OIL         | ENGINE OIL VECTON 15W-40                                           | 45 | 324.00 |
| GREASE      | CHASSIS GREASE                                                     | 1  | 9.36   |
| SUPP        | SUNDRY SHOP SUPPLIES                                               | 1  | 19.30  |
| ENVIRO      | ENVIRONMENTAL TREATMENT SUPPLY                                     | 1  | 19.80  |
| COMP        | DIAGNOSTIC COMPUTER CONNECTION FEE                                 | 1  | 15.00  |
| SP111943A   | COOLANT TEST STRIP                                                 | 1  | 1.38   |
| KWFF5776    | FUEL FILTER                                                        | 1  | 63.34  |
| KWLF14000NN | LUBE FILTER                                                        | 1  | 56.40  |
| KW25189011  | FILTER-CABOVER                                                     | 2  | 96.22  |
| KWFS19764   | FUEL/WATER SEPARATOR                                               | 1  | 37.38  |
| SPR01025    | O/RING SUMP PLUG                                                   | 1  | 4.68   |
| KWWU0892333 | RAPID WINDSCREEN CLEANER                                           | 1  | 2.04   |
| KWAS2474    | AIR/OIL SEPARATOR                                                  | 1  | 15.19  |
| KWSSBK1     | SPRAYS SAFE FENDER SUPPORT KIT                                     | 2  | 30.96  |

\*\*\*\*\*

EFTPOS FROM WESTPAC  
HALLAM TRUCK CENTRE  
217 PRINCES HIGHWAY  
HALLAM 3803  
Australia

1,356.05



TIME 15FEB23 06:59  
MID 24821436  
TSP 100381937061  
RRN 230215000601  
Debit Mastercard  
Mastercard Debit(C) CR  
CARD.....3297  
AID A0000000041010  
TUR 0000048001  
AUTH R60108

PURCHASE AUD1491.65

(000) APPROVED

\*CUSTOMER COPY\*

Continued ...

## TERMS AND CONDITIONS

- 1) You (that is the Customer) will be responsible for any loss, damage or deterioration to goods once they leave our place of business - that is they will then be at your risk. You should get insurance to cover this.
- 2) Delivery will be at our place of business. You will be responsible to arrange and pay for freight from our place of business. We can help you to arrange freight if you wish. We will not do this unless you request it.
- 3) Goods are not supplied on a sale or return basis. Subject to these terms and conditions, once we accept your order, you are obliged to take the goods although property is yet to pass. Any agreement to accept any return of goods must be in writing signed on our behalf. If we agree to accept any return, our current return conditions will apply. Details of current return conditions are attached.
- 4) (a) You have to pay for goods and services supplied before the last day of the month after the month in which they were supplied.  
(b) However, payment will become due immediately if:  
- you commit any act of bankruptcy;  
- a meeting of your creditors is called;  
- a mortgagee or mortgagee's agent takes possession of any of your assets;  
- a receiver of any of your assets is appointed; or  
- a petition to bankrupt or liquidate you is issued.  
(c) Until an overdue payment is paid, you have to pay interest on it at 2% per month.  
(d) You must pay us the reasonable costs (including debt collector's commission) we incur to recover (or to attempt to recover) any overdue payment.
- 5) Until property in goods supplied passes to you and without prejudice to our rights under the PPSA:  
(a) You may fix them into your articles on condition that the product ("product/s") will be our property as security for full payment for the goods.  
(b) Until you use or sell the goods or products, you must store them separately and so that they are clearly identifiable as our property.  
(c) You may fix the goods or products into the articles of any third party on condition that the resulting item will be deemed to be owned in common by us and that third party.  
(d) You may sell the goods or the products or the items as referred to in (c) (or your interest therein) in the ordinary course of your business on the following conditions:  
- You make the sale as our agent and bailee.  
- Any proceeds of sale received by you are held by you on trust for us and you must keep them separately and so that they are clearly identifiable as ours.  
- If you have not received the proceeds of sale, you will, if we so require, assign to us your rights in respect of the sale price.
- 6) (a) "PPSA" means the Personal Property Securities Act 2009 (Cth);  
"PPS register" means the Personal Property Securities Register;  
"purchase money security interest", "registration commencement time", "security interest" and "verification statement" all have the meanings given by the PPSA.  
(b) Whilst the risk in the goods passes in accordance with clause 1, legal and equitable title in the goods will not pass to you until payment in full for all debts accrued or owed by you to us for the goods has been received by us in cleared funds. Until that time you are in possession of the goods solely as bailee for us and your right to possession ceases if you do not pay us for the goods on time or when due.  
(c) Until we receive payment for the goods in full, we reserve the following rights:  
- the legal and equitable ownership of the goods;  
- the right to enter upon your premises and take possession of the goods or the products referred to in clause 5;  
- the right to keep or resell any goods or products we take possession of and  
- any other rights we may have at law or under the PPSA.
- (d) Until we receive payment for the goods in full, you acknowledge that we have a purchase money security interest which attaches over the goods and their proceeds and a security interest in relation to other amounts owed by you to us.
- (e) For the avoidance of doubt, after the registration commencement time, we may register our purchase money security interest and security interest on the PPS register established by the PPSA and, where necessary, amend the registration.
- (f) You undertake to do anything (such as obtaining consents, signing and producing documents, producing receipts and getting documents completed and signed) which we ask and consider necessary for the purposes of:  
- ensuring that a security interest created under this agreement is enforceable, perfected and otherwise effective;  
- enabling us to apply for any registration, or give any notification, in connection with a security interest created under this agreement so that the security interest has the priority required by us, including anything we ask you to do in connection with the PPSA.
- (g) You must not grant any other person a security interest over the goods or their proceeds.
- (h) To the extent permitted by law, if the PPSA applies, you irrevocably waive your rights you may have to:  
- receive notices or statements under sections 95, 12(4), 125, 130, 132(3)(c), 132(4) and 135 of the PPSA;  
- redeem the goods under section 142 of the PPSA;  
- reinstate the agreement under section 143 of the PPSA;  
- receive a verification statement as defined in the PPSA.
- (i) Nothing in this clause prevents us from taking action against you for the purchase price of the goods.
- (j) In addition to being liable to pay all our enforcement expenses as set out in clause 4(d) you agree to be liable for our costs of our registration of our purchase money security interest and security interest on the PPS register.
- 7) Any previous dealings shall not affect these terms and conditions or be deemed to do so nor will any term or condition set out in your order forms or other documentation.
- 8) In these terms and conditions reference to a person includes a corporation, and the singular includes the plural and vice versa.
- 9) If more than one, the persons comprising the Customer shall be jointly and severally bound by these terms and conditions.
- 10) The law of Victoria governs these terms and conditions and any legal action relating to them shall be brought in Victorian Courts.
- 11) Each transaction is to be on the above terms and conditions. However we may change the above terms and conditions, and upon written notice to you, you will be bound by such changed terms and conditions in respect of subsequent transactions. Unless the contrary is proved, such notice shall be deemed served on you two business days after it is posted.

## CURRENT RETURN CONDITIONS (subject to variation by the Company without notice to the Customer) are:

- (a) Goods marked "non-returnable" are not returnable.
- (b) Parts procured Ex Supplier are non-returnable unless the Company gives prior approval.
- (c) Electrical items will not be accepted for credit.
- (d) Goods must be resalable and returned within 30 days from invoice date.
- (e) Invoice no. and date to be quoted by customer.
- (f) The Customer shall pay all freight charges to return the goods to the place of business of the Company.
- (g) The Customer shall pay reasonable handling charges of the Company.
- (h) Goods are non-returnable after 30 days from invoice date.

LR216.



Hallam Truck Centre  
 ABN: 64 007 568 309  
 217 Princes Highway  
 Hallam VIC 3803  
 03 8796 9100



TAX INVOICE 791490

RK0406

Date: 14/02/2023

Rego: LINCT1

Page 1 of 3

Charge to: **CASH SALES SERVICE**  
 4770 HALLAM TRUCK CENTRE  
 HALLAM VIC 3803

Customer: **LINCT001**  
**Linct Rentals Pty Ltd ATF RMP Family Trust**  
 Suite 7, 2-4 Purton Road  
 PAKENHAM VIC 3810

Phone Mobile 0418 140 661  
 Contact: **Steve**

ABN:

|                       |                    |                   |                       |               |
|-----------------------|--------------------|-------------------|-----------------------|---------------|
| Order No:             | Next Service Date: | <b>14/02/2024</b> | Next Service Kms:     | <b>75,000</b> |
| Service Adviser: TS   | Odometer reading:  | 45,712            | Warranty Expiry Date: | 30/08/2023    |
| VIN 6F5000000NA474296 | Engine No.         | 80423858          | Delivery Date:        | 01/09/2022    |
| Stock Number K3752    | Model T909         |                   | Engine Hours:         | 698.00        |

## \*\*\* RECOMMENDATIONS \*\*\*

30,000 KM B-TYPE SERVICE

| Product | Description | Quantity | Price Excl. |
|---------|-------------|----------|-------------|
|---------|-------------|----------|-------------|

## CARRIED OUT B-TYPE SERVICE AS PER SHEET

|             |                                                                    |    |        |
|-------------|--------------------------------------------------------------------|----|--------|
|             | REPLACED ENGINE OIL AND REQUIRED FILTESRS                          |    |        |
|             | INSPECTED FOR REPORTED FORWARD CAMERA INTERMITTENTLY DROPPING OUT. |    |        |
|             | CONFIRMED FAULT AND REPLACED FAULTY CAMERA. TESTED OK              |    |        |
|             | INSPECTED FOR REPORTED POOR GPS MAPS SIGNAL. CHECKED ANTENNA FOR   |    |        |
|             | OBSTRUCTIONS, OK. UPDATED GPS AND TESTED OK                        |    |        |
|             | REPLACED MISSING GRUB SCREWS FROM DRIVE MUDGUARDS                  |    |        |
| 01L         | LABOUR SCHEDULED SERVICE                                           |    | 661.00 |
| OIL         | ENGINE OIL VECTON 15W-40                                           | 45 | 324.00 |
| GREASE      | CHASSIS GREASE                                                     | 1  | 9.36   |
| SUPP        | SUNDRY SHOP SUPPLIES                                               | 1  | 19.30  |
| ENVIRO      | ENVIRONMENTAL TREATMENT SUPPLY                                     | 1  | 19.80  |
| COMP        | DIAGNOSTIC COMPUTER CONNECTION FEE                                 | 1  | 15.00  |
| SP111943A   | COOLANT TEST STRIP                                                 | 1  | 1.38   |
| KWFF5776    | FUEL FILTER                                                        | 1  | 63.34  |
| KWLF14000NN | LUBE FILTER                                                        | 1  | 56.40  |
| KW25189011  | FILTER-CABOVER                                                     | 2  | 96.22  |
| KWFS19764   | FUEL/WATER SEPARATOR                                               | 1  | 37.38  |
| SPR01025    | O/RING SUMP PLUG                                                   | 1  | 4.68   |
| KWWU0892333 | RAPID WINDSCREEN CLEANER                                           | 1  | 2.04   |
| KWAS2474    | AIR/OIL SEPARATOR                                                  | 1  | 15.19  |
| KWSSBK1     | SPRAYS SAFE FENDER SUPPORT KIT                                     | 2  | 30.96  |

\*\*\*\*\*

EFTPOS FROM WESTPAC  
 HALLAM TRUCK CENTRE  
 217 PRINCES HIGHWAY  
 HALLAM 3803  
 Australia

1,356.05



TIME 15FEB23 06:59  
 MID 24821436  
 TSP 100381937061  
 RRN 230215000601  
 Debit Mastercard  
 Mastercard Debit(C) CR  
 CARD.....3297  
 AID A0000000041010  
 TUR 0000048001  
 AUTH R60108

PURCHASE AUD1491.65

(000) APPROVED

\*CUSTOMER COPY\*

Continued ...

## TERMS AND CONDITIONS

- 1) You (that is the Customer) will be responsible for any loss, damage or deterioration to goods once they leave our place of business - that is they will then be at your risk. You should get insurance to cover this.
- 2) Delivery will be at our place of business. You will be responsible to arrange and pay for freight from our place of business. We can help you to arrange freight if you wish. We will not do this unless you request it.
- 3) Goods are not supplied on a sale or return basis. Subject to these terms and conditions, once we accept your order, you are obliged to take the goods although property is yet to pass. Any agreement to accept any return of goods must be in writing signed on our behalf. If we agree to accept any return, our current return conditions will apply. Details of current return conditions are attached.
- 4) (a) You have to pay for goods and services supplied before the last day of the month after the month in which they were supplied.  
(b) However, payment will become due immediately if:  
- you commit any act of bankruptcy;  
- a meeting of your creditors is called;  
- a mortgagee or mortgagee's agent takes possession of any of your assets;  
- a receiver of any of your assets is appointed; or  
- a petition to bankrupt or liquidate you is issued.  
(c) Until an overdue payment is paid, you have to pay interest on it at 2% per month.  
(d) You must pay us the reasonable costs (including debt collector's commission) we incur to recover (or to attempt to recover) any overdue payment.
- 5) Until property in goods supplied passes to you and without prejudice to our rights under the PPSA:  
(a) You may fix them into your articles on condition that the product ("product/s") will be our property as security for full payment for the goods.  
(b) Until you use or sell the goods or products, you must store them separately and so that they are clearly identifiable as our property.  
(c) You may fix the goods or products into the articles of any third party on condition that the resulting item will be deemed to be owned in common by us and that third party.  
(d) You may sell the goods or the products or the items as referred to in (c) (or your interest therein) in the ordinary course of your business on the following conditions:  
- You make the sale as our agent and bailee.  
- Any proceeds of sale received by you are held by you on trust for us and you must keep them separately and so that they are clearly identifiable as ours.  
- If you have not received the proceeds of sale, you will, if we so require, assign to us your rights in respect of the sale price.
- 6) (a) "PPSA" means the Personal Property Securities Act 2009 (Cth);  
"PPS register" means the Personal Property Securities Register;  
"purchase money security interest", "registration commencement time", "security interest" and "verification statement" all have the meanings given by the PPSA.  
(b) Whilst the risk in the goods passes in accordance with clause 1, legal and equitable title in the goods will not pass to you until payment in full for all debts accrued or owed by you to us for the goods has been received by us in cleared funds. Until that time you are in possession of the goods solely as bailee for us and your right to possession ceases if you do not pay us for the goods on time or when due.  
(c) Until we receive payment for the goods in full, we reserve the following rights:  
- the legal and equitable ownership of the goods;  
- the right to enter upon your premises and take possession of the goods or the products referred to in clause 5;  
- the right to keep or resell any goods or products we take possession of and  
- any other rights we may have at law or under the PPSA.
- (d) Until we receive payment for the goods in full, you acknowledge that we have a purchase money security interest which attaches over the goods and their proceeds and a security interest in relation to other amounts owed by you to us.
- (e) For the avoidance of doubt, after the registration commencement time, we may register our purchase money security interest and security interest on the PPS register established by the PPSA and, where necessary, amend the registration.
- (f) You undertake to do anything (such as obtaining consents, signing and producing documents, producing receipts and getting documents completed and signed) which we ask and consider necessary for the purposes of:  
- ensuring that a security interest created under this agreement is enforceable, perfected and otherwise effective;  
- enabling us to apply for any registration, or give any notification, in connection with a security interest created under this agreement so that the security interest has the priority required by us, including anything we ask you to do in connection with the PPSA.
- (g) You must not grant any other person a security interest over the goods or their proceeds.
- (h) To the extent permitted by law, if the PPSA applies, you irrevocably waive your rights you may have to:  
- receive notices or statements under sections 95, 12(4), 125, 130, 132(3)(c), 132(4) and 135 of the PPSA;  
- redeem the goods under section 142 of the PPSA;  
- reinstate the agreement under section 143 of the PPSA;  
- receive a verification statement as defined in the PPSA.
- (i) Nothing in this clause prevents us from taking action against you for the purchase price of the goods.
- (j) In addition to being liable to pay all our enforcement expenses as set out in clause 4(d) you agree to be liable for our costs of our registration of our purchase money security interest and security interest on the PPS register.
- 7) Any previous dealings shall not affect these terms and conditions or be deemed to do so nor will any term or condition set out in your order forms or other documentation.
- 8) In these terms and conditions reference to a person includes a corporation, and the singular includes the plural and vice versa.
- 9) If more than one, the persons comprising the Customer shall be jointly and severally bound by these terms and conditions.
- 10) The law of Victoria governs these terms and conditions and any legal action relating to them shall be brought in Victorian Courts.
- 11) Each transaction is to be on the above terms and conditions. However we may change the above terms and conditions, and upon written notice to you, you will be bound by such changed terms and conditions in respect of subsequent transactions. Unless the contrary is proved, such notice shall be deemed served on you two business days after it is posted.

## CURRENT RETURN CONDITIONS (subject to variation by the Company without notice to the Customer) are:

- (a) Goods marked "non-returnable" are not returnable.
- (b) Parts procured Ex Supplier are non-returnable unless the Company gives prior approval.
- (c) Electrical items will not be accepted for credit.
- (d) Goods must be resalable and returned within 30 days from invoice date.
- (e) Invoice no. and date to be quoted by customer.
- (f) The Customer shall pay all freight charges to return the goods to the place of business of the Company.
- (g) The Customer shall pay reasonable handling charges of the Company.
- (h) Goods are non-returnable after 30 days from invoice date.

LR216



# TAX INVOICE

Linct Group Pty Ltd  
Factory 2 2-4 Purton Rd  
PAKENHAM VIC 3810  
AUSTRALIA

Invoice Date  
30 Nov 2023

Invoice Number  
INV-0447

Reference  
November Work

ABN  
87 657 613 253

ALL MECH  
MAINTENANCE  
TRARALGON VIC 3844  
AUSTRALIA  
PH: 0407 308 918  
EMAIL:  
allmech.maintenance@outlook.com

9999



| Item   | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | Quantity | Unit Price | GST | Amount AUD |
|--------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------|------------|-----|------------|
| Labour | <p>Kenworth T909 Truck Rego - LINCT1<br/>LR216<br/>151,081kms</p> <p>27/11/23<br/>-Travel to Pakenham<br/>-Carry out 150,000kms service<br/>-Checked lights<br/>-Checked cabin controls<br/>-Checked A/C and heater<br/>-Checked belts<br/>-Checked all fluid levels<br/>-Checked battery<br/>-Checked steering and suspension<br/>-Checked tyres<br/>-Front approx. 60% remaining all round (unusual wear)<br/>-1st rear axle approx. 70% remaining<br/>-2nd rear axle approx. 25% remaining<br/>-Checked brakes<br/>-Front brakes approx. 15mm remaining<br/>-Rear brakes approx. 15mm remaining<br/>-Changed engine oil and filter<br/>-Top up washer and add additive<br/>-Changed fan belt<br/>-Changed radiator cap<br/>-Checked diff levels and oil condition<br/>-Checked king pins<br/>-Changed air filters<br/>-Changed wiper blades<br/>-Changed fuel filters (x2)<br/>-Changed cabin filters<br/>-Grease vehicle<br/>-Test drive, all ok</p> <p>*NOTES*<br/>-Rear 1st axle LHS shocker bushes starting to split</p> <p>FWR Float - Rego YV95NH<br/>LR635<br/>-Checked over trailer<br/>-Checked brakes</p> | 9.00     | 100.00     | 10% | 900.00     |

| Item          | Description                                                  | Quantity | Unit Price | GST | Amount AUD |
|---------------|--------------------------------------------------------------|----------|------------|-----|------------|
|               | -Checked tyres<br>-Grease trailer                            |          |            |     |            |
|               | *NOTES*                                                      |          |            |     |            |
|               | -Rear steer axles will require brakes liner replacement soon |          |            |     |            |
|               | -Multiple boots torn                                         |          |            |     |            |
| Travel        | \$1 per km after first 20km travelled                        | 198.00   | 1.00       | 10% | 198.00     |
| Parts         | 6mm Wiper Blades                                             | 2.00     | 10.50      | 10% | 21.00      |
| Grease        | Grease                                                       | 1.00     | 10.00      | 10% | 10.00      |
| Consumables   | Workshop consumables                                         | 1.00     | 20.00      | 10% | 20.00      |
| Levy          | Waste levy                                                   | 1.00     | 10.00      | 10% | 10.00      |
| Subtotal      |                                                              |          |            |     | 1,159.00   |
| TOTAL GST 10% |                                                              |          |            |     | 115.90     |
| TOTAL AUD     |                                                              |          |            |     | 1,274.90   |

**Due Date: 30 Nov 2023**

EFT Details

All Mech Maintenance Pty Ltd

BSB: 063-530

ACC: 1058 5827

Please reference invoice number

PAYMENT IS DUE 7 DAYS FROM INVOICE DATE

## PAYMENT ADVICE

To: ALL MECH MAINTENANCE  
TRARALGON VIC 3844  
AUSTRALIA  
PH: 0407 308 918  
EMAIL: allmech.maintenance@outlook.com

Customer Linct Group Pty Ltd  
Invoice Number INV-0447  
Amount Due 1,274.90  
Due Date 30 Nov 2023  
Amount Enclosed

Enter the amount you are paying above



LR216

# TAX INVOICE

Linct Group



Invoice Date  
1 May 2023

Invoice Number  
INV-1163

Reference  
LR216

ABN  
71 627 726 238

Earthworks Diesel Repairs  
Pty Ltd

ABN 71 627 726 238  
4 Mulhalls Road  
MACCLESFIELD VIC  
3782

Mick@edrepairs.com.au  
0407 147 882

| Description                                                                                        | Quantity | Unit Price | GST | Amount AUD |
|----------------------------------------------------------------------------------------------------|----------|------------|-----|------------|
| 28/04/2023. Kenworth T909 Linct1 @77,680km. Labour to complete B Service and mechanical inspection | 6.00     | 120.00     | 10% | 720.00     |
| Engine oil                                                                                         | 50.00    | 5.00       | 10% | 250.00     |
| Engine oil filter                                                                                  | 1.00     | 66.41      | 10% | 66.41      |
| Fuel filter                                                                                        | 1.00     | 69.63      | 10% | 69.63      |
| Grease                                                                                             | 2.00     | 15.65      | 10% | 31.30      |
| Environmental / Consumables                                                                        | 1.00     | 40.00      | 10% | 40.00      |
| Subtotal                                                                                           |          |            |     | 1,177.34   |
| TOTAL GST 10%                                                                                      |          |            |     | 117.73     |
| TOTAL AUD                                                                                          |          |            |     | 1,295.07   |

**Due Date: 29 May 2023**  
Earthworks Diesel Repairs Pty Ltd  
BSB: 013 312  
Acc No: 310793368

Thank You

Payment terms 14 days from invoice date

LR216



# TAX INVOICE

Linct Group

Invoice Date  
26 Jul 2023

Invoice Number  
INV-1339

Reference  
LR216

ABN  
71 627 726 238

Earthworks Diesel Repairs  
Pty Ltd

ABN 71 627 726 238

4 Mulhalls Road

MACCLESFIELD VIC

3782

Mick@edrepairs.com.au

0407 147 882

| Description                                                                                                                                                                                | Quantity | Unit Price | GST | Amount AUD |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------|------------|-----|------------|
| 29/06/2023. KW T909 LR216 @105,600km. Labour to complete B Service and mechanical inspection. Tighten Cross member bolts. Replace diff and gearbox oils. Remove dash and test pyro wiring. | 8.00     | 120.00     | 10% | 960.00     |
| Engine oil                                                                                                                                                                                 | 50.00    | 5.00       | 10% | 250.00     |
| Oil filter                                                                                                                                                                                 | 1.00     | 73.32      | 10% | 73.32      |
| Fuel filter                                                                                                                                                                                | 1.00     | 82.34      | 10% | 82.34      |
| Gearbox filter                                                                                                                                                                             | 1.00     | 63.89      | 10% | 63.89      |
| AD Blue filter                                                                                                                                                                             | 1.00     | 186.85     | 10% | 186.85     |
| AD Blue filter o ring                                                                                                                                                                      | 1.00     | 44.80      | 10% | 44.80      |
| Air dryer filter                                                                                                                                                                           | 1.00     | 275.21     | 10% | 275.21     |
| Air oil separator                                                                                                                                                                          | 1.00     | 19.75      | 10% | 19.75      |
| Gearbox oil                                                                                                                                                                                | 12.00    | 5.42       | 10% | 65.04      |
| Diff oils                                                                                                                                                                                  | 43.00    | 9.12       | 10% | 392.16     |
| Environmental / Consumables                                                                                                                                                                | 1.00     | 40.00      | 10% | 40.00      |
| Grease                                                                                                                                                                                     | 1.00     | 17.42      | 10% | 17.42      |
| LED flashing light                                                                                                                                                                         | 1.00     | 65.65      | 10% | 65.65      |
| Subtotal                                                                                                                                                                                   |          |            |     | 2,536.43   |
| TOTAL GST 10%                                                                                                                                                                              |          |            |     | 253.65     |
| TOTAL AUD                                                                                                                                                                                  |          |            |     | 2,790.08   |

Due Date: 23 Aug 2023

SCANNED  
17/8

## PRIME MOVER / TRUCK

### SERVICING SCHEDULE

Date :

23/9/23

LR No:

216

Rego:

Linct 1

VIN:

KMs/Hours: 129869

Service Type: A

### INSPECTION SCHEDULE

The following inspections require having the engine running or machine moving. Use of an operator and spotter may be required.

#### IN CAB

| No. | ACTION  | CHECKS                                                                                                               | S | US | N/A | Initial |
|-----|---------|----------------------------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 1   | Inspect | Door latches & seals                                                                                                 | ✓ |    |     |         |
| 2   | Check   | Operation of window winders & door handles                                                                           | ✓ |    |     |         |
| 3   | Inspect | Seat belt for damage, fraying & anchor bolt security                                                                 | ✓ |    |     |         |
| 4   | Check   | Seat for correct operation, excessive movement, cover & cushion condition                                            | ✓ |    |     |         |
| 5   | Check   | Operation of ignition & security of key, instrument cluster, warning alarms, warning indicator lights & horn         | ✓ |    |     |         |
| 6   | Check   | Windscreen & other glass in the cab for chips or cracks                                                              | ✓ |    |     |         |
| 7   | Check   | Wipers & Washers                                                                                                     | ✓ |    |     |         |
| 8   | Check   | Park lights, headlights, spot lights, indicators, brake lights, internal cab light, reverse camera & rotating beacon | ✓ |    |     |         |
| 9   | Check   | Operation of AM / FM radio & UHF radio                                                                               | ✓ |    |     |         |
| 10  | Check   | Rear view mirrors & brackets for condition & operation                                                               | ✓ |    |     |         |
| 11  | Check   | Operation of steering wheel (lock to lock), security of the column adjustor                                          | ✓ |    |     |         |
| 12  | Check   | Clutch pedal free play operation & adjustment                                                                        |   |    | ✓   |         |
| 13  | Check   | Pedal rubbers are on & in good condition                                                                             | ✓ |    |     |         |
| 14  | Check   | For breakdown triangles, condition & complete set                                                                    | ✓ |    |     |         |
| 15  | Check   | For a wheel brace & jack                                                                                             | ✓ |    |     |         |
| 16  | Check   | For a first aid kit, in date & complete                                                                              | ✓ |    |     |         |
| 17  | Check   | Operation of E-Stops                                                                                                 |   |    | ✓   |         |
| 18  | Check   | Fire extinguisher for safety ties, gauge in green, rotate a couple of times & tap bottom to release sediment         | ✓ |    |     |         |

#### RUNNING CHECKS

| No. | ACTION  | CHECKS                                                                                          | S | US | N/A | Initial |
|-----|---------|-------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 19  | Check   | For excessive exhaust smoke or abnormal noises / vibrations                                     | ✓ |    |     |         |
| 20  | Check   | For excessive time for the air pressure to build up, operation of the gauges & governor kick in | ✓ |    |     |         |
| 21  | Test    | Operation of automatic transmission kick down, lock-up & neutral inhibitor switch               |   |    | ✓   |         |
| 22  | Test    | Operation of gears, ease of selection of High / Low range & the gear splitter                   | ✓ |    |     |         |
| 23  | Inspect | Service brake operation / adjustment                                                            | ✓ |    |     |         |
| 24  | Check   | Park brake operation ( test on a 10° slope )                                                    | ✓ |    |     |         |
| 25  | Check   | For brake drag                                                                                  | ✓ |    |     |         |
| 26  | Check   | Operation of engine or exhaust brake                                                            | ✓ |    |     |         |
| 27  | Check   | The general driving characteristics of the vehicle                                              | ✓ |    |     |         |
| 28  | Check   | Operation of the PTO, raise tipper body & check for leaks                                       | ✓ |    |     |         |
| 29  | Check   | Operation of water sprayers, dribble bar & cannon                                               |   |    | ✓   |         |
| 30  | Check   | Operation of air conditioner & heater                                                           | ✓ |    |     |         |
| 31  | Check   | Using a scan tool check for fault codes                                                         | ✓ |    |     |         |
| 32  | Conduct | DPF Status & conduct a manual burn if required                                                  | ✓ |    |     |         |

## FRAME & BODY

*Park on level ground, Isolate generator, Fit body prop, Relieve all pressures, Start from front right hand side and work clockwise around generator checking each item below*

| No. | ACTION  | CHECKS                                                                                                   | S | US | N/A | Initial |
|-----|---------|----------------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 33  | Check   | Cab mounts, operation of cab tilt & locking mechanism                                                    | ✓ |    |     |         |
| 34  | Check   | Bonnet mounts, operation of bonnet tilt struts / locking mechanism                                       | ✓ |    |     |         |
| 35  | Check   | For external body damage / security of bonnet to main body, check hinges, tanks, turntable & tipper body | ✓ |    |     |         |
| 36  | Check   | Steps & handrails for integrity & security                                                               | ✓ |    |     |         |
| 37  | Check   | Mudguards, mudflaps for condition & security                                                             | ✓ |    |     |         |
| 38  | Check   | For metal fatigue in chassis rails, cross members & tow hitch frame                                      | ✓ |    |     |         |
| 39  | Check   | Hoist mounting bolts, pivot pins / hinges & hydraulic hoses                                              | ✓ |    |     |         |
| 40  | Check   | Check battery box, mountings, terminals, cables & electrolyte levels                                     | ✓ |    |     |         |
| 41  | Inspect | All air lines, valves / fittings for air leaks & chaffing                                                | ✓ |    |     |         |
| 42  | Inspect | All grease lines for damage / security & grease penetration                                              | ✓ |    |     |         |
| 43  | Inspect | Ringfeeder / Turn Table                                                                                  | ✓ |    |     |         |
| 44  | Check   | Hazard warning / component location Decals                                                               | ✓ |    |     |         |
| 45  | Inspect | Electrical harnesses / junction boxes for chaffing & dust sealing                                        | ✓ |    |     |         |

## UNDER BONNET / ENGINE BAY

| No. | ACTION            | CHECKS                                                                                                | S | US | N/A | Initial |
|-----|-------------------|-------------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 46  | Inspect           | Exhaust manifolds / covers, bolts, turbo, piping for any leaks & security                             | ✓ |    |     |         |
| 47  | Inspect / Tighten | Air induction boxes / hoses / piping / fittings for damage & presence of dusting                      | ✓ |    |     |         |
| 48  | Inspect           | Fuel pump / pipes / hoses / clamps, for leakage & movement                                            | ✓ |    |     |         |
| 49  | Inspect           | Engine for oil leaks & damaged hoses                                                                  | ✓ |    |     |         |
| 50  | Check             | Engine mounts for wear & security                                                                     | ✓ |    |     |         |
| 51  | Check             | Water pump "tell tail" for leakage or blockage                                                        | ✓ |    |     |         |
| 52  | Check             | Alternator pulley, mountings, bearings & idler pulleys                                                | ✓ |    |     |         |
| 53  | Check             | Air Conditioner compressor pulley, mountings, hose connections for leakage & movement                 | ✓ |    |     |         |
| 54  | Inspect           | Fan, alternator, air conditioner belts for condition & tension                                        | ✓ |    |     |         |
| 55  | Inspect           | Fan blades for cracks, wear, damage & security                                                        | ✓ |    |     |         |
| 56  | Check             | Radiator mountings, coolant leakage & air flow through radiator                                       | ✓ |    |     |         |
| 57  | Inspect           | Coolant / heater hoses / clamps for condition, leaks & tightness                                      | ✓ |    |     |         |
| 58  | Inspect           | Power steering box for oil leaks, excessive movement, security of steering column & drag link         | ✓ |    |     |         |
| 59  | Inspect           | Steering column universal joints, slip joint & mountings                                              | ✓ |    |     |         |
| 60  | Inspect           | Electrical harnesses / connections for damage & security                                              | ✓ |    |     |         |
| 61  | Inspect           | Engine bay is free of combustible materials i.e. leaves, sticks & rags for prevention of fire hazards | ✓ |    |     |         |

## POWER TRAIN & AXLES

*Jack up all axles to check wheel bearings, steering linkages & kingpins*

| No. | ACTION  | CHECKS                                                                                                            | S | US | N/A | Initial |
|-----|---------|-------------------------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 62  | Check   | Front wheel bearings adjust or replace if necessary                                                               | ✓ |    |     |         |
| 63  | Check   | For movement in all kingpins & steering ball joints & linkages, while jacked up grease all points on all kingpins | ✓ |    |     |         |
| 64  | Inspect | All shackle pins, bushes, shock absorbers, U Bolts, wear plates for wear, movement & tension                      | ✓ |    |     |         |
| 65  | Inspect | Transmission, PTO for oil leaks, mounts & lubrication of pivot points                                             | ✓ |    |     |         |
| 66  | Inspect | Universal joints, slip joints, centre bearings for movement & rubber deterioration                                | ✓ |    |     |         |
| 67  | Inspect | Differentials for oil leaks, excessive movement in input & output shafts                                          | ✓ |    |     |         |
| 68  | Check   | Torque rod arms, pins, bushes, mounting bolts for & tension                                                       | ✓ |    |     |         |
| 69  | Check   | Rear wheel bearings adjust or replace if necessary                                                                | ✓ |    |     |         |

|                                                                                                                                                                                                  |                |                                                                                                              |                                                                    |     |     |  |     |     |  |     |      |  |     |      |  |     |      |  |     |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|--------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------|-----|-----|--|-----|-----|--|-----|------|--|-----|------|--|-----|------|--|-----|
| 70                                                                                                                                                                                               | Inspect        | All brake linings, pads for thickness, adjustment & adjust if required                                       |                                                                    |     |     |  |     |     |  |     |      |  |     |      |  |     |      |  |     |
| 71                                                                                                                                                                                               | Inspect        | Brake linings or pads, through inspection hole, check adjustment                                             |                                                                    |     |     |  |     |     |  |     |      |  |     |      |  |     |      |  |     |
| 72                                                                                                                                                                                               | Check          | Operation / wear of S cams & brake boosters                                                                  |                                                                    |     |     |  |     |     |  |     |      |  |     |      |  |     |      |  |     |
| 73                                                                                                                                                                                               | Check          | Airbags for leaks or damage to cones                                                                         |                                                                    |     |     |  |     |     |  |     |      |  |     |      |  |     |      |  |     |
| 74                                                                                                                                                                                               | Inspect        | Wheel rims for damage, cracks missing or loose wheel nuts                                                    |                                                                    |     |     |  |     |     |  |     |      |  |     |      |  |     |      |  |     |
| 75                                                                                                                                                                                               | Inspect        | Tyres for damage, tread depth & pressure                                                                     |                                                                    |     |     |  |     |     |  |     |      |  |     |      |  |     |      |  |     |
|                                                                                                                                                                                                  | Depth / Damage | P2:                                                                                                          |                                                                    | mm  | P4: |  | mm  | P8: |  | mm  | P12: |  | mm  | P16: |  | mm  |      |  |     |
|                                                                                                                                                                                                  |                |                                                                                                              |                                                                    |     |     |  |     |     |  |     | P7:  |  | mm  | P11: |  | mm  | P15: |  | mm  |
|                                                                                                                                                                                                  |                |                                                                                                              |                                                                    |     |     |  |     |     |  |     | P6:  |  | mm  | P10: |  | mm  | P14: |  | mm  |
|                                                                                                                                                                                                  |                |                                                                                                              |                                                                    |     |     |  |     |     |  |     | P5:  |  | mm  | P9:  |  | mm  | P13: |  | mm  |
|                                                                                                                                                                                                  |                |                                                                                                              |                                                                    |     |     |  |     |     |  |     | P1:  |  | mm  | P3:  |  | mm  | P5:  |  | mm  |
| 76                                                                                                                                                                                               | Pressure       | P2:                                                                                                          |                                                                    | psi | P4: |  | psi | P8: |  | psi | P12: |  | psi | P16: |  | psi |      |  |     |
|                                                                                                                                                                                                  |                |                                                                                                              |                                                                    |     |     |  |     |     |  |     | P7:  |  | psi | P11: |  | psi | P15: |  | psi |
|                                                                                                                                                                                                  |                |                                                                                                              |                                                                    |     |     |  |     |     |  |     | P6:  |  | psi | P10: |  | psi | P14: |  | psi |
|                                                                                                                                                                                                  |                |                                                                                                              |                                                                    |     |     |  |     |     |  |     | P5:  |  | psi | P9:  |  | psi | P13: |  | psi |
|                                                                                                                                                                                                  |                |                                                                                                              |                                                                    |     |     |  |     |     |  |     | P1:  |  | psi | P3:  |  | psi | P5:  |  | psi |
|                                                                                                                                                                                                  | 77             | Check                                                                                                        | DPF Soot levels and conduct a manual regeneration burn if required |     |     |  |     |     |  |     |      |  |     |      |  |     |      |  |     |
| <b>AFTER EVERY SERVICE</b>                                                                                                                                                                       |                |                                                                                                              |                                                                    |     |     |  |     |     |  |     |      |  |     |      |  |     |      |  |     |
| 78                                                                                                                                                                                               | Check          | Allfluid levels are correct & the truck is running / operating as per OEM specifications, disconnect trailer |                                                                    |     |     |  |     |     |  |     |      |  |     |      |  |     |      |  |     |
| <b>DEFECTS / COMENTS &amp; PARTS TO BE ORDERED</b>                                                                                                                                               |                |                                                                                                              |                                                                    |     |     |  |     |     |  |     |      |  |     |      |  |     |      |  |     |
|                                                                                                                                                                                                  |                |                                                                                                              |                                                                    |     |     |  |     |     |  |     |      |  |     |      |  |     |      |  |     |
| <b>SERVICE COMPLETION DECLARATION</b>                                                                                                                                                            |                |                                                                                                              |                                                                    |     |     |  |     |     |  |     |      |  |     |      |  |     |      |  |     |
| On signing / initialling this service report you deem that this service has been thoroughly completed. The equipment is in a safe and operational condition at the time of inspection / service. |                |                                                                                                              |                                                                    |     |     |  |     |     |  |     |      |  |     |      |  |     |      |  |     |
|                                                                                                                                                                                                  |                |                                                                                                              |                                                                    |     |     |  |     |     |  |     |      |  |     |      |  |     |      |  |     |
| Mechanic / Supervisor Signature                                                                                                                                                                  |                |                                                                                                              | Inspection Completion Date                                         |     |     |  |     |     |  |     |      |  |     |      |  |     |      |  |     |
| JAKE VAN RUYENBROEK<br>Name of Mechanic / Supervisor                                                                                                                                             |                |                                                                                                              |                                                                    |     |     |  |     |     |  |     |      |  |     |      |  |     |      |  |     |

# PRIME MOVER / TRUCK

## SERVICING SCHEDULE

Date :

20/2/24

LR No:

216

Rego:

Linct

VIN:

KMs/Hours: 167122

Service Type: B

## INSPECTION SCHEDULE

The following inspections require having the engine running or machine moving. Use of an operator and spotter may be required.

### IN CAB

| No. | ACTION  | CHECKS                                                                                                               | S | US | N/A | Initial |
|-----|---------|----------------------------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 1   | Inspect | Door latches & seals                                                                                                 | ✓ |    |     |         |
| 2   | Check   | Operation of window winders & door handles                                                                           | ✓ |    |     |         |
| 3   | Inspect | Seat belt for damage, fraying & anchor bolt security                                                                 | ✓ |    |     |         |
| 4   | Check   | Seat for correct operation, excessive movement, cover & cushion condition                                            | ✓ |    |     |         |
| 5   | Check   | Operation of ignition & security of key, instrument cluster, warning alarms, warning indicator lights & horn         | ✓ |    |     |         |
| 6   | Check   | Windscreen & other glass in the cab for chips or cracks                                                              | ✓ |    |     |         |
| 7   | Check   | Wipers & Washers                                                                                                     | ✓ |    |     |         |
| 8   | Check   | Park lights, headlights, spot lights, indicators, brake lights, internal cab light, reverse camera & rotating beacon | ✓ |    |     |         |
| 9   | Check   | Operation of AM / FM radio & UHF radio                                                                               | ✓ |    |     |         |
| 10  | Check   | Rear view mirrors & brackets for condition & operation                                                               | ✓ |    |     |         |
| 11  | Check   | Operation of steering wheel (lock to lock), security of the column adjustor                                          | ✓ |    |     |         |
| 12  | Check   | Clutch pedal free play operation & adjustment                                                                        |   |    | ✓   |         |
| 13  | Check   | Pedal rubbers are on & in good condition                                                                             | ✓ |    |     |         |
| 14  | Check   | For breakdown triangles, condition & complete set                                                                    | ✓ |    |     |         |
| 15  | Check   | For a wheel brace & jack                                                                                             | ✓ |    |     |         |
| 16  | Check   | For a first aid kit, in date & complete                                                                              | ✓ |    |     |         |
| 17  | Check   | Operation of E-Stops                                                                                                 |   |    | ✓   |         |
| 18  | Check   | Fire extinguisher for safety ties, gauge in green, rotate a couple of times & tap bottom to release sediment         | ✓ |    |     |         |

### RUNNING CHECKS

| No. | ACTION  | CHECKS                                                                                          | S | US | N/A | Initial |
|-----|---------|-------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 19  | Check   | For excessive exhaust smoke or abnormal noises / vibrations                                     | ✓ |    |     |         |
| 20  | Check   | For excessive time for the air pressure to build up, operation of the gauges & governor kick in | ✓ |    |     |         |
| 21  | Test    | Operation of automatic transmission kick down, lock-up & neutral inhibitor switch               | ✓ |    |     |         |
| 22  | Test    | Operation of gears, ease of selection of High / Low range & the gear splitter                   | ✓ |    |     |         |
| 23  | Inspect | Service brake operation / adjustment                                                            | ✓ |    |     |         |
| 24  | Check   | Park brake operation ( test on a 10° slope )                                                    | ✓ |    |     |         |
| 25  | Check   | For brake drag                                                                                  | ✓ |    |     |         |
| 26  | Check   | Operation of engine or exhaust brake                                                            | ✓ |    |     |         |
| 27  | Check   | The general driving characteristics of the vehicle                                              | ✓ |    |     |         |
| 28  | Check   | Operation of the PTO, raise tipper body & check for leaks                                       | ✓ |    |     |         |
| 29  | Check   | Operation of water sprayers, dribble bar & cannon                                               |   |    | ✓   |         |
| 30  | Check   | Operation of air conditioner & heater                                                           | ✓ |    |     |         |
| 31  | Check   | Using a scan tool check for fault codes                                                         | ✓ |    |     |         |
| 32  | Conduct | DPF Status & conduct a manual burn if required                                                  | ✓ |    |     |         |

## FRAME & BODY

*Park on level ground, Isolate generator, Fit body prop, Relieve all pressures, Start from front right hand side and work clockwise around generator checking each item below*

| No. | ACTION  | CHECKS                                                                                                   | S | US | N/A | Initial |
|-----|---------|----------------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 33  | Check   | Cab mounts, operation of cab tilt & locking mechanism                                                    | ✓ |    |     |         |
| 34  | Check   | Bonnet mounts, operation of bonnet tilt struts / locking mechanism                                       | ✓ |    |     |         |
| 35  | Check   | For external body damage / security of bonnet to main body, check hinges, tanks, turntable & tipper body | ✓ |    |     |         |
| 36  | Check   | Steps & handrails for integrity & security                                                               | ✓ |    |     |         |
| 37  | Check   | Mudguards, mudflaps for condition & security                                                             | ✓ |    |     |         |
| 38  | Check   | For metal fatigue in chassis rails, cross members & tow hitch frame                                      | ✓ |    |     |         |
| 39  | Check   | Hoist mounting bolts, pivot pins / hinges & hydraulic hoses                                              | ✓ |    |     |         |
| 40  | Check   | Check battery box, mountings, terminals, cables & electrolyte levels                                     | ✓ |    |     |         |
| 41  | Inspect | All air lines, valves / fittings for air leaks & chaffing                                                | ✓ |    |     |         |
| 42  | Inspect | All grease lines for damage / security & grease penetration                                              | ✓ |    |     |         |
| 43  | Inspect | Ringfeeder / Turn Table                                                                                  | ✓ |    |     |         |
| 44  | Check   | Hazard warning / component location Decals                                                               | ✓ |    |     |         |
| 45  | Inspect | Electrical harnesses / junction boxes for chaffing & dust sealing                                        | ✓ |    |     |         |

## UNDER BONNET / ENGINE BAY

| No. | ACTION            | CHECKS                                                                                                | S | US | N/A | Initial |
|-----|-------------------|-------------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 46  | Inspect           | Exhaust manifolds / covers, bolts, turbo, piping for any leaks & security                             | ✓ |    |     |         |
| 47  | Inspect / Tighten | Air induction boxes / hoses / piping / fittings for damage & presence of dusting                      | ✓ |    |     |         |
| 48  | Inspect           | Fuel pump / pipes / hoses / clamps, for leakage & movement                                            | ✓ |    |     |         |
| 49  | Inspect           | Engine for oil leaks & damaged hoses                                                                  | ✓ |    |     |         |
| 50  | Check             | Engine mounts for wear & security                                                                     | ✓ |    |     |         |
| 51  | Check             | Water pump "tell tail" for leakage or blockage                                                        | ✓ |    |     |         |
| 52  | Check             | Alternator pulley, mountings, bearings & idler pulleys                                                | ✓ |    |     |         |
| 53  | Check             | Air Conditioner compressor pulley, mountings, hose connections for leakage & movement                 | ✓ |    |     |         |
| 54  | Inspect           | Fan, alternator, air conditioner belts for condition & tension                                        | ✓ |    |     |         |
| 55  | Inspect           | Fan blades for cracks, wear, damage & security                                                        | ✓ |    |     |         |
| 56  | Check             | Radiator mountings, coolant leakage & air flow through radiator                                       | ✓ |    |     |         |
| 57  | Inspect           | Coolant / heater hoses / clamps for condition, leaks & tightness                                      | ✓ |    |     |         |
| 58  | Inspect           | Power steering box for oil leaks, excessive movement, security of steering column & drag link         | ✓ |    |     |         |
| 59  | Inspect           | Steering column universal joints, slip joint & mountings                                              | ✓ |    |     |         |
| 60  | Inspect           | Electrical harnesses / connections for damage & security                                              | ✓ |    |     |         |
| 61  | Inspect           | Engine bay is free of combustible materials i.e. leaves, sticks & rags for prevention of fire hazards | ✓ |    |     |         |

## POWER TRAIN & AXLES

*Jack up all axles to check wheel bearings, steering linkages & kingpins*

| No. | ACTION  | CHECKS                                                                                                            | S | US | N/A | Initial |
|-----|---------|-------------------------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 62  | Check   | Front wheel bearings adjust or replace if necessary                                                               | ✓ |    |     |         |
| 63  | Check   | For movement in all kingpins & steering ball joints & linkages, while jacked up grease all points on all kingpins | ✓ |    |     |         |
| 64  | Inspect | All shackle pins, bushes, shock absorbers, U Bolts, wear plates for wear, movement & tension                      | ✓ |    |     |         |
| 65  | Inspect | Transmission, PTO for oil leaks, mounts & lubrication of pivot points                                             | ✓ |    |     |         |
| 66  | Inspect | Universal joints, slip joints, centre bearings for movement & rubber deterioration                                | ✓ |    |     |         |
| 67  | Inspect | Differentials for oil leaks, excessive movement in input & output shafts                                          | ✓ |    |     |         |
| 68  | Check   | Torque rod arms, pins, bushes, mounting bolts for & tension                                                       | ✓ |    |     |         |
| 69  | Check   | Rear wheel bearings adjust or replace if necessary                                                                | ✓ |    |     |         |





ROADS, STRUCTURES &amp; MAINTENANCE

## PRIME MOVER / TRUCK

## SERVICING SCHEDULE

Date : 24/4/24  
 LR No: 216  
 Rego: Linnet 1

VIN:  
 KMs/Hours: 191311  
 Service Type: 20000 KM

## INSPECTION SCHEDULE

The following inspections require having the engine running or machine moving. Use of an operator and spotter may be required.

## IN CAB

| No. | ACTION  | CHECKS                                                                                                               | S | US | N/A | Initial |
|-----|---------|----------------------------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 1   | Inspect | Door latches & seals                                                                                                 | ✓ |    |     |         |
| 2   | Check   | Operation of window winders & door handles                                                                           | ✓ |    |     |         |
| 3   | Inspect | Seat belt for damage, fraying & anchor bolt security                                                                 | ✓ |    |     |         |
| 4   | Check   | Seat for correct operation, excessive movement, cover & cushion condition                                            | ✓ |    |     |         |
| 5   | Check   | Operation of ignition & security of key, instrument cluster, warning alarms, warning indicator lights & horn         | ✓ |    |     |         |
| 6   | Check   | Windscreen & other glass in the cab for chips or cracks                                                              |   | ✓  |     |         |
| 7   | Check   | Wipers & Washers                                                                                                     | ✓ |    |     |         |
| 8   | Check   | Park lights, headlights, spot lights, indicators, brake lights, internal cab light, reverse camera & rotating beacon | ✓ |    |     |         |
| 9   | Check   | Operation of AM / FM radio & UHF radio                                                                               | ✓ |    |     |         |
| 10  | Check   | Rear view mirrors & brackets for condition & operation                                                               | ✓ |    |     |         |
| 11  | Check   | Operation of steering wheel (lock to lock), security of the column adjustor                                          | ✓ |    |     |         |
| 12  | Check   | Clutch pedal free play operation & adjustment                                                                        |   |    | ✓   |         |
| 13  | Check   | Pedal rubbers are on & in good condition                                                                             | ✓ |    |     |         |
| 14  | Check   | For breakdown triangles, condition & complete set                                                                    | ✓ |    |     |         |
| 15  | Check   | For a wheel brace & jack                                                                                             | ✓ |    |     |         |
| 16  | Check   | For a first aid kit, in date & complete                                                                              | ✓ |    |     |         |
| 17  | Check   | Operation of E-Stops                                                                                                 |   |    | ✓   |         |
| 18  | Check   | Fire extinguisher for safety ties, gauge in green, rotate a couple of times & tap bottom to release sediment         | ✓ |    |     |         |

## RUNNING CHECKS

| No. | ACTION  | CHECKS                                                                                          | S | US | N/A | Initial |
|-----|---------|-------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 19  | Check   | For excessive exhaust smoke or abnormal noises / vibrations                                     | ✓ |    |     |         |
| 20  | Check   | For excessive time for the air pressure to build up, operation of the gauges & governor kick in | ✓ |    |     |         |
| 21  | Test    | Operation of automatic transmission kick down, lock-up & neutral inhibitor switch               | ✓ |    |     |         |
| 22  | Test    | Operation of gears, ease of selection of High / Low range & the gear splitter                   | ✓ |    |     |         |
| 23  | Inspect | Service brake operation / adjustment                                                            | ✓ |    |     |         |
| 24  | Check   | Park brake operation ( test on a 10° slope )                                                    | ✓ |    |     |         |
| 25  | Check   | For brake drag                                                                                  | ✓ |    |     |         |
| 26  | Check   | Operation of engine or exhaust brake                                                            | ✓ |    |     |         |
| 27  | Check   | The general driving characteristics of the vehicle                                              | ✓ |    |     |         |
| 28  | Check   | Operation of the PTO, raise tipper body & check for leaks                                       | ✓ |    |     |         |
| 29  | Check   | Operation of water sprayers, dribble bar & cannon                                               |   |    | ✓   |         |
| 30  | Check   | Operation of air conditioner & heater                                                           | ✓ |    |     |         |
| 31  | Check   | Using a scan tool check for fault codes                                                         | ✓ |    |     |         |
| 32  | Conduct | DPF Status & conduct a manual burn if required                                                  | ✓ |    |     |         |

## FRAME & BODY

*Park on level ground, Isolate generator, Fit body prop, Relieve all pressures, Start from front right hand side and work clockwise around generator checking each item below*

| No. | ACTION  | CHECKS                                                                                                   | S | US | N/A | Initial |
|-----|---------|----------------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 33  | Check   | Cab mounts, operation of cab tilt & locking mechanism                                                    | ✓ |    |     |         |
| 34  | Check   | Bonnet mounts, operation of bonnet tilt struts / locking mechanism                                       | ✓ |    |     |         |
| 35  | Check   | For external body damage / security of bonnet to main body, check hinges, tanks, turntable & tipper body | ✓ |    |     |         |
| 36  | Check   | Steps & handrails for integrity & security                                                               | ✓ |    |     |         |
| 37  | Check   | Mudguards, mudflaps for condition & security                                                             | ✓ |    |     |         |
| 38  | Check   | For metal fatigue in chassis rails, cross members & tow hitch frame                                      | ✓ |    |     |         |
| 39  | Check   | Hoist mounting bolts, pivot pins / hinges & hydraulic hoses                                              | ✓ |    |     |         |
| 40  | Check   | Check battery box, mountings, terminals, cables & electrolyte levels                                     | ✓ |    |     |         |
| 41  | Inspect | All air lines, valves / fittings for air leaks & chaffing                                                | ✓ |    |     |         |
| 42  | Inspect | All grease lines for damage / security & grease penetration                                              | ✓ |    |     |         |
| 43  | Inspect | Ringfeeder / Turn Table                                                                                  | ✓ |    |     |         |
| 44  | Check   | Hazard warning / component location Decals                                                               | ✓ |    |     |         |
| 45  | Inspect | Electrical harnesses / junction boxes for chaffing & dust sealing                                        | ✓ |    |     |         |

## UNDER BONNET / ENGINE BAY

| No. | ACTION            | CHECKS                                                                                                | S | US | N/A | Initial |
|-----|-------------------|-------------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 46  | Inspect           | Exhaust manifolds / covers, bolts, turbo, piping for any leaks & security                             | ✓ |    |     |         |
| 47  | Inspect / Tighten | Air induction boxes / hoses / piping / fittings for damage & presence of dusting                      | ✓ |    |     |         |
| 48  | Inspect           | Fuel pump / pipes / hoses / clamps, for leakage & movement                                            | ✓ |    |     |         |
| 49  | Inspect           | Engine for oil leaks & damaged hoses                                                                  | ✓ |    |     |         |
| 50  | Check             | Engine mounts for wear & security                                                                     | ✓ |    |     |         |
| 51  | Check             | Water pump "tell tail" for leakage or blockage                                                        | ✓ |    |     |         |
| 52  | Check             | Alternator pulley, mountings, bearings & idler pulleys                                                | ✓ |    |     |         |
| 53  | Check             | Air Conditioner compressor pulley, mountings, hose connections for leakage & movement                 | ✓ |    |     |         |
| 54  | Inspect           | Fan, alternator, air conditioner belts for condition & tension                                        | ✓ |    |     |         |
| 55  | Inspect           | Fan blades for cracks, wear, damage & security                                                        | ✓ |    |     |         |
| 56  | Check             | Radiator mountings, coolant leakage & air flow through radiator                                       | ✓ |    |     |         |
| 57  | Inspect           | Coolant / heater hoses / clamps for condition, leaks & tightness                                      | ✓ |    |     |         |
| 58  | Inspect           | Power steering box for oil leaks, excessive movement, security of steering column & drag link         | ✓ |    |     |         |
| 59  | Inspect           | Steering column universal joints, slip joint & mountings                                              | ✓ |    |     |         |
| 60  | Inspect           | Electrical harnesses / connections for damage & security                                              | ✓ |    |     |         |
| 61  | Inspect           | Engine bay is free of combustible materials i.e. leaves, sticks & rags for prevention of fire hazards | ✓ |    |     |         |

## POWER TRAIN & AXLES

*Jack up all axles to check wheel bearings, steering linkages & kingpins*

| No. | ACTION  | CHECKS                                                                                                            | S | US | N/A | Initial |
|-----|---------|-------------------------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 62  | Check   | Front wheel bearings adjust or replace if necessary                                                               | ✓ |    |     |         |
| 63  | Check   | For movement in all kingpins & steering ball joints & linkages, while jacked up grease all points on all kingpins | ✓ |    |     |         |
| 64  | Inspect | All shackle pins, bushes, shock absorbers, U Bolts, wear plates for wear, movement & tension                      | ✓ |    |     |         |
| 65  | Inspect | Transmission, PTO for oil leaks, mounts & lubrication of pivot points                                             | ✓ |    |     |         |
| 66  | Inspect | Universal joints, slip joints, centre bearings for movement & rubber deterioration                                | ✓ |    |     |         |
| 67  | Inspect | Differentials for oil leaks, excessive movement in input & output shafts                                          | ✓ |    |     |         |
| 68  | Check   | Torque rod arms, pins, bushes, mounting bolts for & tension                                                       | ✓ |    |     |         |
| 69  | Check   | Rear wheel bearings adjust or replace if necessary                                                                | ✓ |    |     |         |



# Mechanical Job Card

## Internal Repairs Job Card

Submitted at 5:23 PM, 23rd Apr, 2024

Created by **Jake Van Puyenbroek** at **5:22 PM, 23rd Apr, 2024** from **Mobile**  
**V.1** submitted by **Jake Van Puyenbroek** at **5:23 PM, 23rd Apr, 2024** from **Mobile**

Result ID / version

#46830 / V.1

Form ID

#176

## Form Result Details

### Q1. Time & Date

5:22 PM, 23rd Apr, 2024

### Q2. Asset

LR216 - Kenworth Prime Mover T909

### Q3. Km's or Hours

191300

### Q4. Description of Repairs or Maintenance Completed

Service  
Faults- chipped windscreens  
Orange reflector missing  
Major service next service.

### Q5. Materials, Parts or Consumables Used

X3 filters TRP

### Q6. Time Required to Complete

6

5 VP

LK 216.

## PRIME MOVER / TRUCK

### SERVICING SCHEDULE

 Date : 4/9/24  
 LR No: 216  
 Rego: \_\_\_\_\_

 VIN: \_\_\_\_\_  
 KMs/Hours: 234548  
 Service Type: 20 000 km.

### INSPECTION SCHEDULE

The following inspections require having the engine running or machine moving. Use of an operator and spotter may be required.

#### IN CAB

| No. | ACTION  | CHECKS                                                                                                               | S | US | N/A | Initial |
|-----|---------|----------------------------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 1   | Inspect | Door latches & seals                                                                                                 | ✓ |    |     |         |
| 2   | Check   | Operation of window winders & door handles                                                                           | ✓ |    |     |         |
| 3   | Inspect | Seat belt for damage, fraying & anchor bolt security                                                                 | ✓ |    |     |         |
| 4   | Check   | Seat for correct operation, excessive movement, cover & cushion condition                                            | ✓ |    |     |         |
| 5   | Check   | Operation of ignition & security of key, instrument cluster, warning alarms, warning indicator lights & horn         | ✓ |    |     |         |
| 6   | Check   | Windscreen & other glass in the cab for chips or cracks                                                              |   | ✓  |     |         |
| 7   | Check   | Wipers & Washers                                                                                                     | ✓ |    |     |         |
| 8   | Check   | Park lights, headlights, spot lights, indicators, brake lights, internal cab light, reverse camera & rotating beacon | ✓ |    |     |         |
| 9   | Check   | Operation of AM / FM radio & UHF radio                                                                               | ✓ |    |     |         |
| 10  | Check   | Rear view mirrors & brackets for condition & operation                                                               | ✓ |    |     |         |
| 11  | Check   | Operation of steering wheel (lock to lock), security of the column adjustor                                          | ✓ |    |     |         |
| 12  | Check   | Clutch pedal free play operation & adjustment                                                                        |   |    | ✓   |         |
| 13  | Check   | Pedal rubbers are on & in good condition                                                                             | ✓ |    |     |         |
| 14  | Check   | For breakdown triangles, condition & complete set                                                                    | ✓ |    |     |         |
| 15  | Check   | For a wheel brace & jack                                                                                             | ✓ |    |     |         |
| 16  | Check   | For a first aid kit, in date & complete                                                                              | ✓ |    |     |         |
| 17  | Check   | Operation of E-Stops                                                                                                 |   |    | ✓   |         |
| 18  | Check   | Fire extinguisher for safety ties, gauge in green, rotate a couple of times & tap bottom to release sediment         | ✓ |    |     |         |

#### RUNNING CHECKS

| No. | ACTION  | CHECKS                                                                                          | S | US | N/A | Initial |
|-----|---------|-------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 19  | Check   | For excessive exhaust smoke or abnormal noises / vibrations                                     | ✓ |    |     |         |
| 20  | Check   | For excessive time for the air pressure to build up, operation of the gauges & governor kick in | ✓ |    |     |         |
| 21  | Test    | Operation of automatic transmission kick down, lock-up & neutral inhibitor switch               | ✓ |    |     |         |
| 22  | Test    | Operation of gears, ease of selection of High / Low range & the gear splitter                   | ✓ |    |     |         |
| 23  | Inspect | Service brake operation / adjustment                                                            | ✓ |    |     |         |
| 24  | Check   | Park brake operation ( test on a 10° slope )                                                    | ✓ |    |     |         |
| 25  | Check   | For brake drag                                                                                  | ✓ |    |     |         |
| 26  | Check   | Operation of engine or exhaust brake                                                            | ✓ |    |     |         |
| 27  | Check   | The general driving characteristics of the vehicle                                              | ✓ |    |     |         |
| 28  | Check   | Operation of the PTO, raise tipper body & check for leaks                                       | ✓ |    |     |         |
| 29  | Check   | Operation of water sprayers, dribble bar & cannon                                               |   |    | ✓   |         |
| 30  | Check   | Operation of air conditioner & heater                                                           | ✓ |    |     |         |
| 31  | Check   | Using a scan tool check for fault codes                                                         | ✓ |    |     |         |
| 32  | Conduct | DPF Status & conduct a manual burn if required                                                  | ✓ |    |     |         |



# PRIME MOVER / TRUCK

## SERVICING SCHEDULE

Date : 3.3.25  
LR No: LR216  
Rego: LINCT1

VIN: \_\_\_\_\_  
KMs/Hours: 294000km  
Service Type: 100000km

## INSPECTION SCHEDULE

*The following inspections require having the engine running or machine moving. Use of an operator and spotter may be required.*

### IN CAB

| No. | ACTION  | CHECKS                                                                                                               | S | US | N/A | Initial |
|-----|---------|----------------------------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 1   | Inspect | Door latches & seals                                                                                                 | x |    |     |         |
| 2   | Check   | Operation of window winders & door handles                                                                           | x |    |     |         |
| 3   | Inspect | Seat belt for damage, fraying & anchor bolt security                                                                 | x |    |     |         |
| 4   | Check   | Seat for correct operation, excessive movement, cover & cushion condition                                            | x |    |     |         |
| 5   | Check   | Operation of ignition & security of key, instrument cluster, warning alarms, warning indicator lights & horn         | x |    |     |         |
| 6   | Check   | Windscreen & other glass in the cab for chips or cracks                                                              |   | x  |     |         |
| 7   | Check   | Wipers & Washers                                                                                                     | x |    |     |         |
| 8   | Check   | Park lights, headlights, spot lights, indicators, brake lights, internal cab light, reverse camera & rotating beacon | x |    |     |         |
| 9   | Check   | Operation of AM / FM radio & UHF radio                                                                               | x |    |     |         |
| 10  | Check   | Rear view mirrors & brackets for condition & operation                                                               | x |    |     |         |
| 11  | Check   | Operation of steering wheel (lock to lock), security of the column adjustor                                          | x |    |     |         |
| 12  | Check   | Clutch pedal free play operation & adjustment                                                                        |   |    | x   |         |
| 13  | Check   | Pedal rubbers are on & in good condition                                                                             | x |    |     |         |
| 14  | Check   | For breakdown triangles, condition & complete set                                                                    | x |    |     |         |
| 15  | Check   | For a wheel brace & jack                                                                                             | x |    |     |         |
| 16  | Check   | For a first aid kit, in date & complete                                                                              | x |    |     |         |
| 17  | Check   | Operation of E-Stops                                                                                                 |   |    | x   |         |
| 18  | Check   | Fire extinguisher for safety ties, gauge in green, rotate a couple of times & tap bottom to release sediment         |   |    | x   |         |

### RUNNING CHECKS

| No. | ACTION  | CHECKS                                                                                          | S | US | N/A | Initial |
|-----|---------|-------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 19  | Check   | For excessive exhaust smoke or abnormal noises / vibrations                                     | x |    |     |         |
| 20  | Check   | For excessive time for the air pressure to build up, operation of the gauges & governor kick in | x |    |     |         |
| 21  | Test    | Operation of automatic transmission kick down, lock-up & neutral inhibitor switch               | x |    |     |         |
| 22  | Test    | Operation of gears, ease of selection of High / Low range & the gear splitter                   | x |    |     |         |
| 23  | Inspect | Service brake operation / adjustment                                                            | x |    |     |         |
| 24  | Check   | Park brake operation ( test on a 10° slope )                                                    | x |    |     |         |
| 25  | Check   | For brake drag                                                                                  | x |    |     |         |
| 26  | Check   | Operation of engine or exhaust brake                                                            | x |    |     |         |
| 27  | Check   | The general driving characteristics of the vehicle                                              | x |    |     |         |
| 28  | Check   | Operation of the PTO, raise tipper body & check for leaks                                       | x |    |     |         |
| 29  | Check   | Operation of water sprayers, dribble bar & cannon                                               |   |    | x   |         |
| 30  | Check   | Operation of air conditioner & heater                                                           | x |    |     |         |
| 31  | Check   | Using a scan tool check for fault codes                                                         | x |    |     |         |
| 32  | Conduct | DPF Status & conduct a manual burn if required                                                  | x |    |     |         |

| FRAME & BODY                                                                                                                                                                        |                   |                                                                                                                   |   |    |     |         |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------|-------------------------------------------------------------------------------------------------------------------|---|----|-----|---------|
| <i>Park on level ground, Isolate generator, Fit body prop, Relieve all pressures, Start from front right hand side and work clockwise around generator checking each item below</i> |                   |                                                                                                                   |   |    |     |         |
| No.                                                                                                                                                                                 | ACTION            | CHECKS                                                                                                            | S | US | N/A | Initial |
| 33                                                                                                                                                                                  | Check             | Cab mounts, operation of cab tilt & locking mechanism                                                             | x |    |     |         |
| 34                                                                                                                                                                                  | Check             | Bonnet mounts, operation of bonnet tilt struts / locking mechanism                                                | x |    |     |         |
| 35                                                                                                                                                                                  | Check             | For external body damage / security of bonnet to main body, check hinges, tanks, turntable & tipper body          |   |    | x   |         |
| 36                                                                                                                                                                                  | Check             | Steps & handrails for integrity & security                                                                        | x |    |     |         |
| 37                                                                                                                                                                                  | Check             | Mudguards, mudflaps for condition & security                                                                      | x |    |     |         |
| 38                                                                                                                                                                                  | Check             | For metal fatigue in chassis rails, cross members & tow hitch frame                                               | x |    |     |         |
| 39                                                                                                                                                                                  | Check             | Hoist mounting bolts, pivot pins / hinges & hydraulic hoses                                                       | x |    |     |         |
| 40                                                                                                                                                                                  | Check             | Check battery box, mountings, terminals, cables & electrolyte levels                                              | x |    |     |         |
| 41                                                                                                                                                                                  | Inspect           | All air lines, valves / fittings for air leaks & chaffing                                                         | x |    |     |         |
| 42                                                                                                                                                                                  | Inspect           | All grease lines for damage / security & grease penetration                                                       | x |    |     |         |
| 43                                                                                                                                                                                  | Inspect           | Ringfeeder / Turn Table                                                                                           | x |    |     |         |
| 44                                                                                                                                                                                  | Check             | Hazard warning / component location Decals                                                                        | x |    |     |         |
| 45                                                                                                                                                                                  | Inspect           | Electrical harnesses / junction boxes for chaffing & dust sealing                                                 | x |    |     |         |
| UNDER BONNET / ENGINE BAY                                                                                                                                                           |                   |                                                                                                                   |   |    |     |         |
| No.                                                                                                                                                                                 | ACTION            | CHECKS                                                                                                            | S | US | N/A | Initial |
| 46                                                                                                                                                                                  | Inspect           | Exhaust manifolds / covers, bolts, turbo, piping for any leaks & security                                         | x |    |     |         |
| 47                                                                                                                                                                                  | Inspect / Tighten | Air induction boxes / hoses / piping / fittings for damage & presence of dusting                                  | x |    |     |         |
| 48                                                                                                                                                                                  | Inspect           | Fuel pump / pipes / hoses / clamps, for leakage & movement                                                        | x |    |     |         |
| 49                                                                                                                                                                                  | Inspect           | Engine for oil leaks & damaged hoses                                                                              | x |    |     |         |
| 50                                                                                                                                                                                  | Check             | Engine mounts for wear & security                                                                                 | x |    |     |         |
| 51                                                                                                                                                                                  | Check             | Water pump "tell tail" for leakage or blockage                                                                    | x |    |     |         |
| 52                                                                                                                                                                                  | Check             | Alternator pulley, mountings, bearings & idler pulleys                                                            | x |    |     |         |
| 53                                                                                                                                                                                  | Check             | Air Conditioner compressor pulley, mountings, hose connections for leakage & movement                             | x |    |     |         |
| 54                                                                                                                                                                                  | Inspect           | Fan, alternator, air conditioner belts for condition & tension                                                    | x |    |     |         |
| 55                                                                                                                                                                                  | Inspect           | Fan blades for cracks, wear, damage & security                                                                    | x |    |     |         |
| 56                                                                                                                                                                                  | Check             | Radiator mountings, coolant leakage & air flow through radiator                                                   | x |    |     |         |
| 57                                                                                                                                                                                  | Inspect           | Coolant / heater hoses / clamps for condition, leaks & tightness                                                  | x |    |     |         |
| 58                                                                                                                                                                                  | Inspect           | Power steering box for oil leaks, excessive movement, security of steering column & drag link                     | x |    |     |         |
| 59                                                                                                                                                                                  | Inspect           | Steering column universal joints, slip joint & mountings                                                          | x |    |     |         |
| 60                                                                                                                                                                                  | Inspect           | Electrical harnesses / connections for damage & security                                                          | x |    |     |         |
| 61                                                                                                                                                                                  | Inspect           | Engine bay is free of combustible materials i.e. leaves, sticks & rags for prevention of fire hazards             | x |    |     |         |
| POWER TRAIN & AXLES                                                                                                                                                                 |                   |                                                                                                                   |   |    |     |         |
| <i>Jack up all axles to check wheel bearings, steering linkages &amp; kingpins</i>                                                                                                  |                   |                                                                                                                   |   |    |     |         |
| No.                                                                                                                                                                                 | ACTION            | CHECKS                                                                                                            | S | US | N/A | Initial |
| 62                                                                                                                                                                                  | Check             | Front wheel bearings adjust or replace if necessary                                                               | x |    |     |         |
| 63                                                                                                                                                                                  | Check             | For movement in all kingpins & steering ball joints & linkages, while jacked up grease all points on all kingpins | x |    |     |         |
| 64                                                                                                                                                                                  | Inspect           | All shackle pins, bushes, shock absorbers, U Bolts, wear plates for wear, movement & tension                      | x |    |     |         |
| 65                                                                                                                                                                                  | Inspect           | Transmission, PTO for oil leaks, mounts & lubrication of pivot points                                             | x |    |     |         |
| 66                                                                                                                                                                                  | Inspect           | Universal joints, slip joints, centre bearings for movement & rubber deterioration                                | x |    |     |         |
| 67                                                                                                                                                                                  | Inspect           | Differentials for oil leaks, excessive movement in input & output shafts                                          | x |    |     |         |
| 68                                                                                                                                                                                  | Check             | Torque rod arms, pins, bushes, mounting bolts for & tension                                                       | x |    |     |         |
| 69                                                                                                                                                                                  | Check             | Rear wheel bearings adjust or replace if necessary                                                                | x |    |     |         |

[illegible]

# PRIME MOVER / TRUCK

## SERVICING SCHEDULE

Date : 3/05/2025  
LR No: 216  
Rego: LINCT1

VIN: 645000000NA474296  
KMs/Hours: 316662KM  
Service Type: 10000KM

## INSPECTION SCHEDULE

The following inspections require having the engine running or machine moving. Use of an operator and spotter may be required.

### IN CAB

| No. | ACTION  | CHECKS                                                                                                               | S | US | N/A | Initial |
|-----|---------|----------------------------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 1   | Inspect | Door latches & seals                                                                                                 | x |    |     | jvp     |
| 2   | Check   | Operation of window winders & door handles                                                                           | x |    |     | jvp     |
| 3   | Inspect | Seat belt for damage, fraying & anchor bolt security                                                                 | x |    |     | jvp     |
| 4   | Check   | Seat for correct operation, excessive movement, cover & cushion condition                                            | x |    |     | jvp     |
| 5   | Check   | Operation of ignition & security of key, instrument cluster, warning alarms, warning indicator lights & horn         | x |    |     | jvp     |
| 6   | Check   | Windscreen & other glass in the cab for chips or cracks                                                              |   | x  |     | jvp     |
| 7   | Check   | Wipers & Washers                                                                                                     | x |    |     | jvp     |
| 8   | Check   | Park lights, headlights, spot lights, indicators, brake lights, internal cab light, reverse camera & rotating beacon | x |    |     | jvp     |
| 9   | Check   | Operation of AM / FM radio & UHF radio                                                                               | x |    |     | jvp     |
| 10  | Check   | Rear view mirrors & brackets for condition & operation                                                               | x |    |     | jvp     |
| 11  | Check   | Operation of steering wheel (lock to lock), security of the column adjustor                                          | x |    |     | jvp     |
| 12  | Check   | Clutch pedal free play operation & adjustment                                                                        |   |    | x   | jvp     |
| 13  | Check   | Pedal rubbers are on & in good condition                                                                             | x |    |     | jvp     |
| 14  | Check   | For breakdown triangles, condition & complete set                                                                    | x |    |     | jvp     |
| 15  | Check   | For a wheel brace & jack                                                                                             | x |    |     | jvp     |
| 16  | Check   | For a first aid kit, in date & complete                                                                              | x |    |     | jvp     |
| 17  | Check   | Operation of E-Stops                                                                                                 |   |    | x   | jvp     |
| 18  | Check   | Fire extinguisher for safety ties, gauge in green, rotate a couple of times & tap bottom to release sediment         | x |    |     | jvp     |

### RUNNING CHECKS

| No. | ACTION  | CHECKS                                                                                          | S | US | N/A | Initial |
|-----|---------|-------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 19  | Check   | For excessive exhaust smoke or abnormal noises / vibrations                                     | x |    |     | jvp     |
| 20  | Check   | For excessive time for the air pressure to build up, operation of the gauges & governor kick in | x |    |     | jvp     |
| 21  | Test    | Operation of automatic transmission kick down, lock-up & neutral inhibitor switch               | x |    |     | jvp     |
| 22  | Test    | Operation of gears, ease of selection of High / Low range & the gear splitter                   | x |    |     | jvp     |
| 23  | Inspect | Service brake operation / adjustment                                                            | x |    |     | jvp     |
| 24  | Check   | Park brake operation ( test on a 10° slope )                                                    | x |    |     | jvp     |
| 25  | Check   | For brake drag                                                                                  | x |    |     | jvp     |
| 26  | Check   | Operation of engine or exhaust brake                                                            | x |    |     | jvp     |
| 27  | Check   | The general driving characteristics of the vehicle                                              | x |    |     | jvp     |
| 28  | Check   | Operation of the PTO, raise tipper body & check for leaks                                       | x |    |     | jvp     |
| 29  | Check   | Operation of water sprayers, dribble bar & cannon                                               |   |    | x   | jvp     |
| 30  | Check   | Operation of air conditioner & heater                                                           | x |    |     | jvp     |
| 31  | Check   | Using a scan tool check for fault codes                                                         | x |    |     | jvp     |
| 32  | Conduct | DPF Status & conduct a manual burn if required                                                  | x |    |     | jvp     |

| FRAME & BODY                                                                                                                                                                 |                   |                                                                                                                   |   |    |     |         |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------|-------------------------------------------------------------------------------------------------------------------|---|----|-----|---------|
| Park on level ground, Isolate generator, Fit body prop, Relieve all pressures, Start from front right hand side and work clockwise around generator checking each item below |                   |                                                                                                                   |   |    |     |         |
| No.                                                                                                                                                                          | ACTION            | CHECKS                                                                                                            | S | US | N/A | Initial |
| 33                                                                                                                                                                           | Check             | Cab mounts, operation of cab tilt & locking mechanism                                                             | x |    |     | jvp     |
| 34                                                                                                                                                                           | Check             | Bonnet mounts, operation of bonnet tilt struts / locking mechanism                                                | x |    |     | jvp     |
| 35                                                                                                                                                                           | Check             | For external body damage / security of bonnet to main body, check hinges, tanks, turntable & tipper body          | x |    |     | jvp     |
| 36                                                                                                                                                                           | Check             | Steps & handrails for integrity & security                                                                        | x |    |     | jvp     |
| 37                                                                                                                                                                           | Check             | Mudguards, mudflaps for condition & security                                                                      | x |    |     | jvp     |
| 38                                                                                                                                                                           | Check             | For metal fatigue in chassis rails, cross members & tow hitch frame                                               | x |    |     | jvp     |
| 39                                                                                                                                                                           | Check             | Hoist mounting bolts, pivot pins / hinges & hydraulic hoses                                                       | x |    |     | jvp     |
| 40                                                                                                                                                                           | Check             | Check battery box, mountings, terminals, cables & electrolyte levels                                              | x |    |     | jvp     |
| 41                                                                                                                                                                           | Inspect           | All air lines, valves / fittings for air leaks & chaffing                                                         | x |    |     | jvp     |
| 42                                                                                                                                                                           | Inspect           | All grease lines for damage / security & grease penetration                                                       | x |    |     | jvp     |
| 43                                                                                                                                                                           | Inspect           | Ringfeeder / Turn Table                                                                                           | x |    |     | jvp     |
| 44                                                                                                                                                                           | Check             | Hazard warning / component location Decals                                                                        | x |    |     | jvp     |
| 45                                                                                                                                                                           | Inspect           | Electrical harnesses / junction boxes for chaffing & dust sealing                                                 | x |    |     | jvp     |
| UNDER BONNET / ENGINE BAY                                                                                                                                                    |                   |                                                                                                                   |   |    |     |         |
| No.                                                                                                                                                                          | ACTION            | CHECKS                                                                                                            | S | US | N/A | Initial |
| 46                                                                                                                                                                           | Inspect           | Exhaust manifolds / covers, bolts, turbo, piping for any leaks & security                                         | x |    |     | jvp     |
| 47                                                                                                                                                                           | Inspect / Tighten | Air induction boxes / hoses / piping / fittings for damage & presence of dusting                                  | x |    |     | jvp     |
| 48                                                                                                                                                                           | Inspect           | Fuel pump / pipes / hoses / clamps, for leakage & movement                                                        | x |    |     | jvp     |
| 49                                                                                                                                                                           | Inspect           | Engine for oil leaks & damaged hoses                                                                              | x |    |     | jvp     |
| 50                                                                                                                                                                           | Check             | Engine mounts for wear & security                                                                                 | x |    |     | jvp     |
| 51                                                                                                                                                                           | Check             | Water pump "tell tail" for leakage or blockage                                                                    | x |    |     | jvp     |
| 52                                                                                                                                                                           | Check             | Alternator pulley, mountings, bearings & idler pulleys                                                            | x |    |     | jvp     |
| 53                                                                                                                                                                           | Check             | Air Conditioner compressor pulley, mountings, hose connections for leakage & movement                             | x |    |     | jvp     |
| 54                                                                                                                                                                           | Inspect           | Fan, alternator, air conditioner belts for condition & tension                                                    | x |    |     | jvp     |
| 55                                                                                                                                                                           | Inspect           | Fan blades for cracks, wear, damage & security                                                                    | x |    |     | jvp     |
| 56                                                                                                                                                                           | Check             | Radiator mountings, coolant leakage & air flow through radiator                                                   | x |    |     | jvp     |
| 57                                                                                                                                                                           | Inspect           | Coolant / heater hoses / clamps for condition, leaks & tightness                                                  | x |    |     | jvp     |
| 58                                                                                                                                                                           | Inspect           | Power steering box for oil leaks, excessive movement, security of steering column & drag link                     | x |    |     | jvp     |
| 59                                                                                                                                                                           | Inspect           | Steering column universal joints, slip joint & mountings                                                          | x |    |     | jvp     |
| 60                                                                                                                                                                           | Inspect           | Electrical harnesses / connections for damage & security                                                          | x |    |     | jvp     |
| 61                                                                                                                                                                           | Inspect           | Engine bay is free of combustible materials i.e. leaves, sticks & rags for prevention of fire hazards             | x |    |     | jvp     |
| POWER TRAIN & AXLES                                                                                                                                                          |                   |                                                                                                                   |   |    |     |         |
| Jack up all axles to check wheel bearings, steering linkages & kingpins                                                                                                      |                   |                                                                                                                   |   |    |     |         |
| No.                                                                                                                                                                          | ACTION            | CHECKS                                                                                                            | S | US | N/A | Initial |
| 62                                                                                                                                                                           | Check             | Front wheel bearings adjust or replace if necessary                                                               | x |    |     | jvp     |
| 63                                                                                                                                                                           | Check             | For movement in all kingpins & steering ball joints & linkages, while jacked up grease all points on all kingpins | x |    |     | jvp     |
| 64                                                                                                                                                                           | Inspect           | All shackle pins, bushes, shock absorbers, U Bolts, wear plates for wear, movement & tension                      | x |    |     | jvp     |
| 65                                                                                                                                                                           | Inspect           | Transmission, PTO for oil leaks, mounts & lubrication of pivot points                                             | x |    |     | jvp     |
| 66                                                                                                                                                                           | Inspect           | Universal joints, slip joints, centre bearings for movement & rubber deterioration                                | x |    |     | jvp     |
| 67                                                                                                                                                                           | Inspect           | Differentials for oil leaks, excessive movement in input & output shafts                                          | x |    |     | jvp     |
| 68                                                                                                                                                                           | Check             | Torque rod arms, pins, bushes, mounting bolts for & tension                                                       | x |    |     | jvp     |
| 69                                                                                                                                                                           | Check             | Rear wheel bearings adjust or replace if necessary                                                                | x |    |     | jvp     |

|                                                                                                                                                                                                  |                                                            |                                                                                                              |    |     |     |  |     |     |     |                                             |      |     |      |      |     |     |  |     |     |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|----|-----|-----|--|-----|-----|-----|---------------------------------------------|------|-----|------|------|-----|-----|--|-----|-----|
| 70                                                                                                                                                                                               | Inspect                                                    | All brake linings, pads for thickness, adjustment & adjust if required                                       |    |     |     |  |     |     |     |                                             |      | x   |      |      | jvp |     |  |     |     |
| 71                                                                                                                                                                                               | Inspect                                                    | Brake linings or pads, through inspection hole, check adjustment                                             |    |     |     |  |     |     |     |                                             |      | x   |      |      | jvp |     |  |     |     |
| 72                                                                                                                                                                                               | Check                                                      | Operation / wear of S cams & brake boosters                                                                  |    |     |     |  |     |     |     |                                             |      | x   |      |      | jvp |     |  |     |     |
| 73                                                                                                                                                                                               | Check                                                      | Airbags for leaks or damage to cones                                                                         |    |     |     |  |     |     |     |                                             |      | x   |      |      | jvp |     |  |     |     |
| 74                                                                                                                                                                                               | Inspect                                                    | Wheel rims for damage, cracks missing or loose wheel nuts                                                    |    |     |     |  |     |     |     |                                             |      | x   |      |      | jvp |     |  |     |     |
| 75                                                                                                                                                                                               | Inspect                                                    | Tyres for damage, tread depth & pressure                                                                     |    |     |     |  |     |     |     |                                             |      |     |      |      | jvp |     |  |     |     |
|                                                                                                                                                                                                  | Depth / Damage                                             | P2:                                                                                                          | 20 | mm  | P4: |  | mm  | P8: | 22  | mm                                          | P12: | 22  |      | P16: |     | mm  |  |     | jvp |
|                                                                                                                                                                                                  |                                                            |                                                                                                              |    |     |     |  | P7: | 22  | mm  | P11:                                        | 22   | mm  | P15: |      | mm  |     |  | jvp |     |
|                                                                                                                                                                                                  |                                                            |                                                                                                              |    |     |     |  | P6: | 22  | mm  | P10:                                        | 22   | mm  | P14: |      | mm  |     |  | jvp |     |
|                                                                                                                                                                                                  |                                                            | P1:                                                                                                          | 20 | mm  | P3: |  | mm  | P5: | 22  | mm                                          | P9:  | 22  | mm   | P13: |     | mm  |  |     | jvp |
| 76                                                                                                                                                                                               | Pressure                                                   | P2:                                                                                                          |    | psi | P4: |  | psi | P8: |     | psi                                         | P12: |     | psi  | P16: |     | psi |  |     | jvp |
|                                                                                                                                                                                                  |                                                            |                                                                                                              |    |     |     |  | P7: |     | psi | P11:                                        |      | psi | P15: |      | psi |     |  | jvp |     |
|                                                                                                                                                                                                  |                                                            |                                                                                                              |    |     |     |  | P6: |     | psi | P10:                                        |      | psi | P14: |      | psi |     |  | jvp |     |
|                                                                                                                                                                                                  |                                                            | P1:                                                                                                          |    | psi | P3: |  | psi | P5: |     | psi                                         | P9:  |     | psi  | P13: |     | psi |  |     | jvp |
| 77                                                                                                                                                                                               | Check                                                      | DPF Soot levels and conduct a manual regeneration burn if required                                           |    |     |     |  |     |     |     |                                             |      | x   |      |      | jvp |     |  |     |     |
| <b>AFTER EVERY SERVICE</b>                                                                                                                                                                       |                                                            |                                                                                                              |    |     |     |  |     |     |     |                                             |      |     |      |      |     |     |  |     |     |
| 78                                                                                                                                                                                               | Check                                                      | Allfluid levels are correct & the truck is running / operating as per OEM specifications, disconnect trailer |    |     |     |  |     |     |     |                                             |      | x   |      |      | jvp |     |  |     |     |
| <b>DEFECTS / COMENTS &amp; PARTS TO BE ORDERED</b>                                                                                                                                               |                                                            |                                                                                                              |    |     |     |  |     |     |     |                                             |      |     |      |      |     |     |  |     |     |
|                                                                                                                                                                                                  | chip in left and right windscreen                          |                                                                                                              |    |     |     |  |     |     |     |                                             |      |     |      |      |     |     |  |     |     |
|                                                                                                                                                                                                  | power steering box leak                                    |                                                                                                              |    |     |     |  |     |     |     |                                             |      |     |      |      |     |     |  |     |     |
|                                                                                                                                                                                                  | noisey idler bearing on the front of then engine ( fixed ) |                                                                                                              |    |     |     |  |     |     |     |                                             |      |     |      |      |     |     |  |     |     |
|                                                                                                                                                                                                  | left mirror lights loose/ broken ( fixed )                 |                                                                                                              |    |     |     |  |     |     |     |                                             |      |     |      |      |     |     |  |     |     |
|                                                                                                                                                                                                  | left 3RD mud guard pole loose ( fixed )                    |                                                                                                              |    |     |     |  |     |     |     |                                             |      |     |      |      |     |     |  |     |     |
|                                                                                                                                                                                                  | cabin filter cover broken ( fixed )                        |                                                                                                              |    |     |     |  |     |     |     |                                             |      |     |      |      |     |     |  |     |     |
|                                                                                                                                                                                                  |                                                            |                                                                                                              |    |     |     |  |     |     |     |                                             |      |     |      |      |     |     |  |     |     |
|                                                                                                                                                                                                  |                                                            |                                                                                                              |    |     |     |  |     |     |     |                                             |      |     |      |      |     |     |  |     |     |
|                                                                                                                                                                                                  |                                                            |                                                                                                              |    |     |     |  |     |     |     |                                             |      |     |      |      |     |     |  |     |     |
|                                                                                                                                                                                                  |                                                            |                                                                                                              |    |     |     |  |     |     |     |                                             |      |     |      |      |     |     |  |     |     |
|                                                                                                                                                                                                  |                                                            |                                                                                                              |    |     |     |  |     |     |     |                                             |      |     |      |      |     |     |  |     |     |
|                                                                                                                                                                                                  |                                                            |                                                                                                              |    |     |     |  |     |     |     |                                             |      |     |      |      |     |     |  |     |     |
|                                                                                                                                                                                                  |                                                            |                                                                                                              |    |     |     |  |     |     |     |                                             |      |     |      |      |     |     |  |     |     |
|                                                                                                                                                                                                  |                                                            |                                                                                                              |    |     |     |  |     |     |     |                                             |      |     |      |      |     |     |  |     |     |
|                                                                                                                                                                                                  |                                                            |                                                                                                              |    |     |     |  |     |     |     |                                             |      |     |      |      |     |     |  |     |     |
|                                                                                                                                                                                                  |                                                            |                                                                                                              |    |     |     |  |     |     |     |                                             |      |     |      |      |     |     |  |     |     |
|                                                                                                                                                                                                  |                                                            |                                                                                                              |    |     |     |  |     |     |     |                                             |      |     |      |      |     |     |  |     |     |
| <b>SERVICE COMPLETION DECLARATION</b>                                                                                                                                                            |                                                            |                                                                                                              |    |     |     |  |     |     |     |                                             |      |     |      |      |     |     |  |     |     |
| On signing / initialling this service report you deem that this service has been thoroughly completed. The equipment is in a safe and operational condition at the time of inspection / service. |                                                            |                                                                                                              |    |     |     |  |     |     |     |                                             |      |     |      |      |     |     |  |     |     |
| <u>jake van puyenbroek</u><br>Mechanic / Supervisor Signature                                                                                                                                    |                                                            |                                                                                                              |    |     |     |  |     |     |     | <u>3.5.25</u><br>Inspection Completion Date |      |     |      |      |     |     |  |     |     |
| <u>jvp</u><br>Name of Mechanic / Supervisor                                                                                                                                                      |                                                            |                                                                                                              |    |     |     |  |     |     |     |                                             |      |     |      |      |     |     |  |     |     |

## PRIME MOVER / TRUCK

### SERVICING SCHEDULE

Date : 23.6.25  
LR No: LR216  
Rego: LINCT1

VIN: 6F5000000NA474296  
KMs/Hours: 337068KM  
Service Type: 20000KM

### INSPECTION SCHEDULE

*The following inspections require having the engine running or machine moving. Use of an operator and spotter may be required.*

#### IN CAB

| No. | ACTION  | CHECKS                                                                                                               | S | US | N/A | Initial |
|-----|---------|----------------------------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 1   | Inspect | Door latches & seals                                                                                                 | x |    |     |         |
| 2   | Check   | Operation of window winders & door handles                                                                           | x |    |     |         |
| 3   | Inspect | Seat belt for damage, fraying & anchor bolt security                                                                 | x |    |     |         |
| 4   | Check   | Seat for correct operation, excessive movement, cover & cushion condition                                            | x |    |     |         |
| 5   | Check   | Operation of ignition & security of key, instrument cluster, warning alarms, warning indicator lights & horn         | x |    |     |         |
| 6   | Check   | Windscreen & other glass in the cab for chips or cracks                                                              |   | x  |     |         |
| 7   | Check   | Wipers & Washers                                                                                                     | x |    |     |         |
| 8   | Check   | Park lights, headlights, spot lights, indicators, brake lights, internal cab light, reverse camera & rotating beacon | x |    |     |         |
| 9   | Check   | Operation of AM / FM radio & UHF radio                                                                               | x |    |     |         |
| 10  | Check   | Rear view mirrors & brackets for condition & operation                                                               | x |    |     |         |
| 11  | Check   | Operation of steering wheel (lock to lock), security of the column adjustor                                          | x |    |     |         |
| 12  | Check   | Clutch pedal free play operation & adjustment                                                                        |   |    | x   |         |
| 13  | Check   | Pedal rubbers are on & in good condition                                                                             | x |    |     |         |
| 14  | Check   | For breakdown triangles, condition & complete set                                                                    | x |    |     |         |
| 15  | Check   | For a wheel brace & jack                                                                                             | x |    |     |         |
| 16  | Check   | For a first aid kit, in date & complete                                                                              | x |    |     |         |
| 17  | Check   | Operation of E-Stops                                                                                                 |   |    | x   |         |
| 18  | Check   | Fire extinguisher for safety ties, gauge in green, rotate a couple of times & tap bottom to release sediment         | x |    |     |         |

#### RUNNING CHECKS

| No. | ACTION  | CHECKS                                                                                          | S | US | N/A | Initial |
|-----|---------|-------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 19  | Check   | For excessive exhaust smoke or abnormal noises / vibrations                                     | x |    |     |         |
| 20  | Check   | For excessive time for the air pressure to build up, operation of the gauges & governor kick in | x |    |     |         |
| 21  | Test    | Operation of automatic transmission kick down, lock-up & neutral inhibitor switch               | x |    |     |         |
| 22  | Test    | Operation of gears, ease of selection of High / Low range & the gear splitter                   | x |    |     |         |
| 23  | Inspect | Service brake operation / adjustment                                                            | x |    |     |         |
| 24  | Check   | Park brake operation ( test on a 10° slope )                                                    | x |    |     |         |
| 25  | Check   | For brake drag                                                                                  | x |    |     |         |
| 26  | Check   | Operation of engine or exhaust brake                                                            | x |    |     |         |
| 27  | Check   | The general driving characteristics of the vehicle                                              | x |    |     |         |
| 28  | Check   | Operation of the PTO, raise tipper body & check for leaks                                       | x |    |     |         |
| 29  | Check   | Operation of water sprayers, dribble bar & cannon                                               |   |    | x   |         |
| 30  | Check   | Operation of air conditioner & heater                                                           | x |    |     |         |
| 31  | Check   | Using a scan tool check for fault codes                                                         | x |    |     |         |
| 32  | Conduct | DPF Status & conduct a manual burn if required                                                  | x |    |     |         |

| FRAME & BODY                                                                                                                                                                        |                   |                                                                                                                   |   |    |     |         |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------|-------------------------------------------------------------------------------------------------------------------|---|----|-----|---------|
| <i>Park on level ground, Isolate generator, Fit body prop, Relieve all pressures, Start from front right hand side and work clockwise around generator checking each item below</i> |                   |                                                                                                                   |   |    |     |         |
| No.                                                                                                                                                                                 | ACTION            | CHECKS                                                                                                            | S | US | N/A | Initial |
| 33                                                                                                                                                                                  | Check             | Cab mounts, operation of cab tilt & locking mechanism                                                             | x |    |     |         |
| 34                                                                                                                                                                                  | Check             | Bonnet mounts, operation of bonnet tilt struts / locking mechanism                                                | x |    |     |         |
| 35                                                                                                                                                                                  | Check             | For external body damage / security of bonnet to main body, check hinges, tanks, turntable & tipper body          | x |    |     |         |
| 36                                                                                                                                                                                  | Check             | Steps & handrails for integrity & security                                                                        | x |    |     |         |
| 37                                                                                                                                                                                  | Check             | Mudguards, mudflaps for condition & security                                                                      | x |    |     |         |
| 38                                                                                                                                                                                  | Check             | For metal fatigue in chassis rails, cross members & tow hitch frame                                               | x |    |     |         |
| 39                                                                                                                                                                                  | Check             | Hoist mounting bolts, pivot pins / hinges & hydraulic hoses                                                       | x |    |     |         |
| 40                                                                                                                                                                                  | Check             | Check battery box, mountings, terminals, cables & electrolyte levels                                              | x |    |     |         |
| 41                                                                                                                                                                                  | Inspect           | All air lines, valves / fittings for air leaks & chaffing                                                         | x |    |     |         |
| 42                                                                                                                                                                                  | Inspect           | All grease lines for damage / security & grease penetration                                                       | x |    |     |         |
| 43                                                                                                                                                                                  | Inspect           | Ringfeeder / Turn Table                                                                                           | x |    |     |         |
| 44                                                                                                                                                                                  | Check             | Hazard warning / component location Decals                                                                        | x |    |     |         |
| 45                                                                                                                                                                                  | Inspect           | Electrical harnesses / junction boxes for chaffing & dust sealing                                                 | x |    |     |         |
| UNDER BONNET / ENGINE BAY                                                                                                                                                           |                   |                                                                                                                   |   |    |     |         |
| No.                                                                                                                                                                                 | ACTION            | CHECKS                                                                                                            | S | US | N/A | Initial |
| 46                                                                                                                                                                                  | Inspect           | Exhaust manifolds / covers, bolts, turbo, piping for any leaks & security                                         | x |    |     |         |
| 47                                                                                                                                                                                  | Inspect / Tighten | Air induction boxes / hoses / piping / fittings for damage & presence of dusting                                  | x |    |     |         |
| 48                                                                                                                                                                                  | Inspect           | Fuel pump / pipes / hoses / clamps, for leakage & movement                                                        | x |    |     |         |
| 49                                                                                                                                                                                  | Inspect           | Engine for oil leaks & damaged hoses                                                                              | x |    |     |         |
| 50                                                                                                                                                                                  | Check             | Engine mounts for wear & security                                                                                 | x |    |     |         |
| 51                                                                                                                                                                                  | Check             | Water pump "tell tail" for leakage or blockage                                                                    | x |    |     |         |
| 52                                                                                                                                                                                  | Check             | Alternator pulley, mountings, bearings & idler pulleys                                                            | x |    |     |         |
| 53                                                                                                                                                                                  | Check             | Air Conditioner compressor pulley, mountings, hose connections for leakage & movement                             | x |    |     |         |
| 54                                                                                                                                                                                  | Inspect           | Fan, alternator, air conditioner belts for condition & tension                                                    | x |    |     |         |
| 55                                                                                                                                                                                  | Inspect           | Fan blades for cracks, wear, damage & security                                                                    | x |    |     |         |
| 56                                                                                                                                                                                  | Check             | Radiator mountings, coolant leakage & air flow through radiator                                                   | x |    |     |         |
| 57                                                                                                                                                                                  | Inspect           | Coolant / heater hoses / clamps for condition, leaks & tightness                                                  |   | x  |     |         |
| 58                                                                                                                                                                                  | Inspect           | Power steering box for oil leaks, excessive movement, security of steering column & drag link                     |   | x  |     |         |
| 59                                                                                                                                                                                  | Inspect           | Steering column universal joints, slip joint & mountings                                                          | x |    |     |         |
| 60                                                                                                                                                                                  | Inspect           | Electrical harnesses / connections for damage & security                                                          | x |    |     |         |
| 61                                                                                                                                                                                  | Inspect           | Engine bay is free of combustible materials i.e. leaves, sticks & rags for prevention of fire hazards             | x |    |     |         |
| POWER TRAIN & AXLES                                                                                                                                                                 |                   |                                                                                                                   |   |    |     |         |
| <i>Jack up all axles to check wheel bearings, steering linkages &amp; kingpins</i>                                                                                                  |                   |                                                                                                                   |   |    |     |         |
| No.                                                                                                                                                                                 | ACTION            | CHECKS                                                                                                            | S | US | N/A | Initial |
| 62                                                                                                                                                                                  | Check             | Front wheel bearings adjust or replace if necessary                                                               | x |    |     |         |
| 63                                                                                                                                                                                  | Check             | For movement in all kingpins & steering ball joints & linkages, while jacked up grease all points on all kingpins |   | x  |     |         |
| 64                                                                                                                                                                                  | Inspect           | All shackle pins, bushes, shock absorbers, U Bolts, wear plates for wear, movement & tension                      |   | x  |     |         |
| 65                                                                                                                                                                                  | Inspect           | Transmission, PTO for oil leaks, mounts & lubrication of pivot points                                             | x |    |     |         |
| 66                                                                                                                                                                                  | Inspect           | Universal joints, slip joints, centre bearings for movement & rubber deterioration                                | x |    |     |         |
| 67                                                                                                                                                                                  | Inspect           | Differentials for oil leaks, excessive movement in input & output shafts                                          | x |    |     |         |
| 68                                                                                                                                                                                  | Check             | Torque rod arms, pins, bushes, mounting bolts for & tension                                                       | x |    |     |         |
| 69                                                                                                                                                                                  | Check             | Rear wheel bearings adjust or replace if necessary                                                                | x |    |     |         |

|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |                                                 |                                                                                                              |    |     |     |  |     |     |     |      |      |     |      |      |     |     |  |  |  |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------|--------------------------------------------------------------------------------------------------------------|----|-----|-----|--|-----|-----|-----|------|------|-----|------|------|-----|-----|--|--|--|
| 70                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Inspect                                         | All brake linings, pads for thickness, adjustment & adjust if required                                       |    |     |     |  |     |     |     |      |      | x   |      |      |     |     |  |  |  |
| 71                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Inspect                                         | Brake linings or pads, through inspection hole, check adjustment                                             |    |     |     |  |     |     |     |      |      | x   |      |      |     |     |  |  |  |
| 72                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Check                                           | Operation / wear of S cams & brake boosters                                                                  |    |     |     |  |     |     |     |      |      | x   |      |      |     |     |  |  |  |
| 73                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Check                                           | Airbags for leaks or damage to cones                                                                         |    |     |     |  |     |     |     |      |      | x   |      |      |     |     |  |  |  |
| 74                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Inspect                                         | Wheel rims for damage, cracks missing or loose wheel nuts                                                    |    |     |     |  |     |     |     |      |      | x   |      |      |     |     |  |  |  |
| 75                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Inspect                                         | Tyres for damage, tread depth & pressure                                                                     |    |     |     |  |     |     |     |      |      |     |      |      |     |     |  |  |  |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | Depth / Damage                                  | P2:                                                                                                          | 16 | mm  | P4: |  | mm  | P8: | 15  | mm   | P12: | 15  | mm   | P16: |     | mm  |  |  |  |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |                                                 |                                                                                                              |    |     |     |  | P7: | 15  | mm  | P11: | 15   | mm  | P15: |      | mm  |     |  |  |  |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |                                                 |                                                                                                              |    |     |     |  | P6: | 15  | mm  | P10: | 15   | mm  | P14: |      | mm  |     |  |  |  |
| 76                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Pressure                                        | P1:                                                                                                          | 16 | mm  | P3: |  | mm  | P5: | 15  | mm   | P9:  | 15  | mm   | P13: |     | mm  |  |  |  |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |                                                 | P2:                                                                                                          |    | psi | P4: |  | psi | P8: |     | psi  | P12: |     | psi  | P16: |     | psi |  |  |  |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |                                                 | 100PSI                                                                                                       |    |     |     |  | P7: |     | psi | P11: |      | psi | P15: |      | psi |     |  |  |  |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |                                                 |                                                                                                              |    |     |     |  | P6: |     | psi | P10: |      | psi | P14: |      | psi |     |  |  |  |
| 77                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Check                                           | DPF Soot levels and conduct a manual regeneration burn if required                                           |    |     |     |  |     |     |     |      |      | x   |      |      |     |     |  |  |  |
| <b>AFTER EVERY SERVICE</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |                                                 |                                                                                                              |    |     |     |  |     |     |     |      |      |     |      |      |     |     |  |  |  |
| 78                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Check                                           | Allfluid levels are correct & the truck is running / operating as per OEM specifications, disconnect trailer |    |     |     |  |     |     |     |      |      | x   |      |      |     |     |  |  |  |
| <b>DEFECTS / COMENTS &amp; PARTS TO BE ORDERED</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |                                                 |                                                                                                              |    |     |     |  |     |     |     |      |      |     |      |      |     |     |  |  |  |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | shackle pins need replacing ( front pins only ) |                                                                                                              |    |     |     |  |     |     |     |      |      |     |      |      |     |     |  |  |  |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | left step stainless cover loose                 |                                                                                                              |    |     |     |  |     |     |     |      |      |     |      |      |     |     |  |  |  |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | power steering box oil leak                     |                                                                                                              |    |     |     |  |     |     |     |      |      |     |      |      |     |     |  |  |  |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | coolant leak on the bottom radiator hose        |                                                                                                              |    |     |     |  |     |     |     |      |      |     |      |      |     |     |  |  |  |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | king pin on LHS worn 60%                        |                                                                                                              |    |     |     |  |     |     |     |      |      |     |      |      |     |     |  |  |  |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | king pin on RHS worn 40%                        |                                                                                                              |    |     |     |  |     |     |     |      |      |     |      |      |     |     |  |  |  |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | hydraulic coupling selas leaking oil            |                                                                                                              |    |     |     |  |     |     |     |      |      |     |      |      |     |     |  |  |  |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | all rear lower shock bushes worn (4)            |                                                                                                              |    |     |     |  |     |     |     |      |      |     |      |      |     |     |  |  |  |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | x2 air filters due next service                 |                                                                                                              |    |     |     |  |     |     |     |      |      |     |      |      |     |     |  |  |  |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | cabin filter due next service                   |                                                                                                              |    |     |     |  |     |     |     |      |      |     |      |      |     |     |  |  |  |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | windsceens both chiped or cracked               |                                                                                                              |    |     |     |  |     |     |     |      |      |     |      |      |     |     |  |  |  |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |                                                 |                                                                                                              |    |     |     |  |     |     |     |      |      |     |      |      |     |     |  |  |  |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |                                                 |                                                                                                              |    |     |     |  |     |     |     |      |      |     |      |      |     |     |  |  |  |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |                                                 |                                                                                                              |    |     |     |  |     |     |     |      |      |     |      |      |     |     |  |  |  |
| <b><u>SERVICE COMPLETION DECLARATION</u></b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |                                                 |                                                                                                              |    |     |     |  |     |     |     |      |      |     |      |      |     |     |  |  |  |
| On signing / initialling this service report you deem that this service has been thoroughly completed. The equipment is in a safe and operational condition at the time of inspection / service.                                                                                                                                                                                                                                                                                                                                                                                                                    |                                                 |                                                                                                              |    |     |     |  |     |     |     |      |      |     |      |      |     |     |  |  |  |
| <div style="display: flex; justify-content: space-between; align-items: flex-end;"> <div style="text-align: center;"> <br/> <hr style="width: 200px; margin: 0;"/>             Mechanic / Supervisor Signature<br/><br/>             jake van puyenbroek<br/> <hr style="width: 200px; margin: 0;"/>             Name of Mechanic / Supervisor           </div> <div style="text-align: center;">             23.6.25<br/> <hr style="width: 200px; margin: 0;"/>             Inspection Completion Date           </div> </div> |                                                 |                                                                                                              |    |     |     |  |     |     |     |      |      |     |      |      |     |     |  |  |  |

# PRIME MOVER / TRUCK

## SERVICING SCHEDULE

Date : 22/10/2025  
LR No: LR216  
Rego: linc1

VIN: \_\_\_\_\_  
KMs/Hours: 378000KM  
Service Type: 20000KM

## INSPECTION SCHEDULE

*The following inspections require having the engine running or machine moving. Use of an operator and spotter may be required.*

### IN CAB

| No. | ACTION  | CHECKS                                                                                                               | S | US | N/A | Initial |
|-----|---------|----------------------------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 1   | Inspect | Door latches & seals                                                                                                 | x |    |     |         |
| 2   | Check   | Operation of window winders & door handles                                                                           | x |    |     |         |
| 3   | Inspect | Seat belt for damage, fraying & anchor bolt security                                                                 | x |    |     |         |
| 4   | Check   | Seat for correct operation, excessive movement, cover & cushion condition                                            | x |    |     |         |
| 5   | Check   | Operation of ignition & security of key, instrument cluster, warning alarms, warning indicator lights & horn         | x |    |     |         |
| 6   | Check   | Windscreen & other glass in the cab for chips or cracks                                                              | x |    |     |         |
| 7   | Check   | Wipers & Washers                                                                                                     | x |    |     |         |
| 8   | Check   | Park lights, headlights, spot lights, indicators, brake lights, internal cab light, reverse camera & rotating beacon | x |    |     |         |
| 9   | Check   | Operation of AM / FM radio & UHF radio                                                                               | x |    |     |         |
| 10  | Check   | Rear view mirrors & brackets for condition & operation                                                               | x |    |     |         |
| 11  | Check   | Operation of steering wheel (lock to lock), security of the column adjustor                                          | x |    |     |         |
| 12  | Check   | Clutch pedal free play operation & adjustment                                                                        | x |    |     |         |
| 13  | Check   | Pedal rubbers are on & in good condition                                                                             | x |    |     |         |
| 14  | Check   | For breakdown triangles, condition & complete set                                                                    | x |    |     |         |
| 15  | Check   | For a wheel brace & jack                                                                                             | x |    |     |         |
| 16  | Check   | For a first aid kit, in date & complete                                                                              | x |    |     |         |
| 17  | Check   | Operation of E-Stops                                                                                                 | x |    |     |         |
| 18  | Check   | Fire extinguisher for safety ties, gauge in green, rotate a couple of times & tap bottom to release sediment         | x |    |     |         |

### X

| No. | ACTION  | CHECKS                                                                                          | S | US | N/A | Initial |
|-----|---------|-------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 19  | Check   | For excessive exhaust smoke or abnormal noises / vibrations                                     | x |    |     |         |
| 20  | Check   | For excessive time for the air pressure to build up, operation of the gauges & governor kick in | x |    |     |         |
| 21  | Test    | Operation of automatic transmission kick down, lock-up & neutral inhibitor switch               | x |    |     |         |
| 22  | Test    | Operation of gears, ease of selection of High / Low range & the gear splitter                   | x |    |     |         |
| 23  | Inspect | Service brake operation / adjustment                                                            | x |    |     |         |
| 24  | Check   | Park brake operation ( test on a 10° slope )                                                    | x |    |     |         |
| 25  | Check   | For brake drag                                                                                  | x |    |     |         |
| 26  | Check   | Operation of engine or exhaust brake                                                            | x |    |     |         |
| 27  | Check   | The general driving characteristics of the vehicle                                              | x |    |     |         |
| 28  | Check   | Operation of the PTO, raise tipper body & check for leaks                                       | x |    |     |         |
| 29  | Check   | Operation of water sprayers, dribble bar & cannon                                               | x |    |     |         |
| 30  | Check   | Operation of air conditioner & heater                                                           | x |    |     |         |
| 31  | Check   | Using a scan tool check for fault codes                                                         | x |    |     |         |
| 32  | Conduct | DPF Status & conduct a manual burn if required                                                  | x |    |     |         |

| FRAME & BODY                                                                                                                                                                        |                   |                                                                                                                   |   |    |     |         |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------|-------------------------------------------------------------------------------------------------------------------|---|----|-----|---------|
| <i>Park on level ground, Isolate generator, Fit body prop, Relieve all pressures, Start from front right hand side and work clockwise around generator checking each item below</i> |                   |                                                                                                                   |   |    |     |         |
| No.                                                                                                                                                                                 | ACTION            | CHECKS                                                                                                            | S | US | N/A | Initial |
| 33                                                                                                                                                                                  | Check             | Cab mounts, operation of cab tilt & locking mechanism                                                             | x |    |     |         |
| 34                                                                                                                                                                                  | Check             | Bonnet mounts, operation of bonnet tilt struts / locking mechanism                                                | x |    |     |         |
| 35                                                                                                                                                                                  | Check             | For external body damage / security of bonnet to main body, check hinges, tanks, turntable & tipper body          | x |    |     |         |
| 36                                                                                                                                                                                  | Check             | Steps & handrails for integrity & security                                                                        | x |    |     |         |
| 37                                                                                                                                                                                  | Check             | Mudguards, mudflaps for condition & security                                                                      | x |    |     |         |
| 38                                                                                                                                                                                  | Check             | For metal fatigue in chassis rails, cross members & tow hitch frame                                               | x |    |     |         |
| 39                                                                                                                                                                                  | Check             | Hoist mounting bolts, pivot pins / hinges & hydraulic hoses                                                       | x |    |     |         |
| 40                                                                                                                                                                                  | Check             | Check battery box, mountings, terminals, cables & electrolyte levels                                              | x |    |     |         |
| 41                                                                                                                                                                                  | Inspect           | All air lines, valves / fittings for air leaks & chaffing                                                         | x |    |     |         |
| 42                                                                                                                                                                                  | Inspect           | All grease lines for damage / security & grease penetration                                                       | x |    |     |         |
| 43                                                                                                                                                                                  | Inspect           | Ringfeeder / Turn Table                                                                                           | x |    |     |         |
| 44                                                                                                                                                                                  | Check             | Hazard warning / component location Decals                                                                        | x |    |     |         |
| 45                                                                                                                                                                                  | Inspect           | Electrical harnesses / junction boxes for chaffing & dust sealing                                                 | x |    |     |         |
| UNDER BONNET / ENGINE BAY                                                                                                                                                           |                   |                                                                                                                   |   |    |     |         |
| No.                                                                                                                                                                                 | ACTION            | CHECKS                                                                                                            | S | US | N/A | Initial |
| 46                                                                                                                                                                                  | Inspect           | Exhaust manifolds / covers, bolts, turbo, piping for any leaks & security                                         | x |    |     |         |
| 47                                                                                                                                                                                  | Inspect / Tighten | Air induction boxes / hoses / piping / fittings for damage & presence of dusting                                  | x |    |     |         |
| 48                                                                                                                                                                                  | Inspect           | Fuel pump / pipes / hoses / clamps, for leakage & movement                                                        | x |    |     |         |
| 49                                                                                                                                                                                  | Inspect           | Engine for oil leaks & damaged hoses                                                                              | x |    |     |         |
| 50                                                                                                                                                                                  | Check             | Engine mounts for wear & security                                                                                 | x |    |     |         |
| 51                                                                                                                                                                                  | Check             | Water pump "tell tail" for leakage or blockage                                                                    | x |    |     |         |
| 52                                                                                                                                                                                  | Check             | Alternator pulley, mountings, bearings & idler pulleys                                                            | x |    |     |         |
| 53                                                                                                                                                                                  | Check             | Air Conditioner compressor pulley, mountings, hose connections for leakage & movement                             | x |    |     |         |
| 54                                                                                                                                                                                  | Inspect           | Fan, alternator, air conditioner belts for condition & tension                                                    | x |    |     |         |
| 55                                                                                                                                                                                  | Inspect           | Fan blades for cracks, wear, damage & security                                                                    | x |    |     |         |
| 56                                                                                                                                                                                  | Check             | Radiator mountings, coolant leakage & air flow through radiator                                                   | x |    |     |         |
| 57                                                                                                                                                                                  | Inspect           | Coolant / heater hoses / clamps for condition, leaks & tightness                                                  | x |    |     |         |
| 58                                                                                                                                                                                  | Inspect           | Power steering box for oil leaks, excessive movement, security of steering column & drag link                     | x |    |     |         |
| 59                                                                                                                                                                                  | Inspect           | Steering column universal joints, slip joint & mountings                                                          | x |    |     |         |
| 60                                                                                                                                                                                  | Inspect           | Electrical harnesses / connections for damage & security                                                          | x |    |     |         |
| 61                                                                                                                                                                                  | Inspect           | Engine bay is free of combustible materials i.e. leaves, sticks & rags for prevention of fire hazards             | x |    |     |         |
| POWER TRAIN & AXLES                                                                                                                                                                 |                   |                                                                                                                   |   |    |     |         |
| <i>Jack up all axles to check wheel bearings, steering linkages &amp; kingpins</i>                                                                                                  |                   |                                                                                                                   |   |    |     |         |
| No.                                                                                                                                                                                 | ACTION            | CHECKS                                                                                                            | S | US | N/A | Initial |
| 62                                                                                                                                                                                  | Check             | Front wheel bearings adjust or replace if necessary                                                               | x |    |     |         |
| 63                                                                                                                                                                                  | Check             | For movement in all kingpins & steering ball joints & linkages, while jacked up grease all points on all kingpins | x |    |     |         |
| 64                                                                                                                                                                                  | Inspect           | All shackle pins, bushes, shock absorbers, U Bolts, wear plates for wear, movement & tension                      | x |    |     |         |
| 65                                                                                                                                                                                  | Inspect           | Transmission, PTO for oil leaks, mounts & lubrication of pivot points                                             | x |    |     |         |
| 66                                                                                                                                                                                  | Inspect           | Universal joints, slip joints, centre bearings for movement & rubber deterioration                                | x |    |     |         |
| 67                                                                                                                                                                                  | Inspect           | Differentials for oil leaks, excessive movement in input & output shafts                                          | x |    |     |         |
| 68                                                                                                                                                                                  | Check             | Torque rod arms, pins, bushes, mounting bolts for & tension                                                       | x |    |     |         |
| 69                                                                                                                                                                                  | Check             | Rear wheel bearings adjust or replace if necessary                                                                | x |    |     |         |

|                                                                                                                                                                                                  |                |                                                                                                              |      |     |     |     |     |     |     |      |      |     |      |      |      |     |     |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|--------------------------------------------------------------------------------------------------------------|------|-----|-----|-----|-----|-----|-----|------|------|-----|------|------|------|-----|-----|
| 70                                                                                                                                                                                               | Inspect        | All brake linings, pads for thickness, adjustment & adjust if required                                       |      |     |     |     |     |     |     |      |      |     |      |      |      |     |     |
| 71                                                                                                                                                                                               | Inspect        | Brake linings or pads, through inspection hole, check adjustment                                             |      |     |     |     |     |     |     |      |      |     |      |      |      |     |     |
| 72                                                                                                                                                                                               | Check          | Operation / wear of S cams & brake boosters                                                                  |      |     |     |     |     |     |     |      |      |     |      |      |      |     |     |
| 73                                                                                                                                                                                               | Check          | Airbags for leaks or damage to cones                                                                         |      |     |     |     |     |     |     |      |      |     |      |      |      |     |     |
| 74                                                                                                                                                                                               | Inspect        | Wheel rims for damage, cracks missing or loose wheel nuts                                                    |      |     |     |     |     |     |     |      |      |     |      |      |      |     |     |
|                                                                                                                                                                                                  | Inspect        | Tyres for damage, tread depth & pressure                                                                     |      |     |     |     |     |     |     |      |      |     |      |      |      |     |     |
|                                                                                                                                                                                                  | Depth / Damage | P2:                                                                                                          | worn | mm  | P4: |     | mm  | P8: |     | mm   | P12: |     | mm   | P16: |      | mm  |     |
|                                                                                                                                                                                                  |                | all 15mm                                                                                                     |      |     |     |     |     | P7: |     | mm   | P11: |     | mm   | P15: |      | mm  |     |
|                                                                                                                                                                                                  |                |                                                                                                              |      |     |     |     |     | P6: |     | mm   | P10: |     | mm   | P14: |      | mm  |     |
|                                                                                                                                                                                                  |                | P1:                                                                                                          | worn | mm  | P3: |     | mm  | P5: |     | mm   | P9:  |     | mm   | P13: |      | mm  |     |
|                                                                                                                                                                                                  |                |                                                                                                              |      |     |     |     |     | P7: |     | psi  | P11: |     | psi  | P15: |      | psi |     |
| Pressure                                                                                                                                                                                         | P2:            |                                                                                                              |      |     |     |     |     | psi | P4: |      | psi  | P8: |      | psi  | P12: |     | psi |
|                                                                                                                                                                                                  | 100 PSI        |                                                                                                              |      |     |     |     | P7: |     | psi | P11: |      | psi | P15: |      | psi  |     |     |
|                                                                                                                                                                                                  |                |                                                                                                              |      |     |     |     | P6: |     | psi | P10: |      | psi | P14: |      | psi  |     |     |
|                                                                                                                                                                                                  | P1:            |                                                                                                              | psi  | P3: |     | psi | P5: |     | psi | P9:  |      | psi | P13: |      | psi  |     |     |
| 77                                                                                                                                                                                               | Check          | DPF Soot levels and conduct a manual regeneration burn if required                                           |      |     |     |     |     |     |     |      |      |     |      |      |      |     |     |
| <b>AFTER EVERY SERVICE</b>                                                                                                                                                                       |                |                                                                                                              |      |     |     |     |     |     |     |      |      |     |      |      |      |     |     |
| 78                                                                                                                                                                                               | Check          | Allfluid levels are correct & the truck is running / operating as per OEM specifications, disconnect trailer |      |     |     |     |     |     |     |      |      |     |      |      |      |     |     |
| <b>DEFECTS / COMENTS &amp; PARTS TO BE ORDERED</b>                                                                                                                                               |                |                                                                                                              |      |     |     |     |     |     |     |      |      |     |      |      |      |     |     |
|                                                                                                                                                                                                  |                |                                                                                                              |      |     |     |     |     |     |     |      |      |     |      |      |      |     |     |
| <b>SERVICE COMPLETION DECLARATION</b>                                                                                                                                                            |                |                                                                                                              |      |     |     |     |     |     |     |      |      |     |      |      |      |     |     |
| On signing / initialling this service report you deem that this service has been thoroughly completed. The equipment is in a safe and operational condition at the time of inspection / service. |                |                                                                                                              |      |     |     |     |     |     |     |      |      |     |      |      |      |     |     |
| <div> <div>jop<br/>Mechanic / Supervisor Signature</div> <div>22.10.25<br/>Inspection Completion Date</div> </div> <div> <div>jake vp<br/>Name of Mechanic / Supervisor</div> </div>             |                |                                                                                                              |      |     |     |     |     |     |     |      |      |     |      |      |      |     |     |

# PRIME MOVER / TRUCK

## SERVICING SCHEDULE

Date : 25/04/2026  
LR No: LR216  
Rego: LINCT1

VIN: \_\_\_\_\_  
KMs/Hours: 433000KM  
Service Type: 10000KM

## INSPECTION SCHEDULE

*The following inspections require having the engine running or machine moving. Use of an operator and spotter may be required.*

### IN CAB

| No. | ACTION  | CHECKS                                                                                                               | S | US | N/A | Initial |
|-----|---------|----------------------------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 1   | Inspect | Door latches & seals                                                                                                 | x |    |     |         |
| 2   | Check   | Operation of window winders & door handles                                                                           | x |    |     |         |
| 3   | Inspect | Seat belt for damage, fraying & anchor bolt security                                                                 | x |    |     |         |
| 4   | Check   | Seat for correct operation, excessive movement, cover & cushion condition                                            | x |    |     |         |
| 5   | Check   | Operation of ignition & security of key, instrument cluster, warning alarms, warning indicator lights & horn         | x |    |     |         |
| 6   | Check   | Windscreen & other glass in the cab for chips or cracks                                                              | x |    |     |         |
| 7   | Check   | Wipers & Washers                                                                                                     | x |    |     |         |
| 8   | Check   | Park lights, headlights, spot lights, indicators, brake lights, internal cab light, reverse camera & rotating beacon | x |    |     |         |
| 9   | Check   | Operation of AM / FM radio & UHF radio                                                                               | x |    |     |         |
| 10  | Check   | Rear view mirrors & brackets for condition & operation                                                               | x |    |     |         |
| 11  | Check   | Operation of steering wheel (lock to lock), security of the column adjustor                                          | x |    |     |         |
| 12  | Check   | Clutch pedal free play operation & adjustment                                                                        | x |    |     |         |
| 13  | Check   | Pedal rubbers are on & in good condition                                                                             | x |    |     |         |
| 14  | Check   | For breakdown triangles, condition & complete set                                                                    | x |    |     |         |
| 15  | Check   | For a wheel brace & jack                                                                                             | x |    |     |         |
| 16  | Check   | For a first aid kit, in date & complete                                                                              | x |    |     |         |
| 17  | Check   | Operation of E-Stops                                                                                                 | x |    |     |         |
| 18  | Check   | Fire extinguisher for safety ties, gauge in green, rotate a couple of times & tap bottom to release sediment         | x |    |     |         |

### X

| No. | ACTION  | CHECKS                                                                                          | S | US | N/A | Initial |
|-----|---------|-------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 19  | Check   | For excessive exhaust smoke or abnormal noises / vibrations                                     | x |    |     |         |
| 20  | Check   | For excessive time for the air pressure to build up, operation of the gauges & governor kick in | x |    |     |         |
| 21  | Test    | Operation of automatic transmission kick down, lock-up & neutral inhibitor switch               | x |    |     |         |
| 22  | Test    | Operation of gears, ease of selection of High / Low range & the gear splitter                   | x |    |     |         |
| 23  | Inspect | Service brake operation / adjustment                                                            | x |    |     |         |
| 24  | Check   | Park brake operation ( test on a 10° slope )                                                    | x |    |     |         |
| 25  | Check   | For brake drag                                                                                  | x |    |     |         |
| 26  | Check   | Operation of engine or exhaust brake                                                            | x |    |     |         |
| 27  | Check   | The general driving characteristics of the vehicle                                              | x |    |     |         |
| 28  | Check   | Operation of the PTO, raise tipper body & check for leaks                                       | x |    |     |         |
| 29  | Check   | Operation of water sprayers, dribble bar & cannon                                               | x |    |     |         |
| 30  | Check   | Operation of air conditioner & heater                                                           | x |    |     |         |
| 31  | Check   | Using a scan tool check for fault codes                                                         | x |    |     |         |
| 32  | Conduct | DPF Status & conduct a manual burn if required                                                  | x |    |     |         |

| FRAME & BODY                                                                                                                                                                        |                   |                                                                                                                   |   |    |     |         |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------|-------------------------------------------------------------------------------------------------------------------|---|----|-----|---------|
| <i>Park on level ground, Isolate generator, Fit body prop, Relieve all pressures, Start from front right hand side and work clockwise around generator checking each item below</i> |                   |                                                                                                                   |   |    |     |         |
| No.                                                                                                                                                                                 | ACTION            | CHECKS                                                                                                            | S | US | N/A | Initial |
| 33                                                                                                                                                                                  | Check             | Cab mounts, operation of cab tilt & locking mechanism                                                             | x |    |     |         |
| 34                                                                                                                                                                                  | Check             | Bonnet mounts, operation of bonnet tilt struts / locking mechanism                                                | x |    |     |         |
| 35                                                                                                                                                                                  | Check             | For external body damage / security of bonnet to main body, check hinges, tanks, turntable & tipper body          | x |    |     |         |
| 36                                                                                                                                                                                  | Check             | Steps & handrails for integrity & security                                                                        | x |    |     |         |
| 37                                                                                                                                                                                  | Check             | Mudguards, mudflaps for condition & security                                                                      | x |    |     |         |
| 38                                                                                                                                                                                  | Check             | For metal fatigue in chassis rails, cross members & tow hitch frame                                               | x |    |     |         |
| 39                                                                                                                                                                                  | Check             | Hoist mounting bolts, pivot pins / hinges & hydraulic hoses                                                       | x |    |     |         |
| 40                                                                                                                                                                                  | Check             | Check battery box, mountings, terminals, cables & electrolyte levels                                              | x |    |     |         |
| 41                                                                                                                                                                                  | Inspect           | All air lines, valves / fittings for air leaks & chaffing                                                         | x |    |     |         |
| 42                                                                                                                                                                                  | Inspect           | All grease lines for damage / security & grease penetration                                                       | x |    |     |         |
| 43                                                                                                                                                                                  | Inspect           | Ringfeeder / Turn Table                                                                                           | x |    |     |         |
| 44                                                                                                                                                                                  | Check             | Hazard warning / component location Decals                                                                        | x |    |     |         |
| 45                                                                                                                                                                                  | Inspect           | Electrical harnesses / junction boxes for chaffing & dust sealing                                                 | x |    |     |         |
| UNDER BONNET / ENGINE BAY                                                                                                                                                           |                   |                                                                                                                   |   |    |     |         |
| No.                                                                                                                                                                                 | ACTION            | CHECKS                                                                                                            | S | US | N/A | Initial |
| 46                                                                                                                                                                                  | Inspect           | Exhaust manifolds / covers, bolts, turbo, piping for any leaks & security                                         | x |    |     |         |
| 47                                                                                                                                                                                  | Inspect / Tighten | Air induction boxes / hoses / piping / fittings for damage & presence of dusting                                  | x |    |     |         |
| 48                                                                                                                                                                                  | Inspect           | Fuel pump / pipes / hoses / clamps, for leakage & movement                                                        | x |    |     |         |
| 49                                                                                                                                                                                  | Inspect           | Engine for oil leaks & damaged hoses                                                                              | x |    |     |         |
| 50                                                                                                                                                                                  | Check             | Engine mounts for wear & security                                                                                 | x |    |     |         |
| 51                                                                                                                                                                                  | Check             | Water pump "tell tail" for leakage or blockage                                                                    | x |    |     |         |
| 52                                                                                                                                                                                  | Check             | Alternator pulley, mountings, bearings & idler pulleys                                                            | x |    |     |         |
| 53                                                                                                                                                                                  | Check             | Air Conditioner compressor pulley, mountings, hose connections for leakage & movement                             | x |    |     |         |
| 54                                                                                                                                                                                  | Inspect           | Fan, alternator, air conditioner belts for condition & tension                                                    | x |    |     |         |
| 55                                                                                                                                                                                  | Inspect           | Fan blades for cracks, wear, damage & security                                                                    | x |    |     |         |
| 56                                                                                                                                                                                  | Check             | Radiator mountings, coolant leakage & air flow through radiator                                                   | x |    |     |         |
| 57                                                                                                                                                                                  | Inspect           | Coolant / heater hoses / clamps for condition, leaks & tightness                                                  | x |    |     |         |
| 58                                                                                                                                                                                  | Inspect           | Power steering box for oil leaks, excessive movement, security of steering column & drag link                     | x |    |     |         |
| 59                                                                                                                                                                                  | Inspect           | Steering column universal joints, slip joint & mountings                                                          | x |    |     |         |
| 60                                                                                                                                                                                  | Inspect           | Electrical harnesses / connections for damage & security                                                          | x |    |     |         |
| 61                                                                                                                                                                                  | Inspect           | Engine bay is free of combustible materials i.e. leaves, sticks & rags for prevention of fire hazards             | x |    |     |         |
| POWER TRAIN & AXLES                                                                                                                                                                 |                   |                                                                                                                   |   |    |     |         |
| <i>Jack up all axles to check wheel bearings, steering linkages &amp; kingpins</i>                                                                                                  |                   |                                                                                                                   |   |    |     |         |
| No.                                                                                                                                                                                 | ACTION            | CHECKS                                                                                                            | S | US | N/A | Initial |
| 62                                                                                                                                                                                  | Check             | Front wheel bearings adjust or replace if necessary                                                               | x |    |     |         |
| 63                                                                                                                                                                                  | Check             | For movement in all kingpins & steering ball joints & linkages, while jacked up grease all points on all kingpins | x |    |     |         |
| 64                                                                                                                                                                                  | Inspect           | All shackle pins, bushes, shock absorbers, U Bolts, wear plates for wear, movement & tension                      | x |    |     |         |
| 65                                                                                                                                                                                  | Inspect           | Transmission, PTO for oil leaks, mounts & lubrication of pivot points                                             | x |    |     |         |
| 66                                                                                                                                                                                  | Inspect           | Universal joints, slip joints, centre bearings for movement & rubber deterioration                                | x |    |     |         |
| 67                                                                                                                                                                                  | Inspect           | Differentials for oil leaks, excessive movement in input & output shafts                                          | x |    |     |         |
| 68                                                                                                                                                                                  | Check             | Torque rod arms, pins, bushes, mounting bolts for & tension                                                       | x |    |     |         |
| 69                                                                                                                                                                                  | Check             | Rear wheel bearings adjust or replace if necessary                                                                | x |    |     |         |

[illegible]

LR 216



ROADS, STRUCTURES &amp; MAINTENANCE

## PRIME MOVER / TRUCK

## SERVICING SCHEDULE

Date : 30/10/24  
 LR No: 216  
 Rego: Linct1

VIN: \_\_\_\_\_  
 KMs/Hours: 260000  
 Service Type: 10000

## INSPECTION SCHEDULE

The following inspections require having the engine running or machine moving. Use of an operator and spotter may be required.

## IN CAB

| No. | ACTION  | CHECKS                                                                                                               | S | US | N/A | Initial |
|-----|---------|----------------------------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 1   | Inspect | Door latches & seals                                                                                                 | ✓ |    |     |         |
| 2   | Check   | Operation of window winders & door handles                                                                           | ✓ |    |     |         |
| 3   | Inspect | Seat belt for damage, fraying & anchor bolt security                                                                 | ✓ |    |     |         |
| 4   | Check   | Seat for correct operation, excessive movement, cover & cushion condition                                            | ✓ |    |     |         |
| 5   | Check   | Operation of ignition & security of key, instrument cluster, warning alarms, warning indicator lights & horn         | ✓ |    |     |         |
| 6   | Check   | Windscreen & other glass in the cab for chips or cracks                                                              | ✗ | ✓  |     |         |
| 7   | Check   | Wipers & Washers                                                                                                     | ✓ |    |     |         |
| 8   | Check   | Park lights, headlights, spot lights, indicators, brake lights, internal cab light, reverse camera & rotating beacon | ✓ |    |     |         |
| 9   | Check   | Operation of AM / FM radio & UHF radio                                                                               | ✓ |    |     |         |
| 10  | Check   | Rear view mirrors & brackets for condition & operation                                                               | ✓ |    |     |         |
| 11  | Check   | Operation of steering wheel (lock to lock), security of the column adjustor                                          | ✓ |    |     |         |
| 12  | Check   | Clutch pedal free play operation & adjustment                                                                        |   |    | ✓   |         |
| 13  | Check   | Pedal rubbers are on & in good condition                                                                             | ✓ |    |     |         |
| 14  | Check   | For breakdown triangles, condition & complete set                                                                    | ✓ |    |     |         |
| 15  | Check   | For a wheel brace & jack                                                                                             | ✓ |    |     |         |
| 16  | Check   | For a first aid kit, in date & complete                                                                              | ✓ |    |     |         |
| 17  | Check   | Operation of E-Stops                                                                                                 | ✓ |    |     |         |
| 18  | Check   | Fire extinguisher for safety ties, gauge in green, rotate a couple of times & tap bottom to release sediment         | ✓ |    |     |         |

## RUNNING CHECKS

| No. | ACTION  | CHECKS                                                                                          | S | US | N/A | Initial |
|-----|---------|-------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 19  | Check   | For excessive exhaust smoke or abnormal noises / vibrations                                     | ✓ |    |     |         |
| 20  | Check   | For excessive time for the air pressure to build up, operation of the gauges & governor kick in | ✓ |    |     |         |
| 21  | Test    | Operation of automatic transmission kick down, lock-up & neutral inhibitor switch               | ✓ |    |     |         |
| 22  | Test    | Operation of gears, ease of selection of High / Low range & the gear splitter                   | ✓ |    |     |         |
| 23  | Inspect | Service brake operation / adjustment                                                            | ✓ |    |     |         |
| 24  | Check   | Park brake operation ( test on a 10° slope )                                                    | ✓ |    |     |         |
| 25  | Check   | For brake drag                                                                                  | ✓ |    |     |         |
| 26  | Check   | Operation of engine or exhaust brake                                                            | ✓ |    |     |         |
| 27  | Check   | The general driving characteristics of the vehicle                                              | ✓ |    |     |         |
| 28  | Check   | Operation of the PTO, raise tipper body & check for leaks                                       | ✓ |    |     |         |
| 29  | Check   | Operation of water sprayers, dribble bar & cannon                                               |   |    | ✓   |         |
| 30  | Check   | Operation of air conditioner & heater                                                           | ✓ |    |     |         |
| 31  | Check   | Using a scan tool check for fault codes                                                         | ✓ |    |     |         |
| 32  | Conduct | DPF Status & conduct a manual burn if required                                                  | ✓ |    |     |         |

## FRAME & BODY

*Park on level ground, Isolate generator, Fit body prop, Relieve all pressures, Start from front right hand side and work clockwise around generator checking each item below*

| No. | ACTION  | CHECKS                                                                                                   | S | US | N/A | Initial |
|-----|---------|----------------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 33  | Check   | Cab mounts, operation of cab tilt & locking mechanism                                                    | ✓ |    |     |         |
| 34  | Check   | Bonnet mounts, operation of bonnet tilt struts / locking mechanism                                       | ✓ |    |     |         |
| 35  | Check   | For external body damage / security of bonnet to main body, check hinges, tanks, turntable & tipper body | ✓ |    |     |         |
| 36  | Check   | Steps & handrails for integrity & security                                                               | ✓ |    |     |         |
| 37  | Check   | Mudguards, mudflaps for condition & security                                                             | ✓ |    |     |         |
| 38  | Check   | For metal fatigue in chassis rails, cross members & tow hitch frame                                      | ✓ |    |     |         |
| 39  | Check   | Hoist mounting bolts, pivot pins / hinges & hydraulic hoses                                              |   |    | ✓   |         |
| 40  | Check   | Check battery box, mountings, terminals, cables & electrolyte levels                                     | ✓ |    |     |         |
| 41  | Inspect | All air lines, valves / fittings for air leaks & chaffing                                                | ✓ |    |     |         |
| 42  | Inspect | All grease lines for damage / security & grease penetration                                              | ✓ |    |     |         |
| 43  | Inspect | Ringfeeder / Turn Table                                                                                  | ✓ |    |     |         |
| 44  | Check   | Hazard warning / component location Decals                                                               | ✓ |    |     |         |
| 45  | Inspect | Electrical harnesses / junction boxes for chaffing & dust sealing                                        | ✓ |    |     |         |

## UNDER BONNET / ENGINE BAY

| No. | ACTION            | CHECKS                                                                                                | S | US | N/A | Initial |
|-----|-------------------|-------------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 46  | Inspect           | Exhaust manifolds / covers, bolts, turbo, piping for any leaks & security                             | ✓ |    |     |         |
| 47  | Inspect / Tighten | Air induction boxes / hoses / piping / fittings for damage & presence of dusting                      | ✓ |    |     |         |
| 48  | Inspect           | Fuel pump / pipes / hoses / clamps, for leakage & movement                                            | ✓ |    |     |         |
| 49  | Inspect           | Engine for oil leaks & damaged hoses                                                                  | ✓ |    |     |         |
| 50  | Check             | Engine mounts for wear & security                                                                     | ✓ |    |     |         |
| 51  | Check             | Water pump "tell tail" for leakage or blockage                                                        | ✓ |    |     |         |
| 52  | Check             | Alternator pulley, mountings, bearings & idler pulleys                                                | ✓ |    |     |         |
| 53  | Check             | Air Conditioner compressor pulley, mountings, hose connections for leakage & movement                 | ✓ |    |     |         |
| 54  | Inspect           | Fan, alternator, air conditioner belts for condition & tension                                        | ✓ |    |     |         |
| 55  | Inspect           | Fan blades for cracks, wear, damage & security                                                        | ✓ |    |     |         |
| 56  | Check             | Radiator mountings, coolant leakage & air flow through radiator                                       | ✓ |    |     |         |
| 57  | Inspect           | Coolant / heater hoses / clamps for condition, leaks & tightness                                      | ✓ |    |     |         |
| 58  | Inspect           | Power steering box for oil leaks, excessive movement, security of steering column & drag link         | ✓ |    |     |         |
| 59  | Inspect           | Steering column universal joints, slip joint & mountings                                              | ✓ |    |     |         |
| 60  | Inspect           | Electrical harnesses / connections for damage & security                                              | ✓ |    |     |         |
| 61  | Inspect           | Engine bay is free of combustible materials i.e. leaves, sticks & rags for prevention of fire hazards | ✓ |    |     |         |

## POWER TRAIN & AXLES

*Jack up all axles to check wheel bearings, steering linkages & kingpins*

| No. | ACTION  | CHECKS                                                                                                            | S | US | N/A | Initial |
|-----|---------|-------------------------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 62  | Check   | Front wheel bearings adjust or replace if necessary                                                               | ✓ |    |     |         |
| 63  | Check   | For movement in all kingpins & steering ball joints & linkages, while jacked up grease all points on all kingpins | ✓ |    |     |         |
| 64  | Inspect | All shackle pins, bushes, shock absorbers, U Bolts, wear plates for wear, movement & tension                      | ✓ |    |     |         |
| 65  | Inspect | Transmission, PTO for oil leaks, mounts & lubrication of pivot points                                             | ✓ |    |     |         |
| 66  | Inspect | Universal joints, slip joints, centre bearings for movement & rubber deterioration                                | ✓ |    |     |         |
| 67  | Inspect | Differentials for oil leaks, excessive movement in input & output shafts                                          | ✓ |    |     |         |
| 68  | Check   | Torque rod arms, pins, bushes, mounting bolts for & tension                                                       | ✓ |    |     |         |
| 69  | Check   | Rear wheel bearings adjust or replace if necessary                                                                | ✓ |    |     |         |



