

## PRIME MOVER / TRUCK

### SERVICING SHEDULE

Date : 17.6.25  
LR No: 212  
Rego: XV74ST

VIN: 6FMGR1GR6LD812006  
KMs/Hours: 164853KM  
Service Type: 10000KM

### INSPECTION SCHEDULE

*The following inspections require having the engine running or machine moving. Use of an operator and spotter may be required.*

#### IN CAB

| No. | ACTION  | CHECKS                                                                                                               | S | US | N/A | Initial |
|-----|---------|----------------------------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 1   | Inspect | Door latches & seals                                                                                                 | X |    |     |         |
| 2   | Check   | Operation of window winders & door handles                                                                           | X |    |     |         |
| 3   | Inspect | Seat belt for damage, fraying & anchor bolt security                                                                 | X |    |     |         |
| 4   | Check   | Seat for correct operation, excessive movement, cover & cushion condition                                            | X |    |     |         |
| 5   | Check   | Operation of ignition & security of key, instrument cluster, warning alarms, warning indicator lights & horn         | X |    |     |         |
| 6   | Check   | Windscreen & other glass in the cab for chips or cracks                                                              |   | X  |     |         |
| 7   | Check   | Wipers & Washers                                                                                                     |   | X  |     |         |
| 8   | Check   | Park lights, headlights, spot lights, indicators, brake lights, internal cab light, reverse camera & rotating beacon | X |    |     |         |
| 9   | Check   | Operation of AM / FM radio & UHF radio                                                                               | X |    |     |         |
| 10  | Check   | Rear view mirrors & brackets for condition & operation                                                               | X |    |     |         |
| 11  | Check   | Operation of steering wheel (lock to lock), security of the column adjustor                                          | X |    |     |         |
| 12  | Check   | Clutch pedal free play operation & adjustment                                                                        |   |    | X   |         |
| 13  | Check   | Pedal rubbers are on & in good condition                                                                             | X |    |     |         |
| 14  | Check   | For breakdown triangles, condition & complete set                                                                    | X |    |     |         |
| 15  | Check   | For a wheel brace & jack                                                                                             | X |    |     |         |
| 16  | Check   | For a first aid kit, in date & complete                                                                              | X |    |     |         |
| 17  | Check   | Operation of E-Stops                                                                                                 | X |    |     |         |
| 18  | Check   | Fire extinguisher for safety ties, gauge in green, rotate a couple of times & tap bottom to release sediment         | X |    |     |         |

#### RUNNING CHECKS

| No. | ACTION  | CHECKS                                                                                          | S | US | N/A | Initial |
|-----|---------|-------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 19  | Check   | For excessive exhaust smoke or abnormal noises / vibrations                                     | X |    |     |         |
| 20  | Check   | For excessive time for the air pressure to build up, operation of the gauges & governor kick in | X |    |     |         |
| 21  | Test    | Operation of automatic transmission kick down, lock-up & neutral inhibitor switch               | X |    |     |         |
| 22  | Test    | Operation of gears, ease of selection of High / Low range & the gear splitter                   | X |    |     |         |
| 23  | Inspect | Service brake operation / adjustment                                                            | X |    |     |         |
| 24  | Check   | Park brake operation ( test on a 10° slope )                                                    | X |    |     |         |
| 25  | Check   | For brake drag                                                                                  | X |    |     |         |
| 26  | Check   | Operation of engine or exhaust brake                                                            | X |    |     |         |
| 27  | Check   | The general driving characteristics of the vehicle                                              | X |    |     |         |
| 28  | Check   | Operation of the PTO, raise tipper body & check for leaks                                       | X |    |     |         |
| 29  | Check   | Operation of water sprayers, dribble bar & cannon                                               |   |    | X   |         |
| 30  | Check   | Operation of air conditioner & heater                                                           | X |    |     |         |
| 31  | Check   | Using a scan tool check for fault codes                                                         | X |    |     |         |
| 32  | Conduct | DPF Status & conduct a manual burn if required                                                  | X |    |     |         |

| FRAME & BODY                                                                                                                                                                        |                   |                                                                                                                   |   |    |     |         |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------|-------------------------------------------------------------------------------------------------------------------|---|----|-----|---------|
| <i>Park on level ground, Isolate generator, Fit body prop, Relieve all pressures, Start from front right hand side and work clockwise around generator checking each item below</i> |                   |                                                                                                                   |   |    |     |         |
| No.                                                                                                                                                                                 | ACTION            | CHECKS                                                                                                            | S | US | N/A | Initial |
| 33                                                                                                                                                                                  | Check             | Cab mounts, operation of cab tilt & locking mechanism                                                             | X |    |     |         |
| 34                                                                                                                                                                                  | Check             | Bonnet mounts, operation of bonnet tilt struts / locking mechanism                                                | X |    |     |         |
| 35                                                                                                                                                                                  | Check             | For external body damage / security of bonnet to main body, check hinges, tanks, turntable & tipper body          | X |    |     |         |
| 36                                                                                                                                                                                  | Check             | Steps & handrails for integrity & security                                                                        | X |    |     |         |
| 37                                                                                                                                                                                  | Check             | Mudguards, mudflaps for condition & security                                                                      | X |    |     |         |
| 38                                                                                                                                                                                  | Check             | For metal fatigue in chassis rails, cross members & tow hitch frame                                               | X |    |     |         |
| 39                                                                                                                                                                                  | Check             | Hoist mounting bolts, pivot pins / hinges & hydraulic hoses                                                       | X |    |     |         |
| 40                                                                                                                                                                                  | Check             | Check battery box, mountings, terminals, cables & electrolyte levels                                              | X |    |     |         |
| 41                                                                                                                                                                                  | Inspect           | All air lines, valves / fittings for air leaks & chaffing                                                         | X |    |     |         |
| 42                                                                                                                                                                                  | Inspect           | All grease lines for damage / security & grease penetration                                                       | X |    |     |         |
| 43                                                                                                                                                                                  | Inspect           | Ringfeeder / Turn Table                                                                                           | X |    |     |         |
| 44                                                                                                                                                                                  | Check             | Hazard warning / component location Decals                                                                        | X |    |     |         |
| 45                                                                                                                                                                                  | Inspect           | Electrical harnesses / junction boxes for chaffing & dust sealing                                                 | X |    |     |         |
| UNDER BONNET / ENGINE BAY                                                                                                                                                           |                   |                                                                                                                   |   |    |     |         |
| No.                                                                                                                                                                                 | ACTION            | CHECKS                                                                                                            | S | US | N/A | Initial |
| 46                                                                                                                                                                                  | Inspect           | Exhaust manifolds / covers, bolts, turbo, piping for any leaks & security                                         | X |    |     |         |
| 47                                                                                                                                                                                  | Inspect / Tighten | Air induction boxes / hoses / piping / fittings for damage & presence of dusting                                  | X |    |     |         |
| 48                                                                                                                                                                                  | Inspect           | Fuel pump / pipes / hoses / clamps, for leakage & movement                                                        | X |    |     |         |
| 49                                                                                                                                                                                  | Inspect           | Engine for oil leaks & damaged hoses                                                                              | X |    |     |         |
| 50                                                                                                                                                                                  | Check             | Engine mounts for wear & security                                                                                 | X |    |     |         |
| 51                                                                                                                                                                                  | Check             | Water pump "tell tail" for leakage or blockage                                                                    | X |    |     |         |
| 52                                                                                                                                                                                  | Check             | Alternator pulley, mountings, bearings & idler pulleys                                                            | X |    |     |         |
| 53                                                                                                                                                                                  | Check             | Air Conditioner compressor pulley, mountings, hose connections for leakage & movement                             | X |    |     |         |
| 54                                                                                                                                                                                  | Inspect           | Fan, alternator, air conditioner belts for condition & tension                                                    | X |    |     |         |
| 55                                                                                                                                                                                  | Inspect           | Fan blades for cracks, wear, damage & security                                                                    | X |    |     |         |
| 56                                                                                                                                                                                  | Check             | Radiator mountings, coolant leakage & air flow through radiator                                                   | X |    |     |         |
| 57                                                                                                                                                                                  | Inspect           | Coolant / heater hoses / clamps for condition, leaks & tightness                                                  | X |    |     |         |
| 58                                                                                                                                                                                  | Inspect           | Power steering box for oil leaks, excessive movement, security of steering column & drag link                     | X |    |     |         |
| 59                                                                                                                                                                                  | Inspect           | Steering column universal joints, slip joint & mountings                                                          | X |    |     |         |
| 60                                                                                                                                                                                  | Inspect           | Electrical harnesses / connections for damage & security                                                          | X |    |     |         |
| 61                                                                                                                                                                                  | Inspect           | Engine bay is free of combustible materials i.e. leaves, sticks & rags for prevention of fire hazards             | X |    |     |         |
| POWER TRAIN & AXLES                                                                                                                                                                 |                   |                                                                                                                   |   |    |     |         |
| <i>Jack up all axles to check wheel bearings, steering linkages &amp; kingpins</i>                                                                                                  |                   |                                                                                                                   |   |    |     |         |
| No.                                                                                                                                                                                 | ACTION            | CHECKS                                                                                                            | S | US | N/A | Initial |
| 62                                                                                                                                                                                  | Check             | Front wheel bearings adjust or replace if necessary                                                               | X |    |     |         |
| 63                                                                                                                                                                                  | Check             | For movement in all kingpins & steering ball joints & linkages, while jacked up grease all points on all kingpins | X |    |     |         |
| 64                                                                                                                                                                                  | Inspect           | All shackle pins, bushes, shock absorbers, U Bolts, wear plates for wear, movement & tension                      | X |    |     |         |
| 65                                                                                                                                                                                  | Inspect           | Transmission, PTO for oil leaks, mounts & lubrication of pivot points                                             | X |    |     |         |
| 66                                                                                                                                                                                  | Inspect           | Universal joints, slip joints, centre bearings for movement & rubber deterioration                                | X |    |     |         |
| 67                                                                                                                                                                                  | Inspect           | Differentials for oil leaks, excessive movement in input & output shafts                                          | X |    |     |         |
| 68                                                                                                                                                                                  | Check             | Torque rod arms, pins, bushes, mounting bolts for & tension                                                       | X |    |     |         |
| 69                                                                                                                                                                                  | Check             | Rear wheel bearings adjust or replace if necessary                                                                | X |    |     |         |

[illegible]

# PRIME MOVER / TRUCK

## SERVICING SCHEDULE

Date : 6/11/2025  
LR No: LR212  
Rego: XV74ST

VIN: 6FMGR1GR6LD812006  
KMs/Hours: 203779 KM  
Service Type: MAJOR

## INSPECTION SCHEDULE

The following inspections require having the engine running or machine moving. Use of an operator and spotter may be required.

### IN CAB

| No. | ACTION  | CHECKS                                                                                                               | S | US | N/A | Initial |
|-----|---------|----------------------------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 1   | Inspect | Door latches & seals                                                                                                 | S |    |     |         |
| 2   | Check   | Operation of window winders & door handles                                                                           | S |    |     |         |
| 3   | Inspect | Seat belt for damage, fraying & anchor bolt security                                                                 | S |    |     |         |
| 4   | Check   | Seat for correct operation, excessive movement, cover & cushion condition                                            | S |    |     |         |
| 5   | Check   | Operation of ignition & security of key, instrument cluster, warning alarms, warning indicator lights & horn         | S |    |     |         |
| 6   | Check   | Windscreen & other glass in the cab for chips or cracks                                                              | S |    |     |         |
| 7   | Check   | Wipers & Washers                                                                                                     | S |    |     |         |
| 8   | Check   | Park lights, headlights, spot lights, indicators, brake lights, internal cab light, reverse camera & rotating beacon | S |    |     |         |
| 9   | Check   | Operation of AM / FM radio & UHF radio                                                                               | S |    |     |         |
| 10  | Check   | Rear view mirrors & brackets for condition & operation                                                               | S |    |     |         |
| 11  | Check   | Operation of steering wheel (lock to lock), security of the column adjustor                                          | S |    |     |         |
| 12  | Check   | Clutch pedal free play operation & adjustment                                                                        | S |    |     |         |
| 13  | Check   | Pedal rubbers are on & in good condition                                                                             | S |    |     |         |
| 14  | Check   | For breakdown triangles, condition & complete set                                                                    | S |    |     |         |
| 15  | Check   | For a wheel brace & jack                                                                                             | S |    |     |         |
| 16  | Check   | For a first aid kit, in date & complete                                                                              | S |    |     |         |
| 17  | Check   | Operation of E-Stops                                                                                                 | S |    |     |         |
| 18  | Check   | Fire extinguisher for safety ties, gauge in green, rotate a couple of times & tap bottom to release sediment         | S |    |     |         |

### RUNNING CHECKS

| No. | ACTION  | CHECKS                                                                                          | S | US | N/A | Initial |
|-----|---------|-------------------------------------------------------------------------------------------------|---|----|-----|---------|
| 19  | Check   | For excessive exhaust smoke or abnormal noises / vibrations                                     | S |    |     |         |
| 20  | Check   | For excessive time for the air pressure to build up, operation of the gauges & governor kick in | S |    |     |         |
| 21  | Test    | Operation of automatic transmission kick down, lock-up & neutral inhibitor switch               | S |    |     |         |
| 22  | Test    | Operation of gears, ease of selection of High / Low range & the gear splitter                   | S |    |     |         |
| 23  | Inspect | Service brake operation / adjustment                                                            | S |    |     |         |
| 24  | Check   | Park brake operation ( test on a 10° slope )                                                    | S |    |     |         |
| 25  | Check   | For brake drag                                                                                  | S |    |     |         |
| 26  | Check   | Operation of engine or exhaust brake                                                            | S |    |     |         |
| 27  | Check   | The general driving characteristics of the vehicle                                              | S |    |     |         |
| 28  | Check   | Operation of the PTO, raise tipper body & check for leaks                                       |   |    | N/A |         |
| 29  | Check   | Operation of water sprayers, dribble bar & cannon                                               |   |    | N/A |         |
| 30  | Check   | Operation of air conditioner & heater                                                           | S |    |     |         |
| 31  | Check   | Using a scan tool check for fault codes                                                         | S |    |     |         |
| 32  | Conduct | DPF Status & conduct a manual burn if required                                                  | S |    |     |         |

| FRAME & BODY                                                                                                                                                                        |                   |                                                                                                                   |          |    |     |         |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------|-------------------------------------------------------------------------------------------------------------------|----------|----|-----|---------|
| <i>Park on level ground, Isolate generator, Fit body prop, Relieve all pressures, Start from front right hand side and work clockwise around generator checking each item below</i> |                   |                                                                                                                   |          |    |     |         |
| No.                                                                                                                                                                                 | ACTION            | CHECKS                                                                                                            | S        | US | N/A | Initial |
| 33                                                                                                                                                                                  | Check             | Cab mounts, operation of cab tilt & locking mechanism                                                             | <i>S</i> |    |     |         |
| 34                                                                                                                                                                                  | Check             | Bonnet mounts, operation of bonnet tilt struts / locking mechanism                                                | <i>S</i> |    |     |         |
| 35                                                                                                                                                                                  | Check             | For external body damage / security of bonnet to main body, check hinges, tanks, turntable & tipper body          | <i>S</i> |    |     |         |
| 36                                                                                                                                                                                  | Check             | Steps & handrails for integrity & security                                                                        | <i>S</i> |    |     |         |
| 37                                                                                                                                                                                  | Check             | Mudguards, mudflaps for condition & security                                                                      | <i>S</i> |    |     |         |
| 38                                                                                                                                                                                  | Check             | For metal fatigue in chassis rails, cross members & tow hitch frame                                               | <i>S</i> |    |     |         |
| 39                                                                                                                                                                                  | Check             | Hoist mounting bolts, pivot pins / hinges & hydraulic hoses                                                       | <i>S</i> |    |     |         |
| 40                                                                                                                                                                                  | Check             | Check battery box, mountings, terminals, cables & electrolyte levels                                              | <i>S</i> |    |     |         |
| 41                                                                                                                                                                                  | Inspect           | All air lines, valves / fittings for air leaks & chaffing                                                         | <i>S</i> |    |     |         |
| 42                                                                                                                                                                                  | Inspect           | All grease lines for damage / security & grease penetration                                                       | <i>S</i> |    |     |         |
| 43                                                                                                                                                                                  | Inspect           | Ringfeeder / Turn Table                                                                                           | <i>S</i> |    |     |         |
| 44                                                                                                                                                                                  | Check             | Hazard warning / component location Decals                                                                        | <i>S</i> |    |     |         |
| 45                                                                                                                                                                                  | Inspect           | Electrical harnesses / junction boxes for chaffing & dust sealing                                                 | <i>S</i> |    |     |         |
| UNDER BONNET / ENGINE BAY                                                                                                                                                           |                   |                                                                                                                   |          |    |     |         |
| No.                                                                                                                                                                                 | ACTION            | CHECKS                                                                                                            | S        | US | N/A | Initial |
| 46                                                                                                                                                                                  | Inspect           | Exhaust manifolds / covers, bolts, turbo, piping for any leaks & security                                         | <i>S</i> |    |     |         |
| 47                                                                                                                                                                                  | Inspect / Tighten | Air induction boxes / hoses / piping / fittings for damage & presence of dusting                                  | <i>S</i> |    |     |         |
| 48                                                                                                                                                                                  | Inspect           | Fuel pump / pipes / hoses / clamps, for leakage & movement                                                        | <i>S</i> |    |     |         |
| 49                                                                                                                                                                                  | Inspect           | Engine for oil leaks & damaged hoses                                                                              | <i>S</i> |    |     |         |
| 50                                                                                                                                                                                  | Check             | Engine mounts for wear & security                                                                                 | <i>S</i> |    |     |         |
| 51                                                                                                                                                                                  | Check             | Water pump "tell tail" for leakage or blockage                                                                    | <i>S</i> |    |     |         |
| 52                                                                                                                                                                                  | Check             | Alternator pulley, mountings, bearings & idler pulleys                                                            | <i>S</i> |    |     |         |
| 53                                                                                                                                                                                  | Check             | Air Conditioner compressor pulley, mountings, hose connections for leakage & movement                             | <i>S</i> |    |     |         |
| 54                                                                                                                                                                                  | Inspect           | Fan, alternator, air conditioner belts for condition & tension                                                    | <i>S</i> |    |     |         |
| 55                                                                                                                                                                                  | Inspect           | Fan blades for cracks, wear, damage & security                                                                    | <i>S</i> |    |     |         |
| 56                                                                                                                                                                                  | Check             | Radiator mountings, coolant leakage & air flow through radiator                                                   | <i>S</i> |    |     |         |
| 57                                                                                                                                                                                  | Inspect           | Coolant / heater hoses / clamps for condition, leaks & tightness                                                  | <i>S</i> |    |     |         |
| 58                                                                                                                                                                                  | Inspect           | Power steering box for oil leaks, excessive movement, security of steering column & drag link                     | <i>S</i> |    |     |         |
| 59                                                                                                                                                                                  | Inspect           | Steering column universal joints, slip joint & mountings                                                          | <i>S</i> |    |     |         |
| 60                                                                                                                                                                                  | Inspect           | Electrical harnesses / connections for damage & security                                                          | <i>S</i> |    |     |         |
| 61                                                                                                                                                                                  | Inspect           | Engine bay is free of combustible materials i.e. leaves, sticks & rags for prevention of fire hazards             | <i>S</i> |    |     |         |
| POWER TRAIN & AXLES                                                                                                                                                                 |                   |                                                                                                                   |          |    |     |         |
| <i>Jack up all axles to check wheel bearings, steering linkages &amp; kingpins</i>                                                                                                  |                   |                                                                                                                   |          |    |     |         |
| No.                                                                                                                                                                                 | ACTION            | CHECKS                                                                                                            | S        | US | N/A | Initial |
| 62                                                                                                                                                                                  | Check             | Front wheel bearings adjust or replace if necessary                                                               | <i>S</i> |    |     |         |
| 63                                                                                                                                                                                  | Check             | For movement in all kingpins & steering ball joints & linkages, while jacked up grease all points on all kingpins | <i>S</i> |    |     |         |
| 64                                                                                                                                                                                  | Inspect           | All shackle pins, bushes, shock absorbers, U Bolts, wear plates for wear, movement & tension                      | <i>S</i> |    |     |         |
| 65                                                                                                                                                                                  | Inspect           | Transmission, PTO for oil leaks, mounts & lubrication of pivot points                                             | <i>S</i> |    |     |         |
| 66                                                                                                                                                                                  | Inspect           | Universal joints, slip joints, centre bearings for movement & rubber deterioration                                | <i>S</i> |    |     |         |
| 67                                                                                                                                                                                  | Inspect           | Differentials for oil leaks, excessive movement in input & output shafts                                          | <i>S</i> |    |     |         |
| 68                                                                                                                                                                                  | Check             | Torque rod arms, pins, bushes, mounting bolts for & tension                                                       | <i>S</i> |    |     |         |
| 69                                                                                                                                                                                  | Check             | Rear wheel bearings adjust or replace if necessary                                                                | <i>S</i> |    |     |         |

[illegible]