

PRIME MOVER / TRUCK

SERVICING SCHEDULE

Date : 2.7.25
LR No: LR223
Rego: xw54bw

VIN: JNCMB22DONU068428
KMs/Hours: 90021
Service Type: 20000

INSPECTION SCHEDULE

The following inspections require having the engine running or machine moving. Use of an operator and spotter may be required.

IN CAB

No.	ACTION	CHECKS	S	US	N/A	Initial
1	Inspect	Door latches & seals	x			fb
2	Check	Operation of window winders & door handles	x			fb
3	Inspect	Seat belt for damage, fraying & anchor bolt security	x			fb
4	Check	Seat for correct operation, excessive movement, cover & cushion condition	x			fb
5	Check	Operation of ignition & security of key, instrument cluster, warning alarms, warning indicator lights & horn	x			fb
6	Check	Windscreen & other glass in the cab for chips or cracks	x			fb
7	Check	Wipers & Washers	x			fb
8	Check	Park lights, headlights, spot lights, indicators, brake lights, internal cab light, reverse camera & rotating beacon	x			fb
9	Check	Operation of AM / FM radio & UHF radio	x			fb
10	Check	Rear view mirrors & brackets for condition & operation	x			fb
11	Check	Operation of steering wheel (lock to lock), security of the column adjustor	x			fb
12	Check	Clutch pedal free play operation & adjustment	x			fb
13	Check	Pedal rubbers are on & in good condition	x			fb
14	Check	For breakdown triangles, condition & complete set	x			fb
15	Check	For a wheel brace & jack	x			fb
16	Check	For a first aid kit, in date & complete	x			fb
17	Check	Operation of E-Stops	x			fb
18	Check	Fire extinguisher for safety ties, gauge in green, rotate a couple of times & tap bottom to release sediment	x			fb

X

No.	ACTION	CHECKS	S	US	N/A	Initial
19	Check	For excessive exhaust smoke or abnormal noises / vibrations	x			fb
20	Check	For excessive time for the air pressure to build up, operation of the gauges & governor kick in	x			fb
21	Test	Operation of automatic transmission kick down, lock-up & neutral inhibitor switch	x			fb
22	Test	Operation of gears, ease of selection of High / Low range & the gear splitter	x			fb
23	Inspect	Service brake operation / adjustment	x			fb
24	Check	Park brake operation (test on a 10° slope)	x			fb
25	Check	For brake drag	x			fb
26	Check	Operation of engine or exhaust brake	x			fb
27	Check	The general driving characteristics of the vehicle	x			fb
28	Check	Operation of the PTO, raise tipper body & check for leaks	x			fb
29	Check	Operation of water sprayers, dribble bar & cannon	x			fb
30	Check	Operation of air conditioner & heater	x			fb
31	Check	Using a scan tool check for fault codes			x	fb
32	Conduct	DPF Status & conduct a manual burn if required			x	fb

FRAME & BODY						
Park on level ground, Isolate generator, Fit body prop, Relieve all pressures, Start from front right hand side and work clockwise around generator checking each item below						
No.	ACTION	CHECKS	S	US	N/A	Initial
33	Check	Cab mounts, operation of cab tilt & locking mechanism	x			fb
34	Check	Bonnet mounts, operation of bonnet tilt struts / locking mechanism	x			fb
35	Check	For external body damage / security of bonnet to main body, check hinges, tanks, turntable & tipper body	x			fb
36	Check	Steps & handrails for integrity & security	x			fb
37	Check	Mudguards, mudflaps for condition & security	x			fb
38	Check	For metal fatigue in chassis rails, cross members & tow hitch frame	x			fb
39	Check	Hoist mounting bolts, pivot pins / hinges & hydraulic hoses	x			fb
40	Check	Check battery box, mountings, terminals, cables & electrolyte levels	x			fb
41	Inspect	All air lines, valves / fittings for air leaks & chaffing	x			fb
42	Inspect	All grease lines for damage / security & grease penetration	x			fb
43	Inspect	Ringfeeder / Turn Table	x			fb
44	Check	Hazard warning / component location Decals	x			fb
45	Inspect	Electrical harnesses / junction boxes for chaffing & dust sealing	x			fb
UNDER BONNET / ENGINE BAY						
No.	ACTION	CHECKS	S	US	N/A	Initial
46	Inspect	Exhaust manifolds / covers, bolts, turbo, piping for any leaks & security	x			fb
47	Inspect / Tighten	Air induction boxes / hoses / piping / fittings for damage & presence of dusting	x			fb
48	Inspect	Fuel pump / pipes / hoses / clamps, for leakage & movement	x			fb
49	Inspect	Engine for oil leaks & damaged hoses	x			fb
50	Check	Engine mounts for wear & security	x			fb
51	Check	Water pump "tell tail" for leakage or blockage	x			fb
52	Check	Alternator pulley, mountings, bearings & idler pulleys	x			fb
53	Check	Air Conditioner compressor pulley, mountings, hose connections for leakage & movement	x			fb
54	Inspect	Fan, alternator, air conditioner belts for condition & tension	x			fb
55	Inspect	Fan blades for cracks, wear, damage & security	x			fb
56	Check	Radiator mountings, coolant leakage & air flow through radiator	x			fb
57	Inspect	Coolant / heater hoses / clamps for condition, leaks & tightness	x			fb
58	Inspect	Power steering box for oil leaks, excessive movement, security of steering column & drag link	x			fb
59	Inspect	Steering column universal joints, slip joint & mountings	x			fb
60	Inspect	Electrical harnesses / connections for damage & security	x			fb
61	Inspect	Engine bay is free of combustible materials i.e. leaves, sticks & rags for prevention of fire hazards	x			fb
X						
Jack up all axles to check wheel bearings, steering linkages & kingpins						
No.	ACTION	CHECKS	S	US	N/A	Initial
62	Check	Front wheel bearings adjust or replace if necessary	x			fb
63	Check	For movement in all kingpins & steering ball joints & linkages, while jacked up grease all points on all kingpins	x			fb
64	Inspect	All shackle pins, bushes, shock absorbers, U Bolts, wear plates for wear, movement & tension	x			fb
65	Inspect	Transmission, PTO for oil leaks, mounts & lubrication of pivot points	x			fb
66	Inspect	Universal joints, slip joints, centre bearings for movement & rubber deterioration	x			fb
67	Inspect	Differentials for oil leaks, excessive movement in input & output shafts	x			fb
68	Check	Torque rod arms, pins, bushes, mounting bolts for & tension	x			fb
69	Check	Rear wheel bearings adjust or replace if necessary	x			fb

[illegible]

PRIME MOVER / TRUCK

SERVICING SCHEDULE

Date :

9/12/24

LR No:

LR223

Rego:

VIN:

KMs/Hours: 67300

Service Type: 10000

INSPECTION SCHEDULE

The following inspections require having the engine running or machine moving. Use of an operator and spotter may be required.

IN CAB

No.	ACTION	CHECKS	S	US	N/A	Initial
1	Inspect	Door latches & seals	✓			
2	Check	Operation of window winders & door handles	✓			
3	Inspect	Seat belt for damage, fraying & anchor bolt security	✓			
4	Check	Seat for correct operation, excessive movement, cover & cushion condition	✓			
5	Check	Operation of ignition & security of key, instrument cluster, warning alarms, warning indicator lights & horn	✓			
6	Check	Windscreen & other glass in the cab for chips or cracks	✓			
7	Check	Wipers & Washers	✓			
8	Check	Park lights, headlights, spot lights, indicators, brake lights, internal cab light, reverse camera & rotating beacon	✓			
9	Check	Operation of AM / FM radio & UHF radio	✓			
10	Check	Rear view mirrors & brackets for condition & operation	✓			
11	Check	Operation of steering wheel (lock to lock), security of the column adjustor	✓			
12	Check	Clutch pedal free play operation & adjustment			✓	
13	Check	Pedal rubbers are on & in good condition	✓			
14	Check	For breakdown triangles, condition & complete set	✓			
15	Check	For a wheel brace & jack	✓			
16	Check	For a first aid kit, in date & complete	✓			
17	Check	Operation of E-Stops	✓			
18	Check	Fire extinguisher for safety ties, gauge in green, rotate a couple of times & tap bottom to release sediment	✓			

RUNNING CHECKS

No.	ACTION	CHECKS	S	US	N/A	Initial
19	Check	For excessive exhaust smoke or abnormal noises / vibrations	✓			
20	Check	For excessive time for the air pressure to build up, operation of the gauges & governor kick in	✓			
21	Test	Operation of automatic transmission kick down, lock-up & neutral inhibitor switch	✓			
22	Test	Operation of gears, ease of selection of High / Low range & the gear splitter	✓			
23	Inspect	Service brake operation / adjustment	✓			
24	Check	Park brake operation (test on a 10° slope)	✓			
25	Check	For brake drag	✓			
26	Check	Operation of engine or exhaust brake	✓			
27	Check	The general driving characteristics of the vehicle	✓			
28	Check	Operation of the PTO, raise tipper body & check for leaks	✓			
29	Check	Operation of water sprayers, dribble bar & cannon			✓	
30	Check	Operation of air conditioner & heater	✓			
31	Check	Using a scan tool check for fault codes	✓			
32	Conduct	DPF Status & conduct a manual burn if required	✓			

FRAME & BODY

Park on level ground, Isolate generator, Fit body prop, Relieve all pressures, Start from front right hand side and work clockwise around generator checking each item below

No.	ACTION	CHECKS	S	US	N/A	Initial
33	Check	Cab mounts, operation of cab tilt & locking mechanism	✓			
34	Check	Bonnet mounts, operation of bonnet tilt struts / locking mechanism	✓			
35	Check	For external body damage / security of bonnet to main body, check hinges, tanks, turntable & tipper body	✓			
36	Check	Steps & handrails for integrity & security	✓			
37	Check	Mudguards, mudflaps for condition & security		✓		
38	Check	For metal fatigue in chassis rails, cross members & tow hitch frame	✓			
39	Check	Hoist mounting bolts, pivot pins / hinges & hydraulic hoses	✓			
40	Check	Check battery box, mountings, terminals, cables & electrolyte levels	✓			
41	Inspect	All air lines, valves / fittings for air leaks & chaffing	✓			
42	Inspect	All grease lines for damage / security & grease penetration	✓			
43	Inspect	Ringfeeder / Turn Table			✓	
44	Check	Hazard warning / component location Decals	✗	✓		
45	Inspect	Electrical harnesses / junction boxes for chaffing & dust sealing	✓			

UNDER BONNET / ENGINE BAY

No.	ACTION	CHECKS	S	US	N/A	Initial
46	Inspect	Exhaust manifolds / covers, bolts, turbo, piping for any leaks & security	✓			
47	Inspect / Tighten	Air induction boxes / hoses / piping / fittings for damage & presence of dusting	✓			
48	Inspect	Fuel pump / pipes / hoses / clamps, for leakage & movement	✓			
49	Inspect	Engine for oil leaks & damaged hoses	✓			
50	Check	Engine mounts for wear & security	✓			
51	Check	Water pump "tell tail" for leakage or blockage	✓			
52	Check	Alternator pulley, mountings, bearings & idler pulleys	✓			
53	Check	Air Conditioner compressor pulley, mountings, hose connections for leakage & movement	✓			
54	Inspect	Fan, alternator, air conditioner belts for condition & tension	✓			
55	Inspect	Fan blades for cracks, wear, damage & security	✓			
56	Check	Radiator mountings, coolant leakage & air flow through radiator	✓			
57	Inspect	Coolant / heater hoses / clamps for condition, leaks & tightness	✓			
58	Inspect	Power steering box for oil leaks, excessive movement, security of steering column & drag link	✓			
59	Inspect	Steering column universal joints, slip joint & mountings	✓			
60	Inspect	Electrical harnesses / connections for damage & security	✓			
61	Inspect	Engine bay is free of combustible materials i.e. leaves, sticks & rags for prevention of fire hazards	✓			

POWER TRAIN & AXLES

Jack up all axles to check wheel bearings, steering linkages & kingpins

No.	ACTION	CHECKS	S	US	N/A	Initial
62	Check	Front wheel bearings adjust or replace if necessary	✓			
63	Check	For movement in all kingpins & steering ball joints & linkages, while jacked up grease all points on all kingpins	✓			
64	Inspect	All shackle pins, bushes, shock absorbers, U Bolts, wear plates for wear, movement & tension	✓			
65	Inspect	Transmission, PTO for oil leaks, mounts & lubrication of pivot points	✓			
66	Inspect	Universal joints, slip joints, centre bearings for movement & rubber deterioration	✓			
67	Inspect	Differentials for oil leaks, excessive movement in input & output shafts	✓			
68	Check	Torque rod arms, pins, bushes, mounting bolts for & tension	✓			
69	Check	Rear wheel bearings adjust or replace if necessary	✓			

[illegible]





Prime Mover / Rigid Truck Servicing Schedule

Date:	<u>10.04.25</u>	Serial No:	<u>JNCNB22D0NU068428</u>
Unit Number:	<u>LR223</u>	Mechanic:	<u>Robert Arnsby</u>
Rego Number:	<u>XW54BE</u>	Mechanic:	
Service Type:	<u>20,000</u>	Serviceman:	
Kilometres:	<u>80,851</u>	Operator:	
Hours:		Spotter:	

INSPECTION SCHEDULE

EVERY SERVICE

The following inspections require having the engine running or machine moving. Use of an operator and spotter may be required.

IN CAB

No.	ACTION	CHECKS	S	US	N/A	Initial
1	Inspect	Door latches & seals	X			RA
2	Check	Operation of window winders & door handles	X			RA
3	Inspect	Seat belt for damage, fraying & anchor bolt security	X			RA
4	Check	Seat for correct operation, excessive movement, cover & cushion	X			RA
5	Check	Operation of ignition & security of key, instrument cluster, warning alarms, warning indicator lights & horn	X			RA
6	Check	Windscreen & other glass in the cab for chips or cracks		X		RA
7	Check	Wipers & Washers	X			RA
8	Check	Park lights, headlights, spot lights, indicators, brake lights, internal cab light, reverse camera & rotating beacon		X		RA
9	Check	Operation of AM / FM radio & UHF radio	X			RA
10	Check	Rear view mirrors & brackets for condition & operation	X			RA
11	Check	Operation of steering wheel (lock to lock), security of the column adjustor	X			RA
12	Check	Clutch pedal free play operation & adjustment			X	RA
13	Check	Pedal rubbers are on & in good condition	X			RA
14	Check	For breakdown triangles, condition & complete set	X			RA
15	Check	For a wheel brace & jack	X			RA
16	Check	For a first aid kit, in date & complete	X			RA
17	Check	Operation of E-Stops			X	RA
18	Check	Fire extinguisher for safety ties, gauge in green, rotate a couple of times & tap bottom to release sediment	X			RA

RUNNING CHECKS

No.	ACTION	CHECKS	S	US	N/A	Initial
19	Check	For excessive exhaust smoke or abnormal noises / vibrations	X			RA
20	Check	For excessive time for the air pressure to build up, operation of the gauges & governor kick in	X			RA
21	Test	Operation of automatic transmission kick down, lock-up & neutral inhibitor switch	X			RA
22	Test	Operation of gears, ease of selection of High / Low range & the gear splitter	X			RA

23	Inspect	Service brake operation / adjustment	X			RA
24	Check	Park brake operation (test on a 10° slope)	X			RA
25	Check	For brake drag	X			RA
26	Check	Operation of engine or exhaust brake	X			RA
27	Check	The general driving characteristics of the vehicle	X			RA
28	Check	Operation of the PTO, raise tipper body & check for leaks	X			RA
29	Check	Operation of water sprayers, dribble bar & cannon			X	RA
30	Check	Operation of air conditioner & heater	X			RA
31	Check	Using a scan tool check for fault codes	X			RA
32	Conduct	DPF Status & conduct a manual burn if required	X			RA

FRAME & BODY

Park on level ground, Isolate generator, Fit body prop, Relieve all pressures, Start from front right hand side and work clockwise around generator checking each item below

No.	ACTION	CHECKS	S	US	N/A	Initial
33	Check	Cab mounts, operation of cab tilt & locking mechanism	X			RA
34	Check	Bonnet mounts, operation of bonnet tilt struts / locking mechanism	X			RA
35	Check	For external body damage / security of bonnet to main body, check		X		RA
36	Check	Steps & handrails for integrity & security	X			RA
37	Check	Mudguards, mudflaps for condition & security	X			RA
38	Check	For metal fatigue in chassis rails, cross members & tow hitch frame	X			RA
39	Check	Hoist mounting bolts, pivot pins / hinges & hydraulic hoses	X			RA
40	Check / Clean	Check battery box, mountings, terminals, cables & electrolyte levels	X			RA
41	Inspect	All air lines, valves / fittings for air leaks & chaffing	X			RA
42	Inspect	All grease lines for damage / security & grease penetration	X			RA
43	Inspect	Ringfeeder / Turn Table	X			RA
44	Check	Hazard warning / component location Decals	X			RA
45	Inspect	Electrical harnesses / junction boxes for chaffing & dust sealing	X			RA

UNDER BONNET / ENGINE BAY

No.	ACTION	CHECKS	S	US	N/A	Initial
46	Inspect	Exhaust manifolds / covers, bolts, turbo, piping for any leaks & security	X			RA
47	Inspect / Tighten	Air induction boxes / hoses / piping / fittings for damage & presence of dusting	X			RA
48	Inspect	Fuel pump / pipes / hoses / clamps, for leakage & movement	X			RA
49	Inspect	Engine for oil leaks & damaged hoses	X			RA
50	Check	Engine mounts for wear & security	X			RA
51	Check	Water pump "tell tail" for leakage or blockage	X			RA
52	Check	Alternator pulley, mountings, bearings & idler pulleys	X			RA
53	Check	Air Conditioner compressor pulley, mountings, hose connections for leakage & movement	X			RA
54	Inspect	Fan, alternator, air conditioner belts for condition & tension	X			RA
55	Inspect	Fan blades for cracks, wear, damage & security	X			RA
56	Check	Radiator mountings, coolant leakage & air flow through radiator	X			RA
57	Inspect	Coolant / heater hoses / clamps for condition, leaks & tightness	X			RA
58	Inspect	Power steering box for oil leaks, excessive movement, security of steering column & drag link	X			RA
59	Inspect	Steering column universal joints, slip joint & mountings	X			RA
60	Inspect	Electrical harnesses / connections for damage & security	X			RA
61	Inspect	Engine bay is free of combustible materials i.e. leaves, sticks & rags for prevention of fire hazards	X			RA

POWER TRAIN & AXLES

Jack up all axles to check wheel bearings, steering linkages& kingpins																			
No.	ACTION	CHECKS												S	US	N/A	Initial		
62	Check	Front wheel bearings adjust or replace if necessary												X			RA		
63	Check	For movement in all kingpins & steering ball joints & linkages, while jacked up grease all points on all kingpins												X			RA		
64	Inspect	All shackle pins, bushes, shock absorbers, U Bolts, wear plates for wear, movement & tension												X			RA		
65	Inspect	Transmission, PTO for oil leaks, mounts & lubrication of pivot points												X			RA		
66	Inspect	Universal joints, slip joints, centre bearings for movement & rubber												X			RA		
67	Inspect	Differentials for oil leaks, excessive movement in input & output shafts												X			RA		
68	Check	Torque rod arms, pins, bushes, mounting bolts for & tension												X			RA		
69	Check	Rear wheel bearings adjust or replace if necessary												X			RA		
70	Inspect	All brake linings, pads for thickness, adjustment & adjust if required												X			RA		
71	Inspect	Brake linings or pads, through inspection hole, check adjustment												X			RA		
72	Check	Operation / wear of S cams & brake boosters												X			RA		
73	Check	Airbags for leaks or damage to cones												X			RA		
74	Inspect	Wheel rims for damage, cracks missing or loose wheel nuts												X			RA		
75	Inspect	Tyres for damage, tread depth & pressure																	
	Depth / Damage	P2:	8	mm	P4:	NA	mm	P8:	13	mm	P12:	13	mm	P16:	NA	mm	X		RA
						P7:	13	mm	P11:	13	mm	P15:	NA	mm					
						P6:	13	mm	P10:	14	mm	P14:	NA	mm					
		P1:	7	mm	P3:	NA	mm	P5:	13	mm	P9:	12	mm	P13:	NA	mm			
76	Pressure	P2:	10	psi	P4:	NA	psi	P8:	100	psi	P12:	95	psi	P16:	NA	psi	X		RA
						P7:	102	psi	P11:	100	psi	P15:	NA	psi					
						P6:	100	psi	P10:	102	psi	P14:	NA	psi					
		P1:			psi	P3:			psi	P5:	102	psi	P9:	100	psi	P13:			
	100,000 kms																		
Remove wheels, brake drums, brake callipers & inspect for wear																			
No.	ACTION	CHECKS												S	US	N/A	Initial		
Check & adjust valve clearances & engine brake																			
80		Cylinder 1		Cylinder 2		Cylinder 3		Cylinder 4											
	Intake																		
	Exhaust																		
		Cylinder 5		Cylinder 6		Cylinder 7		Cylinder 8											
	Intake																		
	Exhaust																		
81	Check	Glow Plugs for power & conduct a continuity test on each plug																	
82	Check	Using a Coolant Test Strip & compare to chart, change if necessary																	
200,000 kms																			
77	Measure	Brake drums or Rotors																	
		P1:		mm	P4:		mm	P6:		mm	P8:		mm						
		P2:		mm	P3:		mm	P5:		mm	P7:		mm						
78	Measure	Brake linings or pads																	
		P1:		mm	P4:		mm	P6:		mm	P8:		mm						
		P2:		mm	P3:		mm	P5:		mm	P7:		mm						
79	Inspect	For worn, damaged or broken S Cams, S cam bushes springs or retaining clips																	

[illegible]



JOB NUMBER: RD681

Customer/Company:	Linct Group Pty Ltd	Date:	02/02/2026
Address:	2-4 Purton Road Pakenham Victoria 3810		
Mobile Number:	0418140661	Odometer:	100,269 Kms
Home Number:	03 5941 6244	Make:	UD
Email:	accounts@linctgroup.com.au	Model:	QUON GW26 460
VIN:	JNCNB222DONUO68428	Reg. No:	XW54BW
Engine Hours:		Fleet. No:	LR223
Engine No:		Month/Year:	2022
Next Service Date:		Next Service Odometer:	
Job Description:	Carry Out B Service & Repairs		

Check Sheet:

Carry Out B Service		
Raise cab / body & wash prior to service.	✓	Take note of any leaks while washing
Move truck into workshop, raise body, chock wheels.	✓	
Record KM's and engine hours.	✓	
Check operation of lights, wipers, radio's & A/C.	✓	
Shut truck off, release park brake and check for leaks. Apply service brakes and check for leaks.	✓	
Raise Cab	✓	
Replace engine oil & filter.	✓	
Replace fuel filters & prime fuel system.	✓	
Replace air filter.	✓	
Inspect belts & pulleys.	✓	
Inspect intake & exhaust system.	✓	

Check over for leaks.	✓	
Inspect radiator, intercooler, condenser, radiator hoses/clamps & coolant level.	✓	
Check integrity of AdBlue system.	✓	
Check electrical connectors and harness's.	✓	
Check engine mounts.	✓	
Check cab raise pump & mechanism.	✓	
Check cab suspension & latch's.	✓	
Check transmission oil level.	✓	
Check steering shaft, uni's & grease.	✓	
Check power steering fluid level.	✓	
Check front wheel seals for leaks, if oiled bearings check level.	✓	
Check front leaf springs, shackles, shocks and grease all steering and brakes.	✓	
Check over driveline and grease.	✓	
Check diff oil levels.	✓	
Drain air tanks.	✓	
Check over all wiring and air lines for rubbing/chaffing.	✓	
Check alternator output: 24.0VDC - 28.8VDC	✓	
Check battery condition, hold down clamps, cables and load test batteries.	✓	
Adjust brakes.	✓	
Check boosters, slack adjuster & S cams.	✓	
Check condition of tyres, rims, wheel nuts.	✓	
Road test.	✓	
Wash truck, clean floor mats, use deodorizer in cab, clean mirrors & windows.	✓	
Put new service sticker on windscreen and take photo.	✓	
Tidy up work area, pack away tooling, dispose of waste.	✓	

Parts/ Consumables.		
List in comments what was used on job & quantity.	✓	

Comment:

CLEAR AIR SYSTEM FAULT

20,000KM SERVICE TO BE COMPLETED

R/R TIMING BELT CHAIN/ BELT

Check over Esther's work and show her to check king pin movements

30 mins work
