

PRIME MOVER / TRUCK

SERVICING SCHEDULE

Date : 27/04/2026
LR No: LR203
Rego: ZGL790

VIN: _____
KMs/Hours: 360000KM
Service Type: 10000KM

INSPECTION SCHEDULE

The following inspections require having the engine running or machine moving. Use of an operator and spotter may be required.

IN CAB

No.	ACTION	CHECKS	S	US	N/A	Initial
1	Inspect	Door latches & seals	x			
2	Check	Operation of window winders & door handles	x			
3	Inspect	Seat belt for damage, fraying & anchor bolt security	x			
4	Check	Seat for correct operation, excessive movement, cover & cushion condition	x			
5	Check	Operation of ignition & security of key, instrument cluster, warning alarms, warning indicator lights & horn	x			
6	Check	Windscreen & other glass in the cab for chips or cracks	x			
7	Check	Wipers & Washers	x			
8	Check	Park lights, headlights, spot lights, indicators, brake lights, internal cab light, reverse camera & rotating beacon	x			
9	Check	Operation of AM / FM radio & UHF radio	x			
10	Check	Rear view mirrors & brackets for condition & operation	x			
11	Check	Operation of steering wheel (lock to lock), security of the column adjustor	x			
12	Check	Clutch pedal free play operation & adjustment	x			
13	Check	Pedal rubbers are on & in good condition	x			
14	Check	For breakdown triangles, condition & complete set	x			
15	Check	For a wheel brace & jack	x			
16	Check	For a first aid kit, in date & complete	x			
17	Check	Operation of E-Stops	x			
18	Check	Fire extinguisher for safety ties, gauge in green, rotate a couple of times & tap bottom to release sediment	x			

X

No.	ACTION	CHECKS	S	US	N/A	Initial
19	Check	For excessive exhaust smoke or abnormal noises / vibrations	x			
20	Check	For excessive time for the air pressure to build up, operation of the gauges & governor kick in	x			
21	Test	Operation of automatic transmission kick down, lock-up & neutral inhibitor switch	x			
22	Test	Operation of gears, ease of selection of High / Low range & the gear splitter	x			
23	Inspect	Service brake operation / adjustment	x			
24	Check	Park brake operation (test on a 10° slope)	x			
25	Check	For brake drag	x			
26	Check	Operation of engine or exhaust brake	x			
27	Check	The general driving characteristics of the vehicle	x			
28	Check	Operation of the PTO, raise tipper body & check for leaks	x			
29	Check	Operation of water sprayers, dribble bar & cannon	x			
30	Check	Operation of air conditioner & heater	x			
31	Check	Using a scan tool check for fault codes	x			
32	Conduct	DPF Status & conduct a manual burn if required	x			

FRAME & BODY						
<i>Park on level ground, Isolate generator, Fit body prop, Relieve all pressures, Start from front right hand side and work clockwise around generator checking each item below</i>						
No.	ACTION	CHECKS	S	US	N/A	Initial
33	Check	Cab mounts, operation of cab tilt & locking mechanism	x			
34	Check	Bonnet mounts, operation of bonnet tilt struts / locking mechanism	x			
35	Check	For external body damage / security of bonnet to main body, check hinges, tanks, turntable & tipper body	x			
36	Check	Steps & handrails for integrity & security	x			
37	Check	Mudguards, mudflaps for condition & security	x			
38	Check	For metal fatigue in chassis rails, cross members & tow hitch frame	x			
39	Check	Hoist mounting bolts, pivot pins / hinges & hydraulic hoses	x			
40	Check	Check battery box, mountings, terminals, cables & electrolyte levels	x			
41	Inspect	All air lines, valves / fittings for air leaks & chaffing	x			
42	Inspect	All grease lines for damage / security & grease penetration	x			
43	Inspect	Ringfeeder / Turn Table	x			
44	Check	Hazard warning / component location Decals	x			
45	Inspect	Electrical harnesses / junction boxes for chaffing & dust sealing	x			
UNDER BONNET / ENGINE BAY						
No.	ACTION	CHECKS	S	US	N/A	Initial
46	Inspect	Exhaust manifolds / covers, bolts, turbo, piping for any leaks & security	x			
47	Inspect / Tighten	Air induction boxes / hoses / piping / fittings for damage & presence of dusting	x			
48	Inspect	Fuel pump / pipes / hoses / clamps, for leakage & movement	x			
49	Inspect	Engine for oil leaks & damaged hoses	x			
50	Check	Engine mounts for wear & security	x			
51	Check	Water pump "tell tail" for leakage or blockage	x			
52	Check	Alternator pulley, mountings, bearings & idler pulleys	x			
53	Check	Air Conditioner compressor pulley, mountings, hose connections for leakage & movement	x			
54	Inspect	Fan, alternator, air conditioner belts for condition & tension	x			
55	Inspect	Fan blades for cracks, wear, damage & security	x			
56	Check	Radiator mountings, coolant leakage & air flow through radiator	x			
57	Inspect	Coolant / heater hoses / clamps for condition, leaks & tightness	x			
58	Inspect	Power steering box for oil leaks, excessive movement, security of steering column & drag link	x			
59	Inspect	Steering column universal joints, slip joint & mountings	x			
60	Inspect	Electrical harnesses / connections for damage & security	x			
61	Inspect	Engine bay is free of combustible materials i.e. leaves, sticks & rags for prevention of fire hazards	x			
POWER TRAIN & AXLES						
<i>Jack up all axles to check wheel bearings, steering linkages & kingpins</i>						
No.	ACTION	CHECKS	S	US	N/A	Initial
62	Check	Front wheel bearings adjust or replace if necessary	x			
63	Check	For movement in all kingpins & steering ball joints & linkages, while jacked up grease all points on all kingpins	x			
64	Inspect	All shackle pins, bushes, shock absorbers, U Bolts, wear plates for wear, movement & tension	x			
65	Inspect	Transmission, PTO for oil leaks, mounts & lubrication of pivot points	x			
66	Inspect	Universal joints, slip joints, centre bearings for movement & rubber deterioration	x			
67	Inspect	Differentials for oil leaks, excessive movement in input & output shafts	x			
68	Check	Torque rod arms, pins, bushes, mounting bolts for & tension	x			
69	Check	Rear wheel bearings adjust or replace if necessary	x			

70	Inspect	All brake linings, pads for thickness, adjustment & adjust if required										x				
71	Inspect	Brake linings or pads, through inspection hole, check adjustment										x				
72	Check	Operation / wear of S cams & brake boosters										x				
73	Check	Airbags for leaks or damage to cones										x				
74	Inspect	Wheel rims for damage, cracks missing or loose wheel nuts										x				
75	Inspect	Tyres for damage, tread depth & pressure										x				
	Depth / Damage	P2:	20	mm	P4:		mm	P8:	15	mm	P12:		mm	P16:		mm
							P7:	15	mm	P11:		mm	P15:		mm	
							P6:	15	mm	P10:		mm	P14:		mm	
76	Pressure	P1:	20	mm	P3:		mm	P5:	12	mm	P9:		mm	P13:		mm
		P2:		psi	P4:		psi	P8:		psi	P12:		psi	P16:		psi
							P7:		psi	P11:		psi	P15:		psi	
							P6:		psi	P10:		psi	P14:		psi	
77	Check	DPF Soot levels and conduct a manual regeneration burn if required														
AFTER EVERY SERVICE																
78	Check	Allfluid levels are correct & the truck is running / operating as per OEM specifications, disconnect trailer										x				
DEFECTS / COMENTS & PARTS TO BE ORDERED																
	battery terminals loose (corrected)															
	battery clamp loose															
	radiator leaking water (corrected)															
	combing rail bent up															
	steering coloumn pannel loose															
	spare wheel loose															
	9KG fire extinguisher missing															
	LED revers light needs installing															
	LHS mirror head broken needs welding															
	wiper blades need replacing															
	rear shackle pins need replacing															
SERVICE COMPLETION DECLARATION																
On signing / initialling this service report you deem that this service has been thoroughly completed. The equipment is in a safe and operational condition at the time of inspection / service.																
 Mechanic / Supervisor Signature jake vp Name of Mechanic / Supervisor 27/04/2026 Inspection Completion Date																

PRIME MOVER / TRUCK

SERVICING SCHEDULE

 Date : 30/11/24
 LR No: LR203
 Rego: ZGL 790

 VIN: _____
 KMs/Hours: 245461
 Service Type: B

INSPECTION SCHEDULE

The following inspections require having the engine running or machine moving. Use of an operator and spotter may be required.

IN CAB

No.	ACTION	CHECKS	S	US	N/A	Initial
1	Inspect	Door latches & seals	✓			
2	Check	Operation of window winders & door handles	✓			
3	Inspect	Seat belt for damage, fraying & anchor bolt security	✓			
4	Check	Seat for correct operation, excessive movement, cover & cushion condition	✓			
5	Check	Operation of ignition & security of key, instrument cluster, warning alarms, warning indicator lights & horn	✓			
6	Check	Windscreen & other glass in the cab for chips or cracks	✓			
7	Check	Wipers & Washers	✓			
8	Check	Park lights, headlights, spot lights, indicators, brake lights, internal cab light, reverse camera & rotating beacon	✓			
9	Check	Operation of AM / FM radio & UHF radio	✓			
10	Check	Rear view mirrors & brackets for condition & operation	✓			
11	Check	Operation of steering wheel (lock to lock), security of the column adjustor	✓			
12	Check	Clutch pedal free play operation & adjustment	✓			
13	Check	Pedal rubbers are on & in good condition	✓			
14	Check	For breakdown triangles, condition & complete set	✓			
15	Check	For a wheel brace & jack	✓			
16	Check	For a first aid kit, in date & complete	✓			
17	Check	Operation of E-Stops	N/A			
18	Check	Fire extinguisher for safety ties, gauge in green, rotate a couple of times & tap bottom to release sediment	✓			

RUNNING CHECKS

No.	ACTION	CHECKS	S	US	N/A	Initial
19	Check	For excessive exhaust smoke or abnormal noises / vibrations	✓			
20	Check	For excessive time for the air pressure to build up, operation of the gauges & governor kick in	✓			
21	Test	Operation of automatic transmission kick down, lock-up & neutral inhibitor switch			✓	
22	Test	Operation of gears, ease of selection of High / Low range & the gear splitter	✓			
23	Inspect	Service brake operation / adjustment	✓			
24	Check	Park brake operation (test on a 10° slope)	✓			
25	Check	For brake drag	✓			
26	Check	Operation of engine or exhaust brake	✓			
27	Check	The general driving characteristics of the vehicle	✓			
28	Check	Operation of the PTO, raise tipper body & check for leaks	✓			
29	Check	Operation of water sprayers, dribble bar & cannon			✓	
30	Check	Operation of air conditioner & heater	✓			
31	Check	Using a scan tool check for fault codes	✓			
32	Conduct	DPF Status & conduct a manual burn if required	✓			

80591

FRAME & BODY

Park on level ground, Isolate generator, Fit body prop, Relieve all pressures, Start from front right hand side and work clockwise around generator checking each item below

No.	ACTION	CHECKS	S	US	N/A	Initial
33	Check	Cab mounts, operation of cab tilt & locking mechanism	✓			
34	Check	Bonnet mounts, operation of bonnet tilt struts / locking mechanism	✓			
35	Check	For external body damage / security of bonnet to main body, check hinges, tanks, turntable & tipper body	✓			
36	Check	Steps & handrails for integrity & security	✓			
37	Check	Mudguards, mudflaps for condition & security	✓			
38	Check	For metal fatigue in chassis rails, cross members & tow hitch frame	✓			
39	Check	Hoist mounting bolts, pivot pins / hinges & hydraulic hoses			✓	
40	Check	Check battery box, mountings, terminals, cables & electrolyte levels	✓			
41	Inspect	All air lines, valves / fittings for air leaks & chaffing	✓			
42	Inspect	All grease lines for damage / security & grease penetration	✓			
43	Inspect	Ringfeeder / Turn Table			✓	
44	Check	Hazard warning / component location Decals	✓			
45	Inspect	Electrical harnesses / junction boxes for chaffing & dust sealing	✓			

UNDER BONNET / ENGINE BAY

No.	ACTION	CHECKS	S	US	N/A	Initial
46	Inspect	Exhaust manifolds / covers, bolts, turbo, piping for any leaks & security	✓			
47	Inspect / Tighten	Air induction boxes / hoses / piping / fittings for damage & presence of dusting	✓			
48	Inspect	Fuel pump / pipes / hoses / clamps, for leakage & movement	✓			
49	Inspect	Engine for oil leaks & damaged hoses		✓		
50	Check	Engine mounts for wear & security	✓			
51	Check	Water pump "tell tail" for leakage or blockage	✓			
52	Check	Alternator pulley, mountings, bearings & idler pulleys	✓			
53	Check	Air Conditioner compressor pulley, mountings, hose connections for leakage & movement	✓			
54	Inspect	Fan, alternator, air conditioner belts for condition & tension	✓			
55	Inspect	Fan blades for cracks, wear, damage & security	✓			
56	Check	Radiator mountings, coolant leakage & air flow through radiator	✓			
57	Inspect	Coolant / heater hoses / clamps for condition, leaks & tightness	✓			
58	Inspect	Power steering box for oil leaks, excessive movement, security of steering column & drag link	✓			
59	Inspect	Steering column universal joints, slip joint & mountings	✓			
60	Inspect	Electrical harnesses / connections for damage & security	✓			
61	Inspect	Engine bay is free of combustible materials i.e. leaves, sticks & rags for prevention of fire hazards	✓			

POWER TRAIN & AXLES

Jack up all axles to check wheel bearings, steering linkages & kingpins

No.	ACTION	CHECKS	S	US	N/A	Initial
62	Check	Front wheel bearings adjust or replace if necessary	✓			
63	Check	For movement in all kingpins & steering ball joints & linkages, while jacked up grease all points on all kingpins	✓			
64	Inspect	All shackle pins, bushes, shock absorbers, U Bolts, wear plates for wear, movement & tension	✓			
65	Inspect	Transmission, PTO for oil leaks, mounts & lubrication of pivot points	✓			
66	Inspect	Universal joints, slip joints, centre bearings for movement & rubber deterioration	✓			
67	Inspect	Differentials for oil leaks, excessive movement in input & output shafts	✓			
68	Check	Torque rod arms, pins, bushes, mounting bolts for & tension	✓			
69	Check	Rear wheel bearings adjust or replace if necessary	✓			

70	Inspect	All brake linings, pads for thickness, adjustment & adjust if required	✓			
71	Inspect	Brake linings or pads, through inspection hole, check adjustment	✓			
72	Check	Operation / wear of S cams & brake boosters	✓			
73	Check	Airbags for leaks or damage to cones	✓	✓		
74	Inspect	Wheel rims for damage, cracks missing or loose wheel nuts	✓			
75	Inspect	Tyres for damage, tread depth & pressure				
	Depth / Damage	P2: 10 mm	P4: 10 mm	P8: 10 mm	P12: 10 mm	P16: mm
				P7: mm	P11: mm	P15: mm
				P6: mm	P10: mm	P14: mm
76	Pressure	P1: mm	P3: mm	P5: mm	P9: mm	P13: mm
		P2: 100 psi	P4: psi	P8: 100 psi	P12: psi	P16: psi
				P7: 100 psi	P11: psi	P15: psi
				P6: 100 psi	P10: psi	P14: psi
77	Check	P1: 100 psi	P3: psi	P5: 100 psi	P9: psi	P13: psi
		DPF Soot levels and conduct a manual regeneration burn if required				

AFTER EVERY SERVICE

78	Check	All fluid levels are correct & the truck is running / operating as per OEM specifications, disconnect trailer				
----	-------	---	--	--	--	--

DEFECTS / COMMENTS & PARTS TO BE ORDERED

Hyd Power PAK mounts Broken, Fixed
 engine oil Leak, Top end Reseal.
 Tyres Due next 10000km
 Mirror covers missing
 coolant Leak, clamp Replaced - Fixed
 RHS headlight out, Fixed
 RHS Rear Hyd cylinder needs Replacing.
 Front Beam on Tray Rusting out

SERVICE COMPLETION DECLARATION

On signing / initialling this service report you deem that this service has been thoroughly completed. The equipment is in a safe and operational condition at the time of inspection / service.


 Mechanic / Supervisor Signature

30/1/24
 Inspection Completion Date


 Name of Mechanic / Supervisor

10

10

10

PRIME MOVER / TRUCK

SERVICING SCHEDULE

Date : 15.4.25
LR No: LR203
Rego: ZGL790

VIN: _____
KMs/Hours: 303080
Service Type: 10000KM

INSPECTION SCHEDULE

The following inspections require having the engine running or machine moving. Use of an operator and spotter may be required.

IN CAB

No.	ACTION	CHECKS	S	US	N/A	Initial
1	Inspect	Door latches & seals	x			
2	Check	Operation of window winders & door handles	x			
3	Inspect	Seat belt for damage, fraying & anchor bolt security	x			
4	Check	Seat for correct operation, excessive movement, cover & cushion condition	x			
5	Check	Operation of ignition & security of key, instrument cluster, warning alarms, warning indicator lights & horn	x			
6	Check	Windscreen & other glass in the cab for chips or cracks	x			
7	Check	Wipers & Washers	x			
8	Check	Park lights, headlights, spot lights, indicators, brake lights, internal cab light, reverse camera & rotating beacon	x			
9	Check	Operation of AM / FM radio & UHF radio	x			
10	Check	Rear view mirrors & brackets for condition & operation	x			
11	Check	Operation of steering wheel (lock to lock), security of the column adjustor	x			
12	Check	Clutch pedal free play operation & adjustment	x			
13	Check	Pedal rubbers are on & in good condition	x			
14	Check	For breakdown triangles, condition & complete set			x	
15	Check	For a wheel brace & jack	x			
16	Check	For a first aid kit, in date & complete	x			
17	Check	Operation of E-Stops			x	
18	Check	Fire extinguisher for safety ties, gauge in green, rotate a couple of times & tap bottom to release sediment	x			

RUNNING CHECKS

No.	ACTION	CHECKS	S	US	N/A	Initial
19	Check	For excessive exhaust smoke or abnormal noises / vibrations	x			
20	Check	For excessive time for the air pressure to build up, operation of the gauges & governor kick in	x			
21	Test	Operation of automatic transmission kick down, lock-up & neutral inhibitor switch			x	
22	Test	Operation of gears, ease of selection of High / Low range & the gear splitter	x			
23	Inspect	Service brake operation / adjustment	x			
24	Check	Park brake operation (test on a 10° slope)	x			
25	Check	For brake drag	x			
26	Check	Operation of engine or exhaust brake	x			
27	Check	The general driving characteristics of the vehicle	x			
28	Check	Operation of the PTO, raise tipper body & check for leaks			x	
29	Check	Operation of water sprayers, dribble bar & cannon			x	
30	Check	Operation of air conditioner & heater	x			
31	Check	Using a scan tool check for fault codes	x			
32	Conduct	DPF Status & conduct a manual burn if required	x			

FRAME & BODY						
<i>Park on level ground, Isolate generator, Fit body prop, Relieve all pressures, Start from front right hand side and work clockwise around generator checking each item below</i>						
No.	ACTION	CHECKS	S	US	N/A	Initial
33	Check	Cab mounts, operation of cab tilt & locking mechanism	x			
34	Check	Bonnet mounts, operation of bonnet tilt struts / locking mechanism	x			
35	Check	For external body damage / security of bonnet to main body, check hinges, tanks, turntable & tipper body	x			
36	Check	Steps & handrails for integrity & security	x			
37	Check	Mudguards, mudflaps for condition & security	x			
38	Check	For metal fatigue in chassis rails, cross members & tow hitch frame	x			
39	Check	Hoist mounting bolts, pivot pins / hinges & hydraulic hoses	x			
40	Check	Check battery box, mountings, terminals, cables & electrolyte levels	x			
41	Inspect	All air lines, valves / fittings for air leaks & chaffing	x			
42	Inspect	All grease lines for damage / security & grease penetration	x			
43	Inspect	Ringfeeder / Turn Table			x	
44	Check	Hazard warning / component location Decals	x			
45	Inspect	Electrical harnesses / junction boxes for chaffing & dust sealing	x			
UNDER BONNET / ENGINE BAY						
No.	ACTION	CHECKS	S	US	N/A	Initial
46	Inspect	Exhaust manifolds / covers, bolts, turbo, piping for any leaks & security	x			
47	Inspect / Tighten	Air induction boxes / hoses / piping / fittings for damage & presence of dusting	x			
48	Inspect	Fuel pump / pipes / hoses / clamps, for leakage & movement	x			
49	Inspect	Engine for oil leaks & damaged hoses	x			
50	Check	Engine mounts for wear & security	x			
51	Check	Water pump "tell tail" for leakage or blockage	x			
52	Check	Alternator pulley, mountings, bearings & idler pulleys	x			
53	Check	Air Conditioner compressor pulley, mountings, hose connections for leakage & movement	x			
54	Inspect	Fan, alternator, air conditioner belts for condition & tension	x			
55	Inspect	Fan blades for cracks, wear, damage & security	x			
56	Check	Radiator mountings, coolant leakage & air flow through radiator	x			
57	Inspect	Coolant / heater hoses / clamps for condition, leaks & tightness	x			
58	Inspect	Power steering box for oil leaks, excessive movement, security of steering column & drag link	x			
59	Inspect	Steering column universal joints, slip joint & mountings	x			
60	Inspect	Electrical harnesses / connections for damage & security	x			
61	Inspect	Engine bay is free of combustible materials i.e. leaves, sticks & rags for prevention of fire hazards	x			
POWER TRAIN & AXLES						
<i>Jack up all axles to check wheel bearings, steering linkages & kingpins</i>						
No.	ACTION	CHECKS	S	US	N/A	Initial
62	Check	Front wheel bearings adjust or replace if necessary	x			
63	Check	For movement in all kingpins & steering ball joints & linkages, while jacked up grease all points on all kingpins	x			
64	Inspect	All shackle pins, bushes, shock absorbers, U Bolts, wear plates for wear, movement & tension	x			
65	Inspect	Transmission, PTO for oil leaks, mounts & lubrication of pivot points	x			
66	Inspect	Universal joints, slip joints, centre bearings for movement & rubber deterioration	x			
67	Inspect	Differentials for oil leaks, excessive movement in input & output shafts	x			
68	Check	Torque rod arms, pins, bushes, mounting bolts for & tension	x			
69	Check	Rear wheel bearings adjust or replace if necessary	x			

70	Inspect	All brake linings, pads for thickness, adjustment & adjust if required										x				
71	Inspect	Brake linings or pads, through inspection hole, check adjustment										x				
72	Check	Operation / wear of S cams & brake boosters										x				
73	Check	Airbags for leaks or damage to cones												x		
74	Inspect	Wheel rims for damage, cracks missing or loose wheel nuts										x				
75	Inspect	Tyres for damage, tread depth & pressure														
	Depth / Damage	P2:		mm	P4:		mm	P8:		mm	P12:		mm	P16:		mm
		All 15MM					P7:		mm	P11:		mm	P15:		mm	
		P1:		mm	P3:		mm	P5:		mm	P9:		mm	P13:		mm
76	Pressure	P2:		psi	P4:		psi	P8:		psi	P12:		psi	P16:		psi
		All 100PSI					P7:		psi	P11:		psi	P15:		psi	
		P1:		psi	P3:		psi	P5:		psi	P9:		psi	P13:		psi
	77	Check	DPF Soot levels and conduct a manual regeneration burn if required										x			
AFTER EVERY SERVICE																
78	Check	Allfluid levels are correct & the truck is running / operating as per OEM specifications, disconnect trailer										x				
DEFECTS / COMENTS & PARTS TO BE ORDERED																
	<i>windscreen cracked (replaced 15.4.25)</i>															
	<i>leaking hydraulic cylinders on ramp (ordered 15.4.25 pakenham bearings)</i>															
	<i>jerry can holder cracked welds</i>															
	<i>orragne reflectors missing (replaced 4)</i>															
	<i>head lights need polishing.</i>															
	<i>beacons not working (fixed damage earth to relays)</i>															
	<i>enging oil leaks (major works required to fix) (top end re seal required)</i>															
	<i>signs of worn air compressor (oil bypass through air dryer filter)</i>															
SERVICE COMPLETION DECLARATION																
On signing / initialling this service report you deem that this service has been thoroughly completed. The equipment is in a safe and operational condition at the time of inspection / service.																
<i>jap</i> Mechanic / Supervisor Signature jake van puyenbroek Name of Mechanic / Supervisor 15.4.25 Inspection Completion Date																

Job card

Date : _____
LR No: _____
Rego: _____

VIN: _____
KMs/Hours: _____
Service Type: _____

INSPECTION SCHEDULE

The following inspections require having the engine running or machine moving. Use of an operator and spotter may be required.

No.	ACTION	Works Completed	S	US	N/A	Initial
1						
2						
3						
4						
5						
6						
7						
8						
9						
10						
11						
12						
13						
14						
15						
16						
17						
18						
19						
20						
21						
22						
23						
24						
25						
26						
27						
28						
29						
30						
31						
32						

SERVICE COMPLETION DECLARATION

On signing / initialling this service report you deem that this service has been thoroughly completed. The equipment is in a safe and operational condition at the time of inspection / service.

Mechanic / Supervisor Signature

Inspection Completion Date

Name of Mechanic / Supervisor