

Y09-2

L.M.B. TRANSPORT INC

TRAILER SERVICE SHEET
STAPLE TO WORK ORDER

DATE AUG 14/25

UNIT # QD 4022

NAME OF MECHANIC RIK / PAUL / STEVE

SIGNATURE [Signature]

- ☒ 1) Check all lights and reflectors and/or reflective tape including rear bumper
- ☒ 2) Check for major body damage
- ☒ 3) DOCUMENT HOLDER- properly secure with proper cover, registration and annual safety up to date and signed.
- ☒ 4) Tire wear and pressure (100-105 PSI)
- ☒ 5) BOGIE – Complete Grease and inspection of bogie. Ensure all Grease fittings take grease.
- ☒ 6) LANDING GEAR – Grease and inspect landing gear including cross bar ~~on all QB and TR series~~
~~Aluminum~~
- ☒ 7) WHEEL HUBS – Remove plug for physical inspection (oil levels – adjust if needed; clean and free of contamination)
- ☒ 8) WHEELS – Clean away and rust/ ensure no cracks or breaks (including inner wheels). Ensure wheels are tight. Check re-torque board to ensure it doesn't need to be re-torqued.
- ☒ 9) Check and adjust brakes if necessary
- ☒ 10) Inspect jam nuts at brake clevis to ensure proper location
- ☒ 11) Check U-bolts
- ☒ 12) Check that all hoses are secured and no audible air leaks, check service side of brake system.
- ☒ 13) ~~Pry torque arms with bar to ensure they are secure~~
- ☒ 14) DOORS- Check rear doors and door hold backs (in place and operational)
- ☒ 15) AIR BOX DOORS- Operational. Rubber bung to hold the door shut.
- ☒ 16) Aluminum Corners installed on quads and TR Series trideims.
- ☒ 17) Rubber Dock Bumpers replace if needed
- ☒ 18) Change Service date on front of trailer

L.M.B. TRANSPORT INC

TRAILER SERVICE SHEET
STAPLE TO WORK ORDER

DATE March

UNIT # QD 40 22

NAME OF MECHANIC _____

SIGNATURE _____

- ☒ 1) Check all lights and reflectors and/or reflective tape including rear bumper
- ☒ 2) Check for major body damage
- ☒ 3) DOCUMENT HOLDER- properly secure with proper cover, registration and annual safety up to date and signed.
- ☒ 4) Tire wear and pressure (100-105 PSI)
- ☒ 5) BOGIE – Complete Grease and inspection of bogie. Ensure all Grease fittings take grease.
- ☒ 6) LANDING GEAR – Grease and inspect landing gear including cross bar on all QD and TR series Manac's
- ☒ 7) WHEEL HUBS – Remove plug for physical inspection (oil levels – adjust if needed; clean and free of contamination)
- ☒ 8) WHEELS – Clean away and rust/ ensure no cracks or breaks (including inner wheels). Ensure wheels are tight. Check re-torque board to ensure it doesn't need to be re-torqued.
- ☒ 9) Check and adjust brakes if necessary
- ☒ 10) Inspect jam nuts at brake clevis to ensure proper location
- ☒ 11) Check U-bolts
- ☒ 12) Check that all hoses are secured and no audible air leaks, check service side of brake system.
- ☒ ~~13) Pry torque arms with bar to ensure they are secure~~
- ☒ 14) DOORS- Check rear doors and door hold backs (in place and operational)
- ☒ 15) AIR BOX DOORS- Operational. Rubber bung to hold the door shut.
- ☒ 16) Aluminum Corners installed on quads and TR Series tridems.
- ☒ 17) Rubber Dock Bumpers replace if needed
- ☒ 18) Change Service date on front of trailer

